



UL-10 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21000477	MAIN BODY	702	27020050	PINION GEAR
200	22000630	SIDE PLATE	710	27100002	TRANSMISSION PLATE
300	23000993	ROTOR	711	27110008	TRANSMISSION PLATE PIN
301	23010153	BAIL ARM	718	27180087	MAIN SHAFT
302	23020004	BAIL ARM SPRING	719	27190007	CLICK GEAR
304	23040198	BAIL ARM COVER	722	27220016	CLICK GEAR WASHER
305	23050008	KICK LEVER	800	28000020	ANTI-REVERSE/ANTI-RE LEVER
306	23060112	BAIL HOLDER COVER	801	28010006	ANTI-RE LEVER SPRING
307	23070030	BAIL HOLDER	804	28040009	ANTI-RE LEVER PIN
313	23130104	BAIL WIRE ASSY.	805	28050008	ANTI-RE PAWL SPRING
315	23150003	LINE ROLLER	806	28060002	ANTI-RE PAWL BUSHING
317	23170002	LINE ROLLERWASHER	808	28080004	RATCHET
318	23180005	ROTOR NUT	809	28090005	SILENT SPRING
400	24001945	SPOOL ASSY.	0910049	0910049	BALL BEARING
400-1	24001904	SPOOL ASSY.	0910039	0910039	BALL BEARING
405	24050004	DARG WASHER RETAINER	0920376	0920376	WASHER
500	25000124	HANDLE ASSY.	0920237	0920237	WASHER
513	25130125	HANDLE CAP	0930438	0930438	SCREW
515	25150002	HANDLE SCREW CAP WASHER	0930058	0930058	SCREW
600	26000145	DRAG KNOB ASSY.	09301262	09301262	SCREW
610	26100036	DRAG WASHER	0930219	0930219	SCREW
611	26110013	EARED WASHER	0930307	0930307	SCREW
612	26120010	KEY WASHER	0930830	0930830	SCREW
700	27000015	DRIVE GEAR			