


PENN[®] INTERNATIONAL[®] 975LD (1151059) PARTS LIST

Congratulations on the purchase of your new Penn International[®] Baitcaster! For general features, operating instructions, casting control, information, maintenance, lubrication and servicing, please refer to the main International[®] manual (featuring the 965). Keep this sheet for reference to 975LD part numbers and specifications. Good fishing!

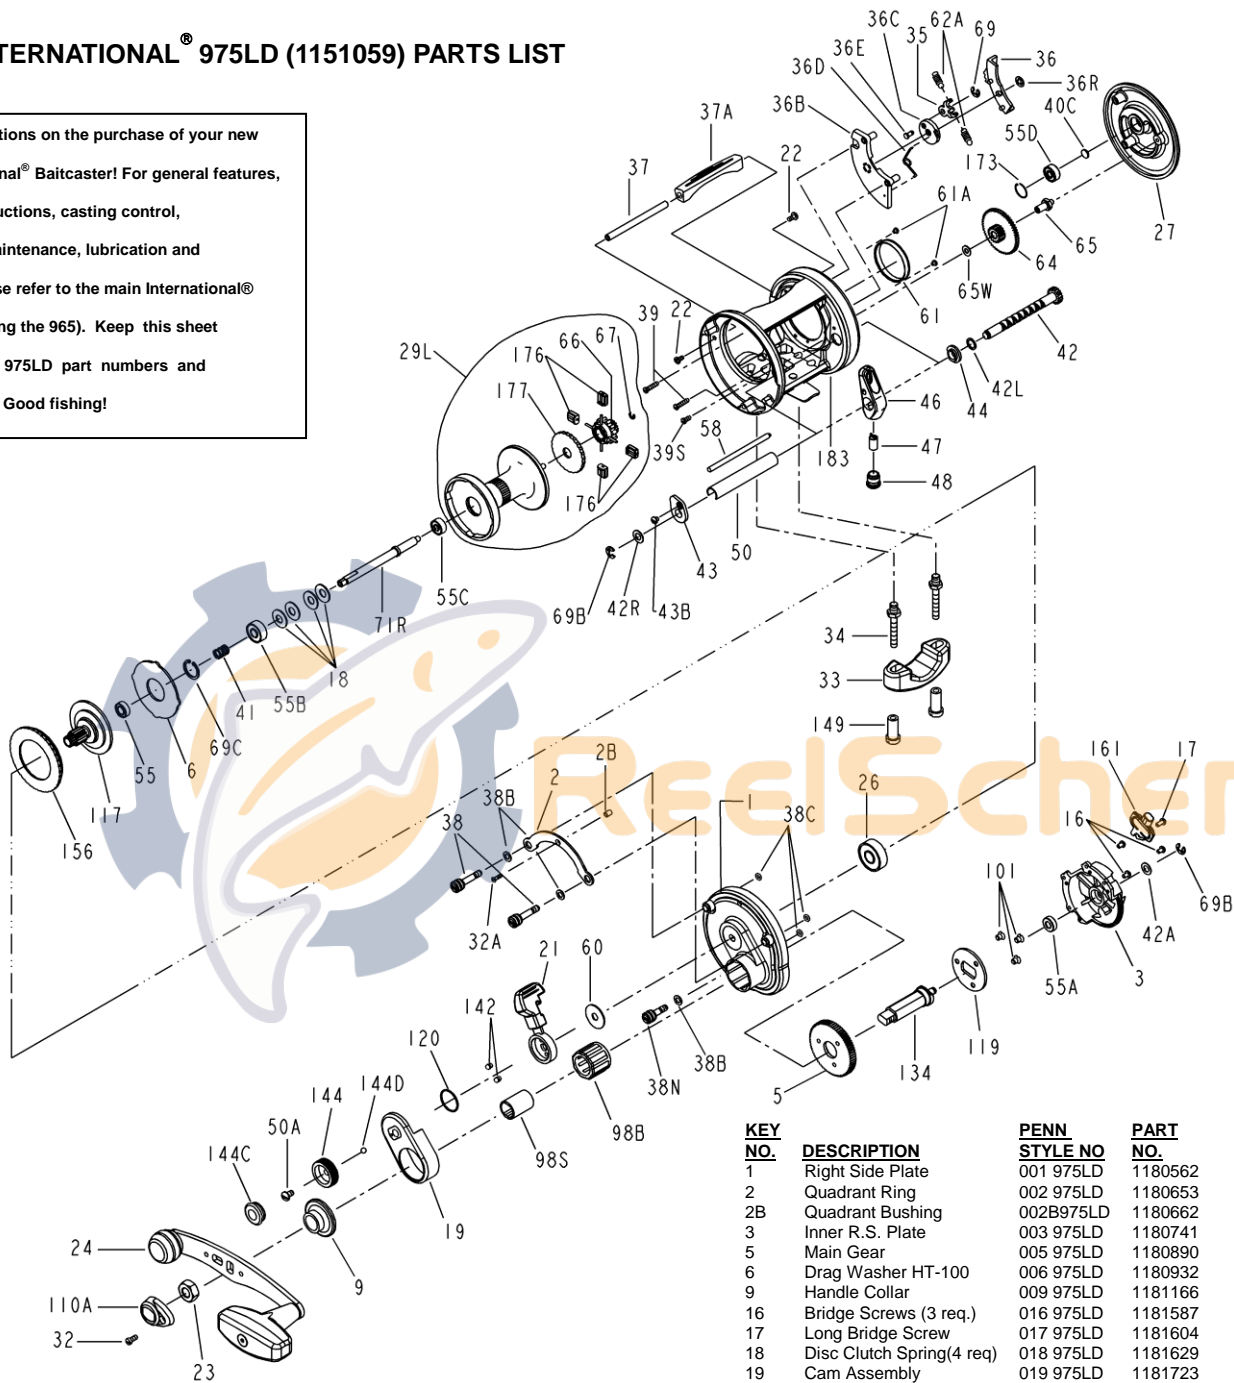

LINE CAPACITY	GEAR RATIO	WEIGHT
300 YDS / 15 LBS	4.4-1	17 OZ
275 METERS / 0.40 MM		480 GRAMS

KEY NO.	DESCRIPTION	PENN. STYLE NO.	PART NO.
34	Rod Clamp Screw (2 req.)	034 975	1182839
35	Click Tongue	035 965	1182950
36	Click Button	036 975	1183023
36B	Click Housing	036B975	1183035
36C	Click Wheel	036C965	1183044
36D	Click Wheel Spring	036D965	1183045
36E	Click Tongue Pin	036E965	1183046
36R	Retaining Ring	036R965	1183050
37	Thumb Bar Post	037 975	1183094
37A	Thumb Bar	037A975	1183117
38	Take-Apart Screw (2 req.)	038 975LD	1183163
38B	Side Plate Washer (3 req.)	038BN965	1183169
38C	Screw 'O' Ring (3 req.)	038CN965	1183170
38N	Take-Apart Screw	038N965	1183172
39	L.S. Plate Screw (2 req.)	039 965	1183242
39S	L.S. Plate Short Screw	039S965	1183261
40C	Metal Thrust Washer	040C310	1183308
41	Bearing Spring	041 975LD	1183341
42	Worm Shaft	042 975	1183360
42A	Metal Washer	042R965	1183367
42L	L.S. Worm Shaft Washer	042L965	1183364
42R	R.S. Worm Shaft Washer	042R965	1183367
43	R.S. Worm Shaft Bushing	043 965	1183415
43B	Worm Bushing Screw	043B965	1183429
44	L.S. Worm Shaft Bushing	044 975	1183467
46	Line Guide	046 975	1183583
47	Pawl	047 975	1183677
48	Pawl Cover Screw	048 965	1183719
50	Worm Shield	050 975	1183776
50A	Pre-Set Knob Screw	050 716	1183767
55	Ball Bearing	055 965	1183897
55A	Gear Stud Bushing	055A965	1183900
55B	Spool Bearing	055 116	1183882
55C	Spool Bearing	055 113H	1183880
55D	Left Side Bearing	055 113H	1183880
58	Line Guide Post	058 975	1183969
60	Eccentric Washer	060 975LD	1184009
61	Brake Drum	061 965	1184019
61A	Brake Drum Screw (2 req.)	043B965	1183429
62A	Click Spring (2 req.)	062A965	1184035
64	Idle Gear	064 975	1184072
65	Idle Gear Pin	065 965	1184086
65W	Idle Gear Washer	065W965	1184087
66	Spool Gear Click Ratchet	066M965	1184099
67	Lock Ring	067 016S	1184103
69	Retaining Ring	069B050	1184125
69B	Retaining Ring (2 req.)	069B600	1184129
69C	Spool Retaining Ring	069 975LD	1184122
71R	Spool Spindle	071R975LD	1184173
98B	Clutch Bearing	098B525	1184377
98S	Bearing Clutch Sleeve	098S525MAG2	1239047
101	Retaining Plate Screw(3 req.)	101 050S	1184404
110A	Handle Nut Cap	110A555	1184442
117	Drive Plate Assembly	117 975LD	1184489
119	Retaining Plate	119 030S	1184516
120	Eccentric O-Ring	026R965	1182147
134	Gear Stud	134 975LD	1184627
142	Cam Follower (2 req.)	142 975LD	1184667
144	Preset Knob	144 975LD	1184690
144C	Preset Knob Cap	144C975LD	1184695
144D	Preset Knob Click Ball	144D975LD	1184697
149	Rod Clamp Nut (2 req.)	149 045	1184702
156	Drag Cover	156 975LD	1184750
161	Strike Button	161 975LD	1184792
173	L.S. Bearing Retainer	173 965	1184847
176	Anti-Backlash Brakes(4 req.)	176 975LD	1184854
177	Brake Selection Knob	177 965	1184856
183	Frame Assembly	183N975LD	1184943

KEY NO.	DESCRIPTION	PENN. STYLE NO.	PART NO.
1	Right Side Plate	001 975LD	1180562
2	Quadrant Ring	002 975LD	1180653
2B	Quadrant Bushing	002B975LD	1180662
3	Inner R.S. Plate	003 975LD	1180741
5	Main Gear	005 975LD	1180890
6	Drag Washer HT-100	006 975LD	1180932
9	Handle Collar	009 975LD	1181166
16	Bridge Screws (3 req.)	016 975LD	1181587
17	Long Bridge Screw	017 975LD	1181604
18	Disc Clutch Spring(4 req.)	018 975LD	1181629
19	Cam Assembly	019 975LD	1181723
21	Eccentric Lever	021 975LD	1181888
22	Post Screw (2 req.)	050 716	1183767
23	Handle Nut	023 555	1181950
24	Handle Assembly	024 555	1182048
26	R.S. Plate Bearing	026N025	1182145
27	Left Side Plate	027 975	1182294
29L	Spool Assembly	029L975LD	1182565
32	Handle Cap Screw	032 015	1182708
32A	Quadrant Screw	032 975LD	1182747
33	Rod Clamp	033 113	1182754