


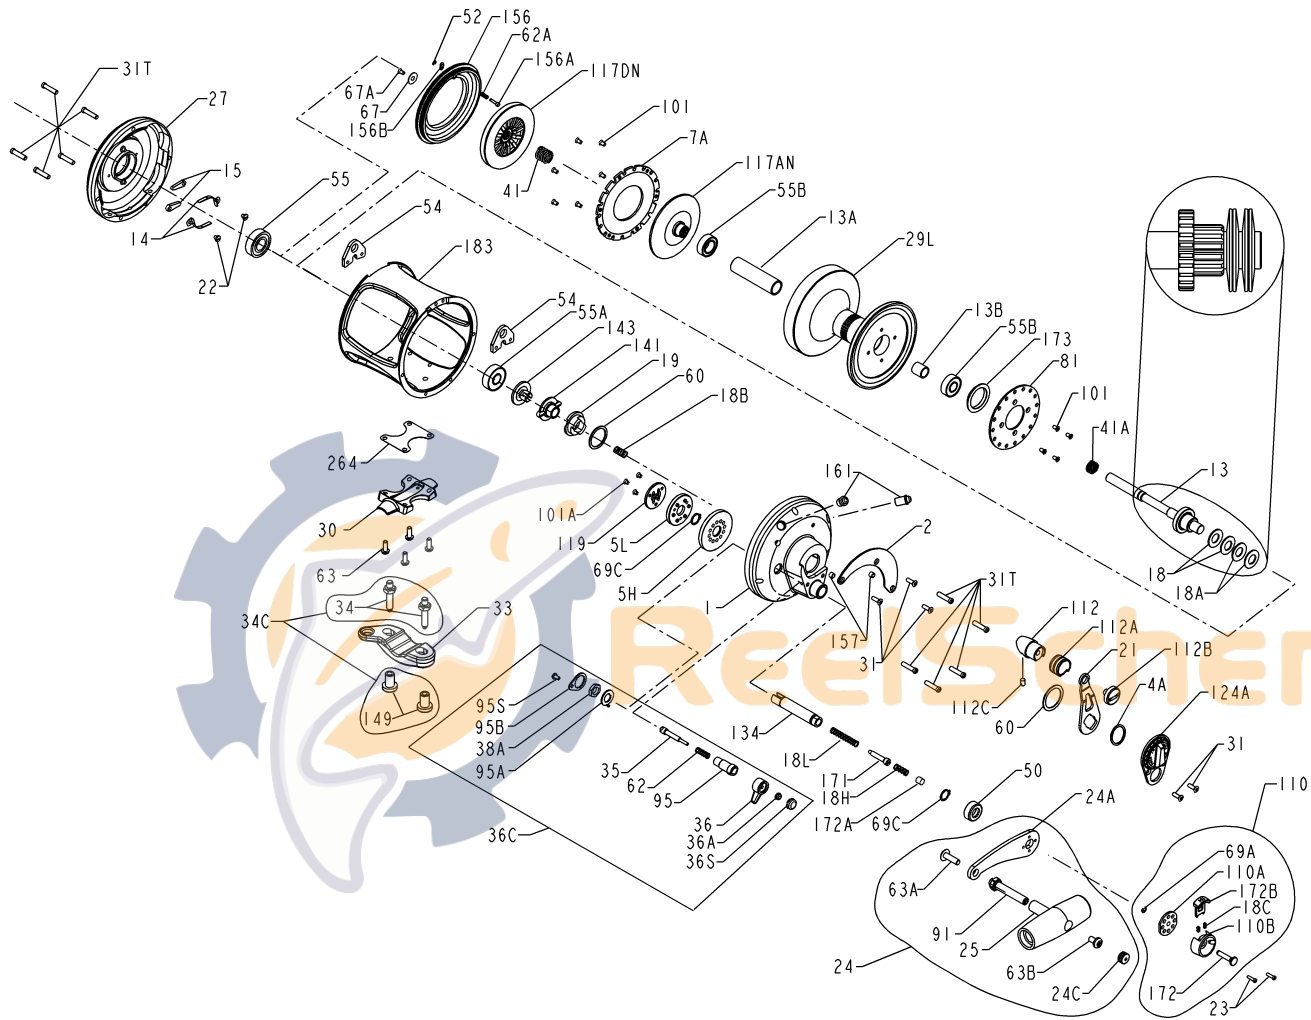

**PARTS LIST FOR MODEL 50VSW For Serial No's A060950 and BEFORE**



<b>KEY NO.</b>	<b>DESCRIPTION</b>	<b>PART NO.</b>
31	Short Screw (5 req.)	031T070
31T	Side Plate Screw (10 req.)	031T080
33	Rod Clamp	033 070
34	Clamp Screw (2 req.)	034 070
34C	Rod Clamp Screw w/Nut (2 req.)	034C070
35	Click Tongue	035 070VS
36	Click Button	036N050
36A	Click Button Nut	036 700
36C	Clicker Assembly	036C050VSW
36S	Click Button Cap	036S080ST
38A	Click Bushing Nut	038 710
41	Bearing Spring	041 050
41A	Drag Spring	041 070
50	Shield	050N030S
52	Retaining Ring	052 910
54	Harness Lug (2 req.)	054 050T
55	Ball Bearing	055 080
55A	Ball Bearing	055 050
55B	Ball Bearing (2 req.)	055 080ST
60	Thrust Washer (2 req.)	060 050
62	Click Spring	062 050
62A	Click Spring	062 545
63	Stand Screw (4 req.)	063 030T
63A	Screw	063A050
63B	Screw	063 050
67	Pinion Gear Washer	067 070
67A	Retaining Screw	067A070
69A	Retaining Ring	069B030S
69C	Retaining Ring (2 req.)	195 040
81	Ratchet	081 050
91	Handle Rivet	091N050
95	Click Tongue Bushing	095 070
95A	Click Bushing Washer	095A050
95B	Retaining Plate	095B070
95S	Retaining Plate Screw	046A704
101	Ratchet Screw (10 req.)	101 030
101A	Coupling Plate Screws (3 req.)	101 050S
110	Shifter Assembly	110 015KG
110A	Handle Locking Plate	110A015KG
110B	Shift Housing	110B015KG
112	Eccentric Lever Knob	112 070
112A	Knob Sleeve	112A070
112B	Eccentric Knob Screw	112B070
112C	Plug	112C070
117AN	Drive Plate w/ Drag Washer	117AN070
117DN	Drive Plate w/ Drag Washer	117DN070
119	Coupling Plate	119 015KG
124A	Bridge Cover Assembly	124L050VS
134	Gear Stud	134 050VS
141	Cam Follower	141 050VS
143	Preset Screw	143 050VS
149	Rod Clamp Nut (2 req.)	149 070
156	Drag Cover	156 050VS
156A	Lock Pin	156A030VS
156B	Lock Plate	156B030VS
157	Quadrant Spacing Bushing (2	157S012LT
161	Locating Pin Assembly (2 req.)	161C070
171	Shift Plunger	171 015KG
172	Shift Button (Low)	172 015KG
172A	Spring Spacer	172A050VS
172B	Shift Button (High)	172B015KG
173	Spool Bushing	173 050VS
183	Tube Frame	183 050VSW
264	Stand Gasket	264 30T

<b>KEY NO.</b>	<b>DESCRIPTION</b>	<b>PART NO.</b>
1	Right Side Plate Assembly	001 050VS
2	Quadrant Ring	002 050VS
4A	Teflon Thrust Washer	004 012LT
5H	Main Gear (High Speed)	005 050VS-HS
5L	Main Gear (Low Speed)	005 050VS-LS
7A	Metal Drag Washer	007A050VS
13	Pinion Gear	013 050VSW
13A	Spool Sleeve	013B050VSW
13B	Pinion Gear Sleeve	013B070
14	Dog Spring (2 req.)	014 050
15	Dog (2 req.)	015 050
18	Disc Clutch Spring (2 req.)	018 050TW
18A	Disc Clutch Springs (2req.)	018 050W

<b>KEY NO.</b>	<b>DESCRIPTION</b>	<b>PART NO.</b>
18B	Spring	018 349
18C	Shift Button Spring (2)	018C015KG
18H	Shift Spring (Heavy)	018H015KG
18L	Shift Spring (Light)	018L015KG
19	Eccentric Cam	019 050VS
21	Eccentric Lever	021 050VS
22	Dog Spring Screw (2) req.)	022 109
23	Screw, Handle (2 req.)	023 015KG
24	Handle Complete	024N030S
24A	Handle Blank	024N030S-1
24C	Handle Knob Cap	024C050
25	Knob Assembly	025 050
27	Left Side Plate-Assembly	027 050VS
29	Spool	029L050VSW
30	Stand	030 050T

<b>KEY NO.</b>	<b>DESCRIPTION</b>	<b>PART NO.</b>
24A	Handle Blank	024N030S-1
24C	Handle Knob Cap	024C050
25	Knob Assembly	025 050
27	Left Side Plate-Assembly	027 050VS
29	Spool	029L050VSW
30	Stand	030 050T