


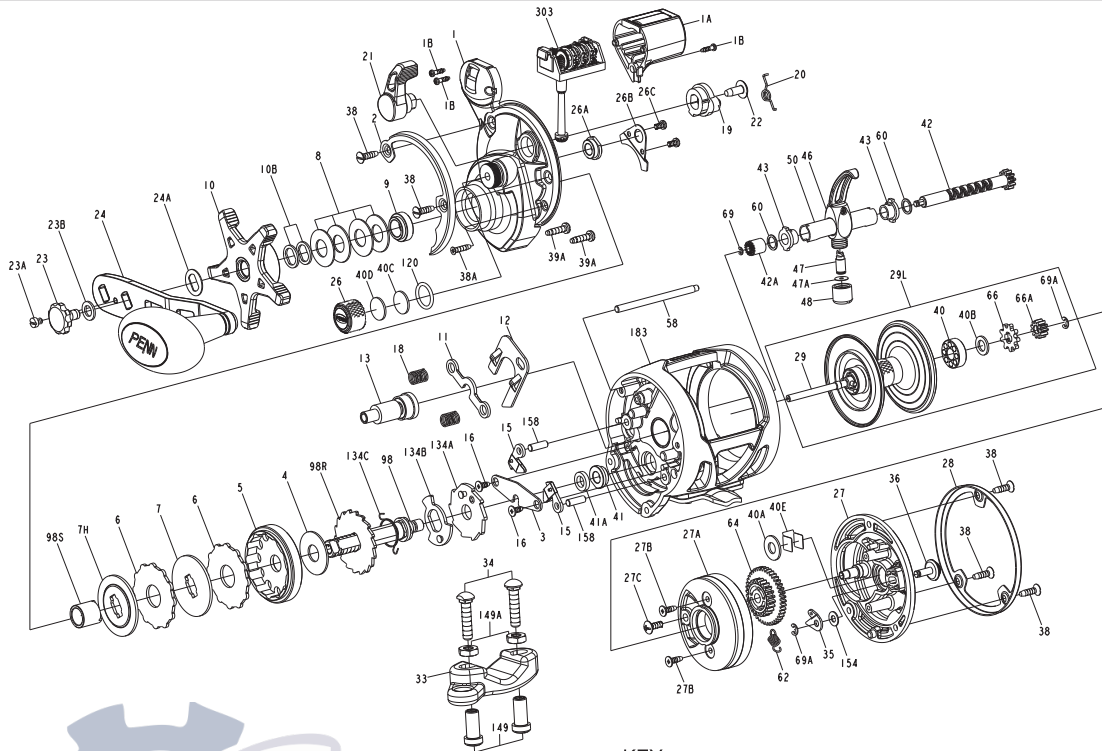

**PARTS LIST FOR RVL15LWLCLH and RVL20LWLCLH**  
 REEL ASM. Nos. 1403994(RVL15LWLCLH)&1403999(RVL20LWLCLH)



KEY NO.	PART NO.	PENN STYLE NO.	DESCRIPTION	KEY NO.	PART NO.	PENN STYLE NO.	DESCRIPTION
1	1405709	1-RVL15LWLCLH	Right Side Plate Assembly(15)	35	1383037	35-WAR15LW	Click Tongue
1	1405710	1-RVL20LWLCLH	Right Side Plate Assembly(20)	36	1383038	36-WAR15LW	Click Button
1A	1383100	1A-WAR15LWLCLH	Line Counter Cover	38	1383039	38-WAR15LW	Screw (5 req)
1B	1383084	1B-WAR15LWLC	Screw, L.C.Cover(3req)	38A	1383040	38A-WAR15LW	Screw
2	1406058	2-RVL15LWLCLH	Right Side Ring	39A	1383041	39A-WAR15LW	Screw(2req)
3	1384179	3-WAR15LW	Bridge	40	1383042	40-WAR15LW	Ball Bearing
4	1382976	4-WAR15LW	Drag Washer	40A	1383043	40A-WAR15LW	Washer
5	1383090	5-WAR15LWLH	Main Gear	40B	1383044	40B-WAR15LW	Felt Washer
6	1382978	6-WAR15LW	Tabbed Drag Washer(2 req)	40C	1383045	40C-WAR15LW	Washer, Acetal Thrust
7	1382999	7-WAR15LW	Keyed Metal Drag Washer	40D	1383046	40D-WAR15LW	Washer, Rubber Thrust
7H	1383000	7H-WAR15LW	Heavy Metal Drag Washer	40E	1383047	40E-WAR15LW	Thrust Washer (2req)
8	1383001	8-WAR15LW	Spring Washer (4 req)	41	1383048	41-WAR15LW	Bushing
9	1384180	9-WAR15LW	Spacing Sleeve	41A	1384181	41A-WAR15LW	Bushing
10	1405705	10-RVL15LWLH	Star Drag	42	1385461	42-WAR15LWLC	Worm Shaft Assembly(15)
10B	1383004	10B-WAR15LW	Star Click Washer (2 req)	42	1385462	42-WAR20LWLC	Worm Shaft Assembly(20)
11	1383092	11-WAR15LWLH	Eccentric Jack	42A	1384183	42A-WAR15LWLC	Gear, L.C. Drive
12	1383007	12-WAR15LW	Pinion Yoke	43	1383051	43-WAR15LW	Worm Shaft Bushing(2req)
13	1383275	13-WAR15LWLH	Pinion	46	1383052	46-WAR15LW	Line Guide Assembly
15	1383276	15-WAR15LWLH	Anti Reverse Dog(2 req)	47	1383053	47-WAR15LW	Line Guide Pawl
16	1383010	16-WAR15LW	Screw (2 req)	47A	1383054	47A-WAR15LW	Pawl Shim
18	1383011	18-WAR15LW	Pinion Yoke Spring (2 req)	48	1383055	48-WAR15LW	Line Guide Nut
19	1383012	19-WAR15LW	Eccentric	50	1383056	50-WAR15LW	Worm Shield(15)
20	1383013	20-WAR15LW	Eccentric Spring	50	1383057	50-WAR20LW	Worm Shield(20)
21	1405706	21-RVL15LW	Eccentric Lever	58	1383058	58-WAR15LW	Line Guide Post(15)
22	1405707	22-RVL15LW	Eccentric Screw	58	1383059	58-WAR20LW	Line Guide Post(20)
23	1383016	23-WAR15LW	Handle Assembly Screw	60	1383060	60-WAR15LW	Worm Shaft Washer(2req)
23A	1383017	23A-WAR15LW	Handle Lock Screw	62	1383061	62-WAR15LW	Spring
23B	1383018	23B-WAR15LW	Handle Screw Washer	64	1383062	64-WAR15LW	Idler Gear
24	1405687	24-RVL15LW	Handle Assembly	66	1383063	66-WAR15LW	Click Ratchet
24A	1383020	24A-WAR15LW	Handle Thrust Washer	66A	1383064	66A-WAR15LW	Spool Gear
26	1405688	26-RVL15LW	Spool Tension Control Cap	69	1383065	69-WAR15LW	Retainer Ring
26A	1383022	26A-WAR15LW	Bushing	69A	1383066	69A-WAR15LW	Retainer Ring (2 req)
26B	1383023	26B-WAR15LW	Clutch Retainer	98	1383094	98-WAR15LWLH	Main Gear Shaft
26C	1383024	26C-WAR15LW	Screw(2req)	98R	1383069	98R-WAR15LW	Anti Reverse Ratchet
27	1405711	27-RVL15LWLCLH	Left Side Plate(15)	98S	1383070	98S-WAR15LW	Clutch Sleeve
27	1405712	27-RVL20LWLCLH	Left Side Plate(20)	120	1383071	120-WAR15LW	O-Ring
27A	1383027	27A-WAR15LW	Bearing Housing	134A	1383095	134A-WAR15LWLH	Clutch Recover Plate
27B	1383028	27B-WAR15LW	Screw(2req)	134B	1383096	134B-WAR15LWLH	Clutch Recover Support Plate
27C	1383029	27C-WAR15LW	Screw	134C	1383097	134C-WAR15LWLH	Clutch Recover Spring
28	1405691	28-RVL15LW	Left Side Ring	149	1184702	149-045	Rod Clamp Nut (2 req)
29	1405692	29-RVL15LW	Spool (15)	149A	1184706	149-200	Hex Nut (2 req)
29	1405693	29-RVL20LW	Spool (20)	154	1383077	154-WAR15LW	Click Button Washer
29L	1405694	29L-RVL15LW	Spool Assembly(15)	158	1383078	158-WAR15LW	Dog Pin(2req)
29L	1405695	29L-RVL20LW	Spool Assembly(20)	183	1383279	183-WAR15LWLH	Frame Assembly(15)
33	1182754	33-113	Rod Clamp	183	1383280	183-WAR20LWLH	Frame Assembly(20)
34	1182788	34-045	Screw (2 req)	303	1383283	303-WAR15LWLCLH	Counter Wheel Assembly