


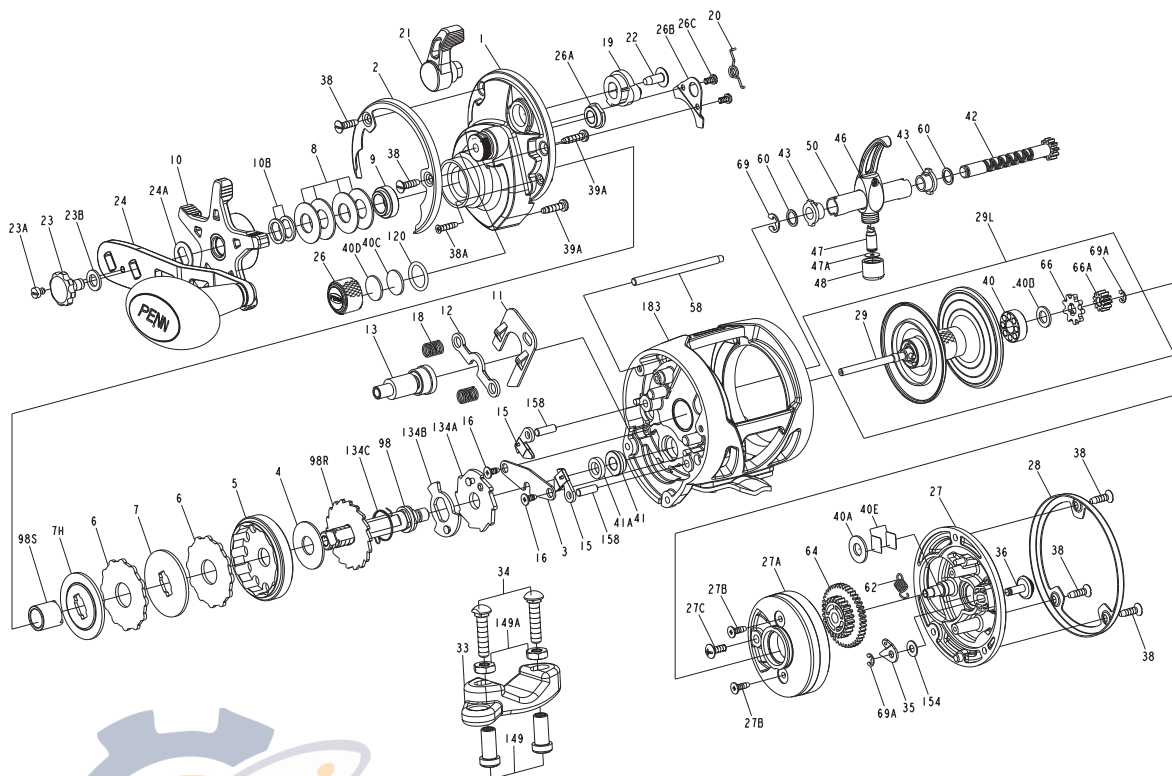

**PARTS LIST FOR RVL15LWLH and RVL20LWLH**  
 REEL ASM. Nos. 1403992(RVL15LWLH)&1403997(RVL20LWLH)



**KEY NO.**

KEY NO.	PART NO.	PENN STYLE NO.	DESCRIPTION
1	1405703	1-RVL15LWLH	Right Side Plate Assembly(15)
1	1405704	1-RVL20LWLH	Right Side Plate Assembly(20)
2	1405683	2-RVL15LW	Right Side Ring
3	1384179	3-WAR15LW	Bridge
4	1382976	4-WAR15LW	Drag Washer
5	1383090	5-WAR15LWLH	Main Gear
6	1382978	6-WAR15LW	Tabbed Drag Washer(2 req)
7	1382999	7-WAR15LW	Keyed Metal Drag Washer
7H	1383000	7H-WAR15LW	Heavy Metal Drag Washer
8	1383001	8-WAR15LW	Spring Washer (4 req)
9	1384180	9-WAR15LW	Spacing Sleeve
10	1405705	10-RVL15LWLH	Star Drag
10B	1383004	10B-WAR15LW	Star Click Washer (2 req)
11	1383092	11-WAR15LWLH	Eccentric Jack
12	1383007	12-WAR15LW	Pinion Yoke
13	1383275	13-WAR15LWLH	Pinion
15	1383276	15-WAR15LWLH	Anti Reverse Dog(2 req)
16	1383010	16-WAR15LW	Screw (2 req)
18	1383011	18-WAR15LW	Pinion Yoke Spring (2 req)
19	1383093	19-WAR15LWLH	Eccentric
20	1383013	20-WAR15LW	Eccentric Spring
21	1405685	21-RVL15LW	Eccentric Lever
22	1405686	22-RVL15LW	Eccentric Screw
23	1383016	23-WAR15LW	Handle Assembly Screw
23A	1383017	23A-WAR15LW	Handle Lock Screw
23B	1383018	23B-WAR15LW	Handle Screw Washer
24	1405687	24-RVL15LW	Handle Assembly
24A	1383020	24A-WAR15LW	Handle Thrust Washer
26	1383021	26-WAR15LW	Spool Tension Control Cap
26A	1383022	26A-WAR15LW	Bushing
26B	1383023	26B-WAR15LW	Clutch Retainer
26C	1383024	26C-WAR15LW	Screw(2req)
27	1405706	27-RVL15LWLH	Left Side Plate(15)
27	1405707	27-RVL20LWLH	Left Side Plate(20)
27A	1383027	27A-WAR15LW	Bearing Housing
27B	1383028	27B-WAR15LW	Screw(2req)
27C	1383029	27C-WAR15LW	Screw
28	1405691	28-RVL15LW	Left Side Ring
29	1405692	29-RVL15LW	Spool (15)
29	1405693	29-RVL20LW	Spool (20)
29L	1405694	29L-RVL15LW	Spool Assembly(15)
29L	1405695	29L-RVL20LW	Spool Assembly(20)
33	1182754	33-113	Rod Clamp
34	1182788	34-045	Screw (2 req)

**KEY NO.**

KEY NO.	PART NO.	PENN STYLE NO.	DESCRIPTION
35	1383037	35-WAR15LW	Click Tongue
36	1383038	36-WAR15LW	Click Button
38	1383039	38-WAR15LW	Screw (5 req)
38A	1383040	38A-WAR15LW	Screw
39A	1383041	39A-WAR15LW	Screw(2req)
40	1383042	40-WAR15LW	Ball Bearing
40A	1383043	40A-WAR15LW	Washer
40B	1383044	40B-WAR15LW	Felt Washer
40C	1383045	40C-WAR15LW	Washer, Acetal Thrust
40D	1383046	40D-WAR15LW	Washer, Rubber Thrust
40E	1383047	40E-WAR15LW	Thrust Washer (2req)
41	1383048	41-WAR15LW	Bushing
41A	1384181	41A-WAR15LW	Bushing
42	1383049	42-WAR15LW	Worm Shaft Assembly(15)
42	1383050	42-WAR20LW	Worm Shaft Assembly(20)
43	1383051	43-WAR15LW	Worm Shaft Bushing(2req)
46	1383052	46-WAR15LW	Line Guide Assembly
47	1383053	47-WAR15LW	Line Guide Pawl
47A	1383054	47A-WAR15LW	Pawl Shim
48	1383055	48-WAR15LW	Line Guide Nut
50	1383056	50-WAR15LW	Worm Shield(15)
50	1383057	50-WAR20LW	Worm Shield(20)
58	1383058	58-WAR15LW	Line Guide Post(15)
58	1383059	58-WAR20LW	Line Guide Post(20)
60	1383060	60-WAR15LW	Worm Shaft Washer(2req)
62	1383061	62-WAR15LW	Spring
64	1383062	64-WAR15LW	Idler Gear
66	1383063	66-WAR15LW	Click Ratchet
66A	1383064	66A-WAR15LW	Spool Gear
69	1383065	69-WAR15LW	Retainer Ring
69A	1383066	69A-WAR15LW	Retainer Ring (2 req)
98	1383094	98-WAR15LWLH	Main Gear Shaft
98R	1383069	98R-WAR15LW	Anti Reverse Ratchet
98S	1383070	98S-WAR15LW	Clutch Sleeve
120	1383071	120-WAR15LW	O-Ring
134A	1383095	134A-WAR15LWLH	Clutch Recover Plate
134B	1383096	134B-WAR15LWLH	Clutch Recover Support Plate
134C	1383097	134C-WAR15LWLH	Clutch Recover Spring
149	1184702	149-045	Rod Clamp Nut (2 req)
149A	1184706	149-200	Hex Nut (2 req)
154	1383077	154-WAR15LW	Click Button Washer
158	1383078	158-WAR15LW	Dog Pin(2req)
183	1383279	183-WAR15LWLH	Frame Assembly(15)
183	1383280	183-WAR20LWLH	Frame Assembly(20)