


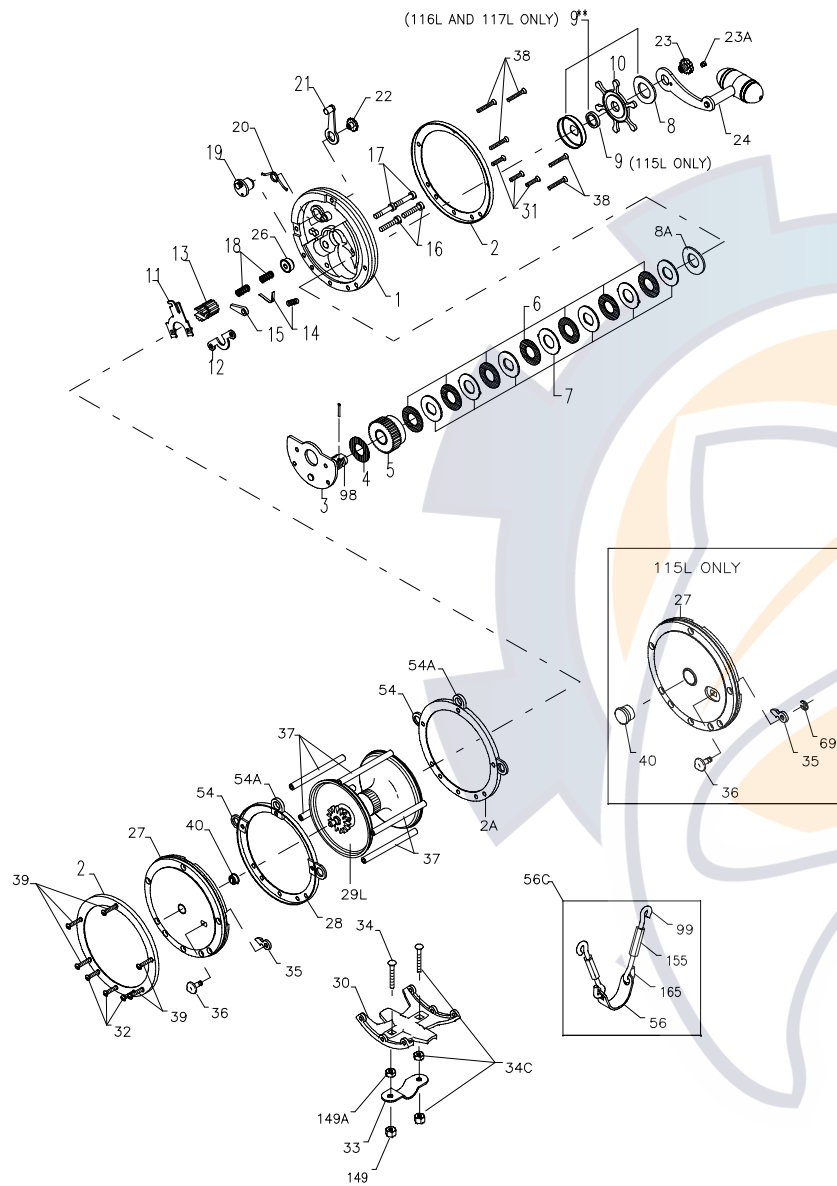

PARTS LIST FOR MODELS 115L, 116L AND 117L



KEY NO.	115L PART NO.	116L PART NO.	117L PART NO.	DESCRIPTION
1	001 115	001 116	001 117	Right Side Plate
2	002 115-O (2 req.)	002 116-O (2 req.)	002 117-O (2 req.)	Outer Right Side Ring
2A	002 115-I	002 116-I	002 117-I	Inner Right Side Ring
3	003 115	003 116	003 117	Bridge w/Sleeve
4	004 115	004 116	004 117	Fiber Washer
5	005 115	005 116	005 117	Main Gear
6	006 115 (5 req.)	006 116 (7 req.)	006 117 (7 req.)	Drag Washer
7	007C115	007C116	007C117	Metal Drag Washer Set
8	008 114	008 116	008 117	Tension Spring
8A	008 115			Tension Spring
9	009 114	009 116**	009 117**	Spacing Sleeve (Set of 3)
10	010 114	010 116	010 117	Star Drag Wheel
11	011 114	011 116	011 116	Excentric Jack
12	012 114	012 116	012 116	Pinion Yoke
13	013 114	013 116	013 117	Pinion
14	014 116	014 116	014 117	Dog Spring
15	015 115	015 116	015 117	Dog
16	016 114 (2 req.)	016 114 (2 req.)	016 114 (2 req.)	Lower Bridge Screw
17	017 114 (2 req.)	017 114 (2 req.)	017 114 (2 req.)	Upper Bridge Screw
18	018 114 (2 req.)	018 114 (2 req.)	018 114 (2 req.)	Clutch Springs
19	019 115	019 115	019 115	Eccentric
20	020 114	020 114	020 114	Eccentric Spring
21	021 114	021 116	021 117	Eccentric Lever
22	023 060	023 060	023 060	Eccentric Screw
23	023 116	023 116	023 116	Handle Screw
23A	110 060	110 060	110 060	Handle Lock Screw
24	024 057	024 116	024 117	Handle
26	026 116	026 116	026 117	Right Side Bearing
27	027 115	027 116	027 117	Left Side Plate
28	028 115-I	028 116-I	002 117-I	Inner Left Side Ring
29L	029L115	029L116	029L117	Spool
30	030 115	030 116	030 117	Stand
31	039 012	039 012 (3 req.)	039 012	Right Side Stand Screw
32	032 021	032 021 (3 req.)	039 012	Left Side Stand Screw
33	033 340	033 116	033 117	Rod Clamp
	*033R114	*033 130ST	*033R117	Ringed Rod Clamp (Optional)
34	034 045	034 130	034 130	Clamp Screw
34C	034C045	034C116	034C116	Clamp Screw w/Nuts
35	035 115	035 115	035 115	Click Tongue
36	036 115	036 115	036 117	Click Button
37	037 115 (5 req.)	037 116 (5 req.)	037 116 (8 req.)	Frame Post
38	039 013 (5 req.)	039 013 (5 req.)	039 013 (8 req.)	Right Side Post Screw
39	039 012 (5 req.)	039 012 (5 req.)	039 013 (8 req.)	Left Side Post Screw
40	040 114H	026 116	026 116	Left Side Bearing
54	054 114 (4 req.)	054 114 (2 req.)	054 117 (6 req.)	Harness Lug
54A		054 116 (2 req.)		Harness Lug
56	056 116	056 116	056 117 (2 req.)	Rod Brace
56C	056C115	056C116	056C117 (2 req.)	Rod Brace (Complete)
69	069B600			Retaining Ring
98	098 114	098 116	098 117	Gear Sleeve
99	099 115 (2 req.)	099 116 (2 req.)	099 116 (4 req.)	Hook Screw L.H. Thread
140	140 115	140 115		Felt Washer
149	149 200 (2 req.)	149 116L (2 req.)	149 116L (2 req.)	Hex Nut
149A	149 045 (2 req.)	149 116H (2req.)	149 116H (2req.)	Clamp Nut
155	155 115 (2 req.)	155 116 (2 req.)	155 116 (4 req.)	Turnbuckle
165	165 115 (2 req.)	165 116 (2 req.)	165 116 (4 req.)	Hook Screw R.H. Thread

*Not Shown