



PARTS LIST FOR MODEL CV8000

KEY
NO.

- 1 Housing
- 8 Main Gear Assembly
- 8A Main Gear Shim
- 15 Handle Retaining Assembly
- 15A Handle Retaining Bushing
- 19 Pinion Gear
- 20 Main Gear Ball Bearing (2 req.)
- 20B Pinion Ball Bearing (2 req.)
- 21 Collar
- 21A Bearing Mounting Screw (3 req.)
- 22 Cover Screw (2 req.)
- 24 Bail Wire
- 27 Rotor Cup
- 27A Bail Pivot Cover
- 27E Balance Weight
- 27F Balance Weight Screw
- 28 Trip Lever
- 31 Bail Arm Screw (2 req.)
- 31A Bail Wire Screw
- 32 Bail Spring
- 34 Bail Arm
- 34C Pivot Arm
- 35 Line Roller
- 35A Line Roller Ball Bearing (2 req.)
- 36 Bail Stud Screw
- 37 Rotor Washer
- 38 Rotor Nut
- 38A Rotor Nut Screw
- 39 Rotor Shaft
- 40B Click Ratchet
- 43 Crosswind Block
- 43A Crosswind Block Plate
- 43B Crosswind Block Plate Screw
- 44 Crosswind Block Screw
- 45 Housing Cover
- 46 Housing Cover Screw (4 req.)
- 47 Spool Assembly
- 47A Spool Ball Bearing (2 req.)
- 49 Spool Click Spring
- 51 Retaining Ring
- 52 Drag Knob
- 56 Friction Drag Washer (3 req.)
- 57 Keyed Washer (2 req.)
- 58 Drag Washer Eared
- 60 Thrust Washer
- 60A "0" Ring
- 60B Spool Shaft Bushing
- 98A Clutch Retainer
- 98 Clutch Shim
- 132 Roller Washer
- 132A Roller Washer (Plastic) (2req.)
- 226 Rear Cap
- 226A Rear Cap Screw
- 227 Cam Cover
- 231 Crosswind Gear
- 231A Crosswind Gear Ball Bearing
- 231B Ball Bearing Screw
- 233 Bearing Cover
- 233A Bearing Cover Washer

PART
NO.

- 001-NT-8000CV
- 008 8000CV
- 008A8000CV
- 015N 8000CV
- 015A8000CV
- 019 8000CV
- 020 8000CV
- 020 8000CV
- 021 8000CV
- 021A8000CV
- 022 5000CV
- 024 8000CV
- 027 8000CV
- 027A8000CV
- 027E8000CV
- 027F2000CV
- 028 8000CV
- 031 8000CV
- 031A8000CV
- 032 8000CV
- 034 8000CV
- 034C8000CV
- 035 8000CV
- 231A2000CV
- 036 2000CV
- 037 8000CV
- 038 8000CV
- 038A2000CV
- 039 8000CV
- 040B8000CV
- 043 8000CV
- 043A8000CV
- 022 5000CV
- 044 8000CV
- 045-NT-8000CV
- 046 8000CV
- 047 8000CV
- 020 5000CV
- 049 8000CV
- 051 8000CV
- 052 8000CV
- 056 8000CV
- 057 8000CV
- 058 8000CV
- 060 8000CV
- 060A8000CV
- 060B8000CV
- 098 8000CV
- 098A8000CV
- 132 8000CV
- 132A8000CV
- 226 8000CV
- 226A8000CV
- 227 8000CV
- 231 8000CV
- 020 5000CV
- 231B5000CV
- 233N 8000CV
- 233A 8000CV

