


**PENN** PARTS LIST FOR MODEL 5000CQ

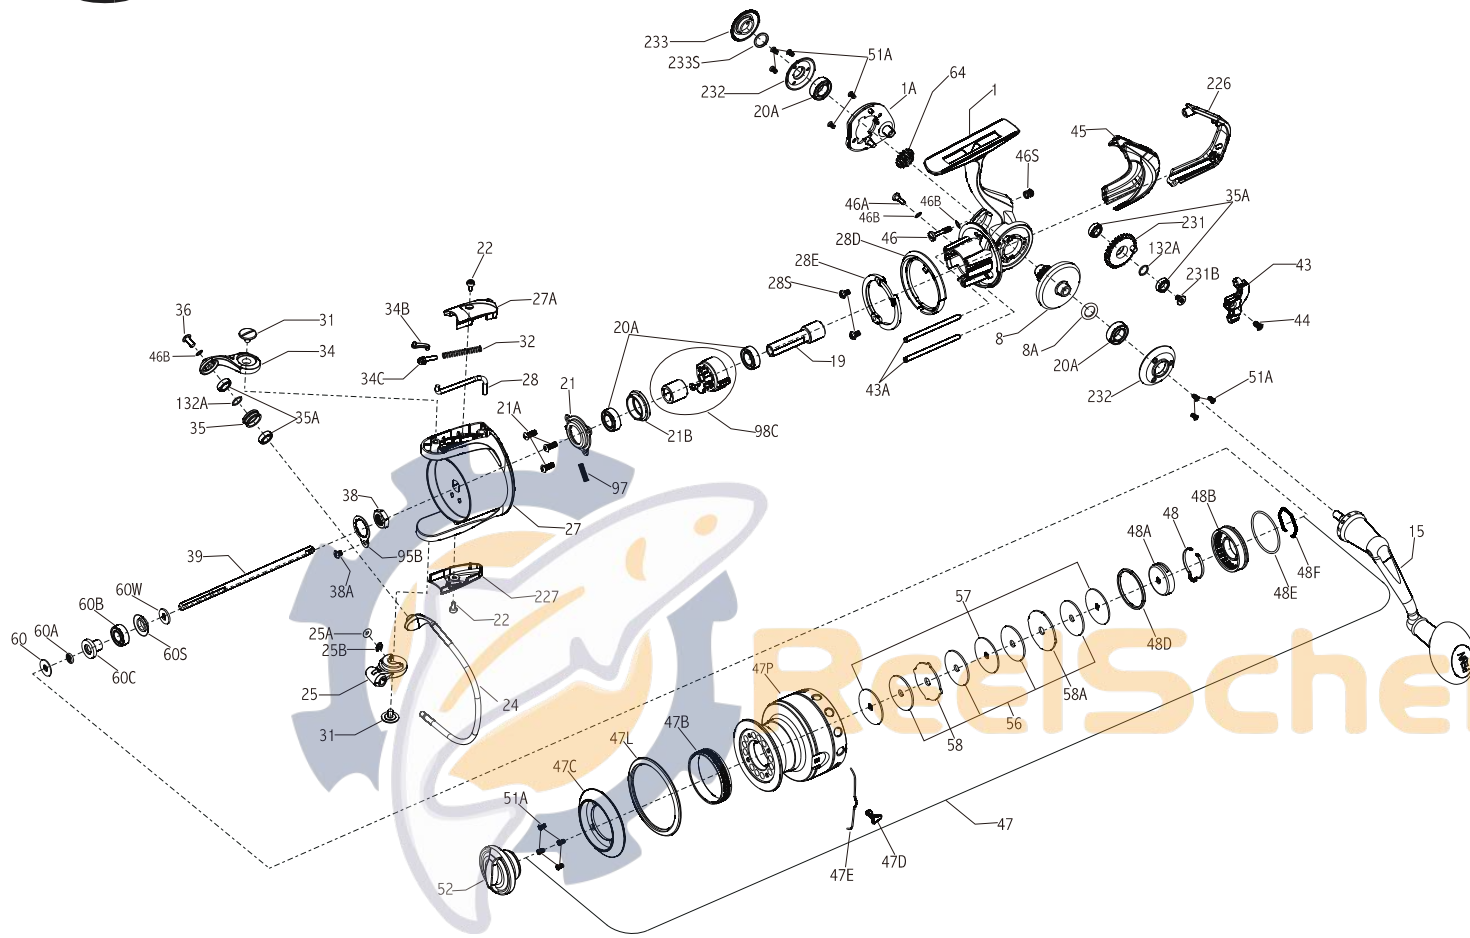

KEY NO.	PART NO.	DESCRIPTION
25B	1195592	25B-2000CQ Clip
27	1195595	27-5000CQ Rotor
27A	1195599	27A-5000CQ Bail Pivot Cover
28	1195603	28-5000CQ Trip Lever
28D	1195606	28D-5000CQ Friction Ring
28E	1195609	28E-5000CQ Friction Ring Cover
28S	1195611	28S-2000CQ Screw(2 Req.)
31	1195612	31-2000CQ Screw(2 Req.)
32	1195614	32-5000CQ Bail Spring
34	1195616	34-5000CQ Bail Arm
34B	1195618	34B-5000CQ Pivot Lever
34C	1195619	34C-2000CQ Pivot Arm
35	1195621	35-5000CQ Line Roller
35A	1195641	35A-2000CQ Ball Bearing(4 Req.)
36	1195642	36-2000CQ Screw
38	1195644	38-5000CQ Rotor Nut
38A	1195646	38A-2000CQ Screw
39	1195649	39-5000CQ Spool Shaft
43	1195653	43-5000CQ Crosswind Block
43A	1195657	43A-5000CQ Crosswind Block Pins(2 Req.)
44	1195659	44-2000CQ Screw
45	1195662	45-5000CQ Maintenance Hatch
46	1195664	46-2000CQ Screw
46A	1195665	46A-2000CQ Screw
46B	1222226	46B-2000CQ Washer(3 Req.)
46S	1195673	46S-2000CQ Spring
47	1195677	47-5000CQ Spool Assembly
47P	1197235	47P-5000CQ Spool
47B	1195684	47B-5000CQ Spool Band
47C	1195690	47C-5000CQ Spool Lip Cover
47D	1195692	47D-2000CQ Line Clip
47E	1195693	47E-2000CQ Line Clip Spring
47L	1195701	47L-5000CQ Spool Lip
48	1205228	48-5000CQ Spool Click
48A	1195706	48A-5000CQ Spool Click Retainer
48B	1195709	48B-5000CQ Spool Click Housing
48D	1195714	48D-5000CQ Spacer Ring
48E	1195717	48E-5000CQ O-Ring
48F	1251981	48F-5000CQ Clip
51A	1195720	51A-2000CQ Screw(12 Req.)
52	1195725	52-5000CQ Drag Knob Assembly
56	1195731	56-5000CQ Drag Washer HT-100(4 Req.)
57	1195742	57-5000CQ Keyed Washer(3 Req.)
58	1195746	58-5000CQ Earred Washer
58A	1195749	58A-5000CQ Earred Washer
60	1195752	60-5000CQ Spacer
60A	1195755	60A-2000CQ O-Ring
60B	1195757	60B-2000CQ Ball Bearing
60C	1195759	60C-5000CQ Bearing Sleeve
60S	1195761	60S-2000CQ Seal
60W	1195764	60W-5000CQ Spool Shaft Washer
64	1195768	64-5000CQ Idler Gear
95B	1195770	95B-2000CQ Rotor Locking Plate
97	1195772	97-2000CQ Clutch Spring
98C	1195774	98C-5000CQ Clutch/Sleeve Assembly
132A	1195778	132A-2000CQ Spacer(2 Req.)
226	1195786	226-5000CQ Rear Cover
227	1195796	227-5000CQ Cam Cover
231	1195807	231-5000CQ Crosswind Gear
231B	1195812	231B-2000CQ Screw
232	1195818	232-5000CQ Bearing Retainer(2 Req.)
233	1195825	233-5000CQ Bearing Cover
233S	1257635	233S-2000CQ O-Ring

KEY NO.	PART NO.	DESCRIPTION
1	1195550	1-5000CQ Housing
1A	1195554	1A-5000CQ Housing Plate
8	1195558	8-5000CQ Main Gear
8A	1195561	8A-5000CQ Shim
15	1195564	15-5000CQ Handle Assembly
19	1195568	19-5000CQ Pinion
20A	1195570	20A-5000CQ Ball Bearing(4 Req.)
21	1195571	21-2000CQ Bearing Retainer
21A	1195572	21A-2000CQ Screw(3 Req.)
21B	1195920	21B-5000CQ Collar
22	1195575	22-2000CQ Screw(2 Req.)
24	1195577	24-5000CQ Bail Wire
25	1195922	25-5000CQ Bail Cam
25A	1195591	25A-2000CQ O-Ring