




## PARTS LIST FOR MODEL FRCIV6000LL

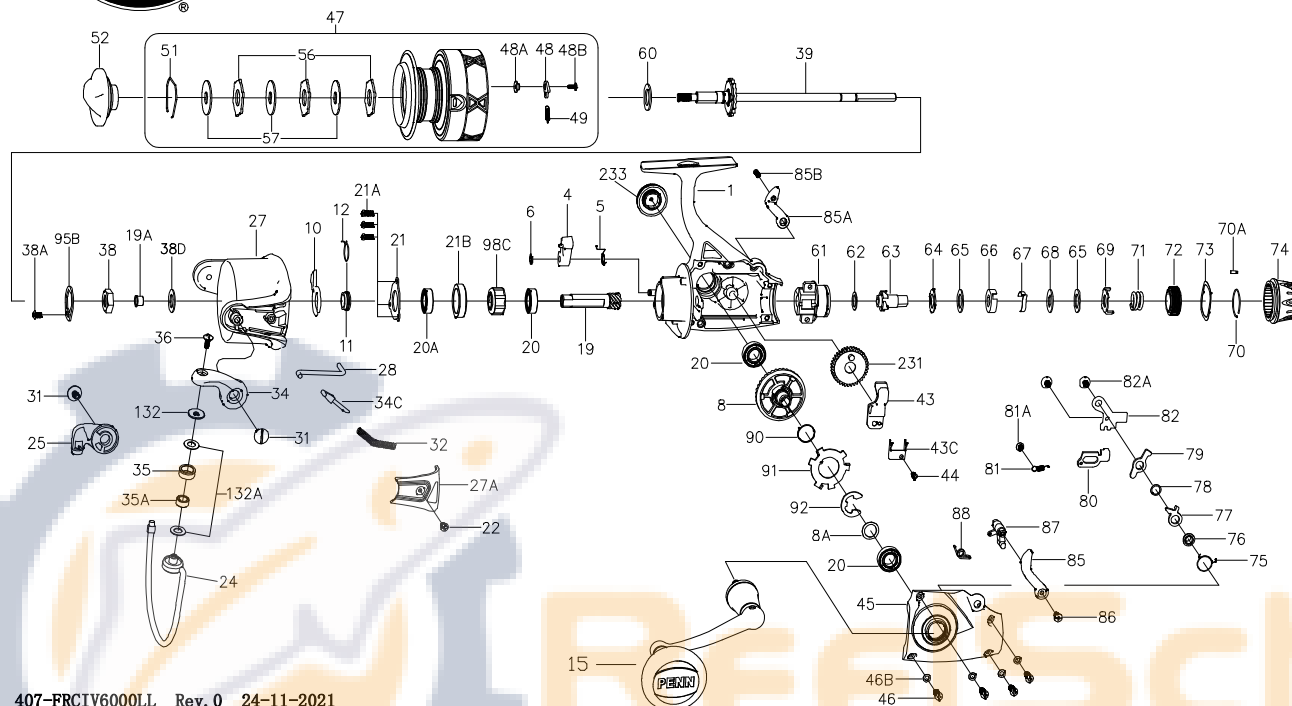

407-FRCIV6000LL Rev. 0 24-11-2021

1558719

| KEY NO. | PART NO. | PENN STYLE NO. | DESCRIPTION                    |
|---------|----------|----------------|--------------------------------|
| 1       | 1577513  | 1-FRCIV6000LL  | Housing Assembly               |
| 4       | 1190937  | 4-5000SG       | Dog                            |
| 5       | 1190966  | 5-5000SG       | Dog Spring                     |
| 6       | 1190979  | 6-5000SG       | Retaining Clip                 |
| 8       | 1371390  | 8-FRCII6000LL  | Main Gear                      |
| 8A      | 1191030  | 8A-5000SG      | Shim                           |
| 10      | 1191066  | 10-5000SG      | A/R Holder                     |
| 11      | 1191085  | 11-5000SG      | Bushing                        |
| 12      | 1313865  | 12-CFT8000     | A/R Bushing Spring             |
| 15      | 1577495  | 15-FRCIV5000   | Handle Assembly                |
| 19      | 1364030  | 19-BTLII5000   | Pinion Gear                    |
| 19A     | 1191253  | 19A-5000SG     | Pinion Bushing                 |
| 20      | 1204012  | 20-5000PUR     | Ball Bearing (3 req)           |
| 20A     | 1308090  | 20-CFT5000     | Upper Pinion Ball Bearing      |
| 21      | 1192636  | 21-5000SG      | Bearing Retainer               |
| 21A     | 1192645  | 21A-5000SG     | Bearing Retainer Screw (3 req) |
| 21B     | 1324209  | 21B-BTLII5000  | Collar                         |

| KEY NO. | PART NO. | PENN STYLE NO.  | DESCRIPTION            |
|---------|----------|-----------------|------------------------|
| 22      | 1204018  | 22-6000PUR      | Bail Pivot Cover Screw |
| 24      | 1365746  | 24-FRCII6000    | Bail Wire              |
| 25      | 1308093  | 25-CFT5000      | Bail Holder            |
| 27      | 1524124  | 27-FRCIII6000   | Rotor                  |
| 27A     | 1365748  | 27A-FRCII6000   | Bail Pivot Cover       |
| 28      | 1365749  | 28-FRCII6000    | Trip Lever             |
| 31      | 1365740  | 31-FRCII5000    | Bail Arm Screw (2 req) |
| 32      | 1200520  | 32-6000SG       | Bail Spring            |
| 34      | 1308103  | 34-CFT6000      | Bail Arm               |
| 34C     | 1191652  | 34C-5000SG      | Pivot Arm              |
| 35      | 1308066  | 35-CFT3000      | Line Roller            |
| 35A     | 1308067  | 35A-CFT3000     | Line Roller Bushing    |
| 36      | 1191699  | 36-3000SG       | Bail Stud Screw        |
| 38      | 1191729  | 38-5000SG       | Rotor Nut              |
| 38A     | 1365741  | 38A-FRCII5000   | Screw                  |
| 38D     | 1308104  | 38D-CFT5000     | Rotor Nut Washer       |
| 39      | 1514351  | 39-FRCIII6000LL | Main Shaft             |
| 43      | 1371392  | 43-FRCII6000LL  | Crosswind Block        |
| 43C     | 1371393  | 43C-FRCII6000LL | Main Shaft Holder      |
| 44      | 1192644  | 21A-3000SG      | Crosswind Block Screw  |

| KEY NO. | PART NO. | PENN STYLE NO.  | DESCRIPTION                  |
|---------|----------|-----------------|------------------------------|
| 45      | 1514573  | 45-FRCII6000LL  | Housing Cover Assy           |
| 46      | 1371701  | 46-FRCII6000LL  | Housing Cover Screw (4 req)  |
| 46B     | 1191908  | 46B-5000SG      | Housing Cover Washer (4 req) |
| 47      | 1577514  | 47-FRCIV6000LL  | Spool Assembly               |
| 48      | 1211625  | 48-5000SG       | Click Tongue                 |
| 48A     | 1211626  | 48A-5000SG      | Click Tongue Washer          |
| 48B     | 1192658  | 22-2000SG       | Bail Pivot Cover Screw       |
| 49      | 1211627  | 49-5000SG       | Click Tongue Spring          |
| 51      | 1308112  | 51-CFT5000      | Drag Retaining Ring          |
| 52      | 1514319  | 52-FRCII5000    | Drag Knob Assembly           |
| 56      | 1308114  | 56-CFT5000      | Drag Washer (3 req)          |
| 57      | 1192044  | 57-5000SG       | Keyed Washer (3 req)         |
| 60      | 1192062  | 60-5000SG       | Thrust Washer                |
| 61      | 1371396  | 61-FRCII6000LL  | Rear Drag Bracket            |
| 62      | 1371397  | 62-FRCII6000LL  | Washer                       |
| 63      | 1371398  | 63-FRCII6000LL  | Ratchet                      |
| 64      | 1371399  | 64-FRCII6000LL  | Eared Washer                 |
| 65      | 1371400  | 65-FRCII6000LL  | Friction Washer (2 req)      |
| 66      | 1371401  | 66-FRCII6000LL  | Click Spring Sleeve          |
| 67      | 1371402  | 67-FRCII6000LL  | Click Spring                 |
| 68      | 1371403  | 68-FRCII6000LL  | Keyed Drag Washer            |
| 69      | 1371404  | 69-FRCII6000LL  | Eared Washer                 |
| 70      | 1371405  | 70-FRCII6000LL  | Retaining Ring               |
| 70A     | 1371406  | 70A-FRCII6000LL | Click Pin                    |
| 71      | 1371407  | 71-FRCII6000LL  | Rear Drag Spring             |
| 72      | 1371408  | 72-FRCII6000LL  | Drag Sleeve                  |
| 73      | 1371409  | 73-FRCII6000LL  | Spring Washer                |
| 74      | 1371410  | 74-FRCII6000LL  | Rear Drag                    |
| 75      | 1371372  | 75-FRCII4000LL  | Release Pawl Spring          |
| 76      | 1371411  | 76-FRCII6000LL  | Release Pawl Stud            |
| 77      | 1371412  | 77-FRCII6000LL  | Release Pawl                 |
| 78      | 1371413  | 78-FRCII6000LL  | Washer                       |
| 79      | 1371414  | 79-FRCII6000LL  | Return Pawl                  |
| 80      | 1371415  | 80-FRCII6000LL  | N-R Pawl                     |
| 81      | 1371376  | 81-FRCII4000LL  | N-R Pawl Spring              |
| 81A     | 1324171  | 38A-BTLII4000   | Rotor Locking Plate Screw    |
| 82      | 1371416  | 82-FRCII6000LL  | Retaining Plate              |
| 82A     | 1371417  | 82A-FRCII6000LL | Screw (2 req)                |
| 85      | 1371379  | 85-FRCII4000LL  | Left Lever                   |
| 85A     | 1371380  | 85A-FRCII4000LL | Right Lever                  |
| 85B     | 1371381  | 85B-FRCII4000LL | Screw                        |
| 86      | 1251748  | 36-1000FRC      | Bail Stud Screw              |
| 87      | 1371383  | 87-FRCII4000LL  | Lever Bar                    |
| 88      | 1371384  | 88-FRCII4000LL  | Lever Spring                 |
| 90      | 1371386  | 90-FRCII4000LL  | Release Spring               |
| 91      | 1371419  | 91-FRCII6000LL  | Release Plate                |
| 92      | 1371420  | 92-FRCII6000LL  | Retaining Washer             |
| 95B     | 1308115  | 95B-CFT5000     | Rotor Locking Plate          |
| 98C     | 1308116  | 98C-CFT5000     | Clutch/Sleeve Assembly       |
| 132     | 1192297  | 132-5000SG      | Roller Washer                |
| 132A    | 1192302  | 132A-3000SG     | Line Roller Washer (2 req)   |
| 231     | 1200523  | 231-6000SG      | Crosswind Gear               |
| 233     | 1514320  | 233-FRCII5000   | Bearing Cover Assy           |