

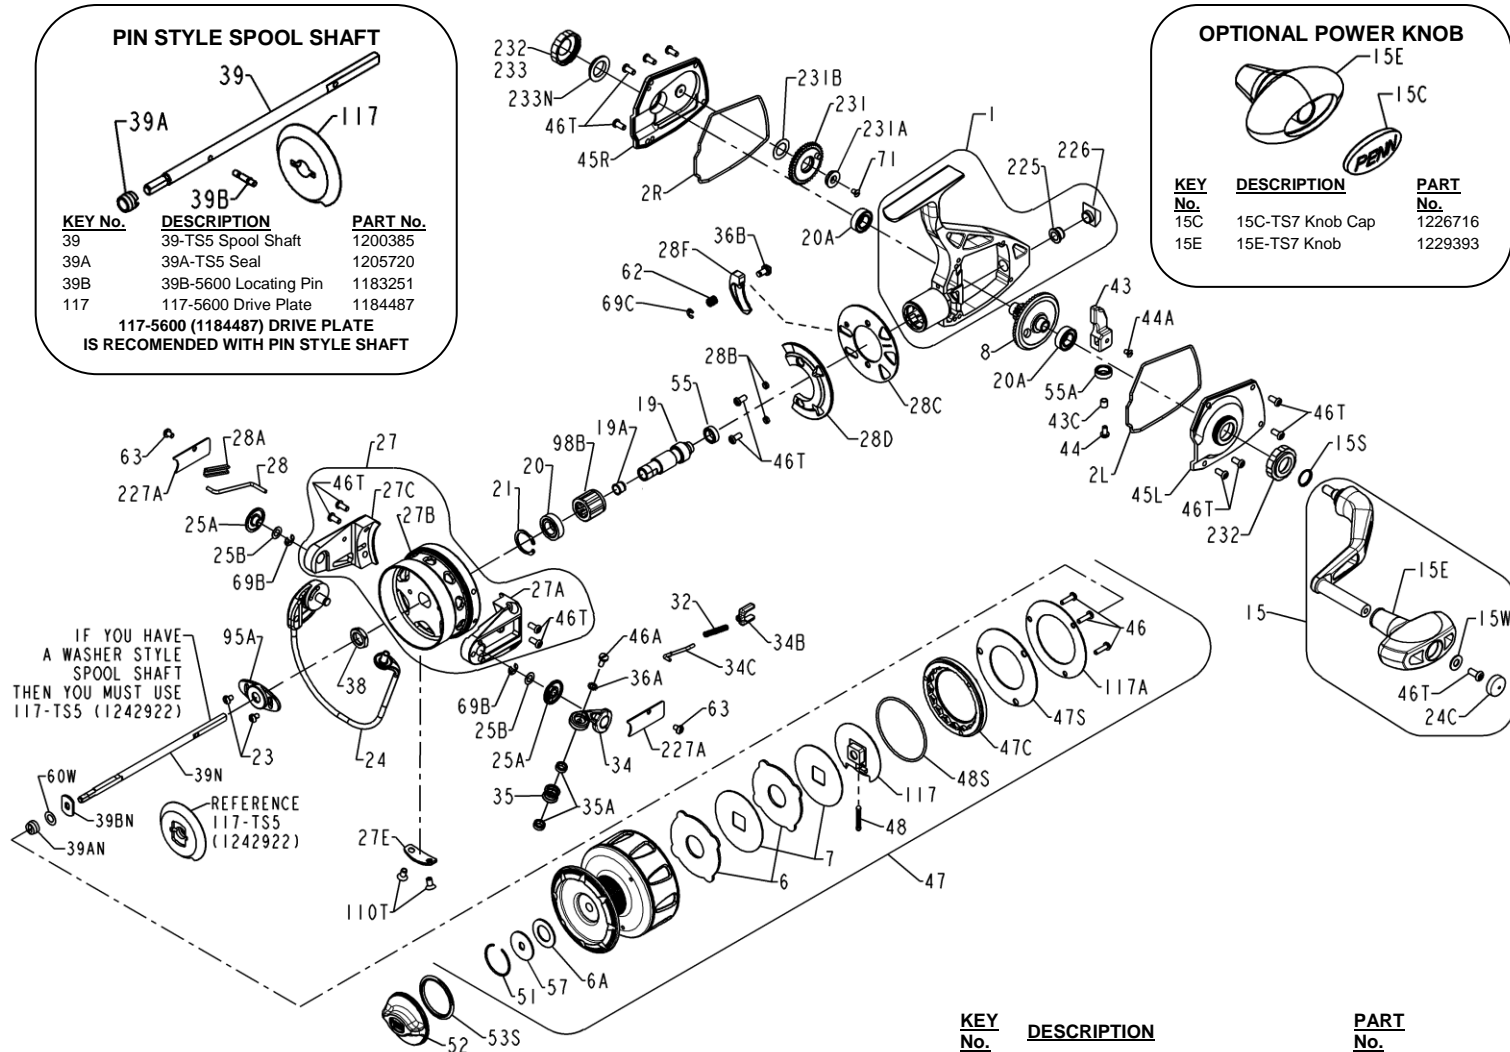


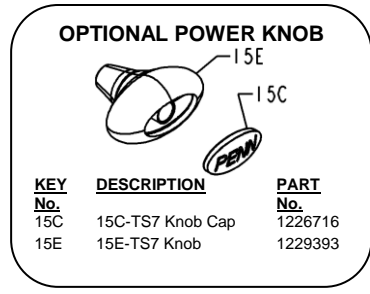

# PARTS LIST FOR MODELS TRQS5E-B (Black) & TRQS5E-G (Gold)

REEL ASM NO's 1227749 (TRQS5E-B) & 1233558 (TRQS5E-G)

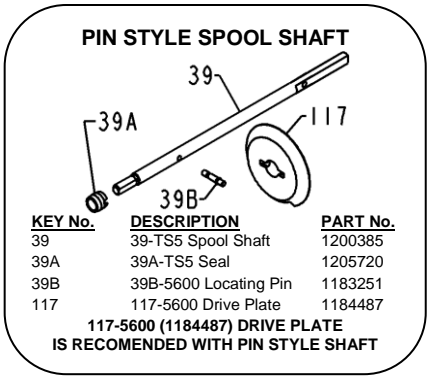

IF YOU HAVE A WASHER STYLE SPOOL SHAFT THEN YOU MUST USE 117-TS5 (1242922)

REFERENCE 117-TS5 (1242922)

KEY No.	DESCRIPTION	PART No.
1	1-TS5B Housing Asm (Black)	1200362
1	1-TS5G Housing Asm (Gold)	1200363
2L	2L-TS5 Left Housing Gasket	1200364
2R	2R-TS5 Right Housing Gasket	1200365
6	6-5600 Eared Drag Washer (2 req)	1180923
6A	6-155 Drag Washer	1180915
7	7-5600 Keyed Drag Washer (2 req)	1181019
8	8-TS5 Gear Assembly	1191026
15	15-TS5B Handle Asm (Black)	1200366
15	15-TS5G Handle Asm (Gold)	1200367
15E	15E-TS5 Knob	1229392
15S	15S-TS7 Handle Seal	1200419
15W	15W-TS7 Washer	1229399

KEY No.	DESCRIPTION	PART No.
19	19-TS5 Pinion	1200368
19A	19A-TS5 Pinion Bushing	1200369
20	20-TS7 Pinion Ball Bearing	1191260
20A	20-TS5 Gear Ball Bearing (2 req)	1200370
21	21-TS7 Retaining Ring	1192641
23	23-750 Cover Screw (2 req)	1181953
24	24-TS5 Bail Wire Assembly	1191328
24C	24C-525MAG2 Knob Cap	1229513
25A	25A-TS7 Bail Bushing (2 req)	1200331
25B	25B-TS7 Bail Washer (2 req)	1200332
27	27-TS5-B Rotor Asm (Black)	1200371
27	27-TS5G Rotor Asm (Gold)	1200372
27A	27A-TS5BP Roller Arm (Black)	1280969
27A	27A-TS5GP Roller Arm (Gold)	1280970
27B	27B-TS5B Rotor Cup (Black)	1229734
27B	27B-TS5G Rotor Cup (Gold)	1229735
27C	27C-TS5B Cam Arm (Black)	1229746
27C	27C-TS5G Cam Arm (Gold)	1229747
27E	27E-TS5 Balance Weight	1200373

KEY No.	DESCRIPTION	PART No.
28	28-TS5 Trip Lever	1200374
28A	28A-TS7 Trip Lever Guide	1200337
28B	28B-TS7 Friction Ring Bushing (2 req)	1200338
28C	28C-TS5 Rotor Flange	1210097
28D	28D-TS5 Friction Ring	1200377
28F	28F-TS5 Trip Ramp	1200378
32	32-750M Bail Spring	1182740
34	34-TS5 Bail Arm Assembly	1200380
34B	34B-TS5 Pivot Support	1202295
34C	34C-TS5 Pivot Arm	1200381
35	35-TS5 Line Roller	1200382
35A	35A-TS5 Ball Bearing (2 req)	1200383
36A	36A-TS5 Lock Washer	1221606
36B	36-TS5 Trip Switch	1200384
38	38-9500 Rotor Nut	1183160
39N	39N-TS5 Spool Shaft (Washer Style)	1251996
39AN	39AN-TS5 Plate Seal	1251998
39BN	39B-TS5 Locating Washer	1241588
43	43-TS5 Crosswind Block	1200386
43C	43C-TS5 Crosswind Bushing	1202296
44	44-TS5 Crosswind Screw	1202297
44A	44-TS7 C.W. Shaft Retaining Screw	1225769
45L	45L-TS5E-B L.S. Cover (Black)	1201235
45L	45L-TS5E-G L.S. Cover (Gold)	1201236
45R	45R-TS5B R.S. Cover (Black)	1200391
45R	45R-TS5G R.S. Cover (Gold)	1200392
46	46-4300 Drive Cover Screw (3 req)	1183567
46A	46-TS5 Line Roller Screw	1252566
46T	46T-TS7 Screw (15 req)	1191914
47	47-TS5B Spool Asm (Black)	1200393
47	47-TS5G Spool Asm (Gold)	1200394
47C	47C-TS5 Drag Cover	1200395
47S	47S-TS5 Drag Seal	1200396
48	48-5600 Click Tongue Asm	1183710
48S	48S-TS5 O-Ring	1211090
51	51-650 Spring Retainer Ring	1183794
52	52-TS5B Drag Knob Asm (Black)	1200397
52	52-TS5G Drag Knob Asm (Gold)	1200398
53S	53S-TS7 Drag Knob Seal	1211093
55	55-TS5 Ball Bearing	1200399
55A	55A-TS5 Ball Bearing	1211094
57	57-5600 Drag (Metal, Keyed) Washer	1183934
60W	60W-TS5 Spool Shim	1242145
62	62-TS7 Trip Switch Spring	1200353
63	63-209 Screw (2 req)	1184048
69B	69B-4400 Retaining Ring (2 req)	1184128
69C	69B-50 Trip Retaining Ring	1184125
71	71-TS7 Flat Hd Screw	1200354
95A	95A-TS7 Rotor Nut Cover	1192704
98B	98B-750M Clutch Bearing	1200401
110T	110T-50 Screw (2 req)	1184449
117	117-TS5 Drive Plate	1242922
117A	117A-TS5 Seal Cover	1200402
225	225-TS5 Rear Bushing	1200403
226	226-TS5 Rear Cap	1200404
227A	227A-TS5B Arm Cover (Black) (2 req)	1200405
227A	227A-TS5G Arm Cover (Gold) (2 req)	1200406
231	231-TS5 Crosswind Gear Asm	1200407
231A	231A-TS7 Crosswind Gear Bushing	1192741
231B	231B-TS7 Crosswind Gear Washer	1192742
232	232-TS7B Open Cover (Black) (2 req)	1200358
232	232-TS7G Open Cover (Gold) (2 req)	1200359
*233	*233-TS7G Closed Cover (Gold)	*1200361
233N	233N-TS7B Bearing Cap (Black)	1253566
233N	233N-TS7G Bearing Cap (Gold)	1253568
*	Optional - Closed Cover (Gold) ONLY	

\*Note If you are replacing a Closed Cover with an Open Cover then you must also order a Cap.