




PARTS LIST FOR WAR15LWLCLH and WAR20LWLCLH
 REEL ASM. Nos. 1366189(WAR15LWLCLH)&1366194(WAR20LWLCLH)

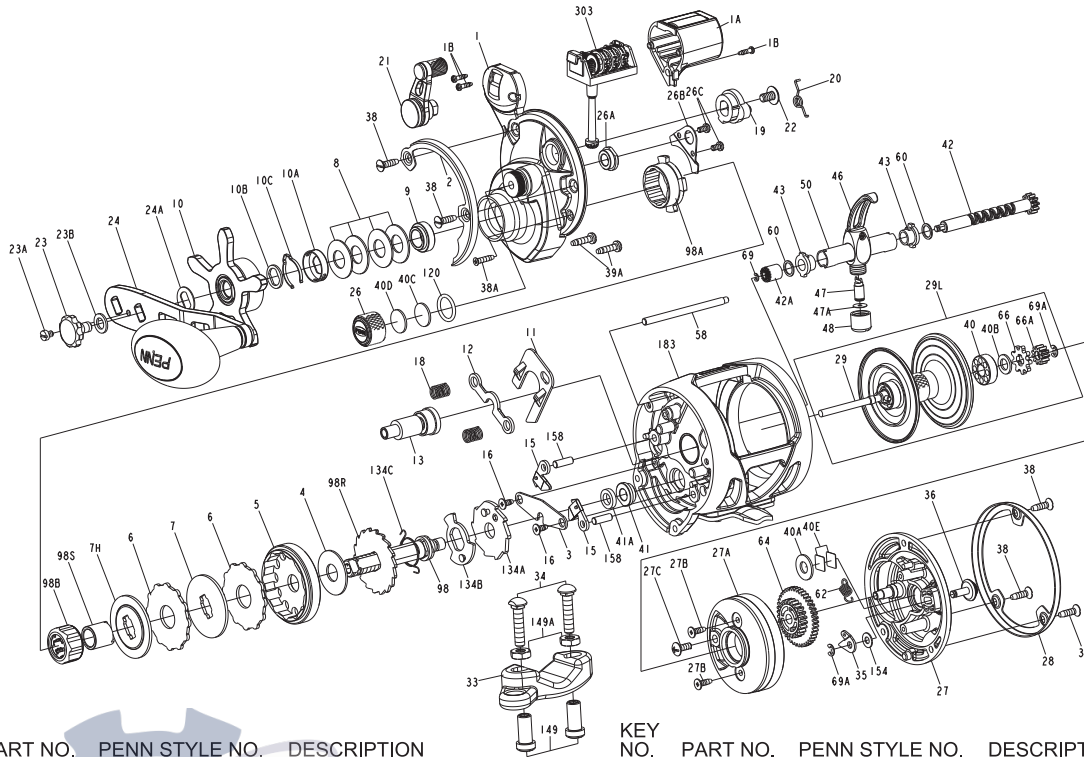

| KEY NO. | PART NO. | PENN STYLE NO. | DESCRIPTION | KEY NO. | PART NO. | PENN STYLE NO. | DESCRIPTION |
|---------|----------|----------------|-------------------------------|---------|----------|-----------------|------------------------------|
| 1 | 1383098 | 1-WAR15LWLCLH | Right Side Plate Assembly(15) | 35 | 1383037 | 35-WAR15LW | Click Tongue |
| 1 | 1383099 | 1-WAR20LWLCLH | Right Side Plate Assembly(20) | 36 | 1383038 | 36-WAR15LW | Click Button |
| 1A | 1383100 | 1A-WAR15LWLCLH | Line Counter Cover | 38 | 1383039 | 38-WAR15LW | Screw (5 req) |
| 1B | 1383084 | 1B-WAR15LWLC | Screw, L.C.Cover(3req) | 38A | 1383040 | 38A-WAR15LW | Screw |
| 2 | 1406057 | 2-WAR15LWLCLH | Right Side Ring | 39A | 1383041 | 39A-WAR15LW | Screw(2req) |
| 3 | 1384179 | 3-WAR15LW | Bridge | 40 | 1383042 | 40-WAR15LW | Ball Bearing |
| 4 | 1382976 | 4-WAR15LW | Drag Washer | 40A | 1383043 | 40A-WAR15LW | Washer |
| 5 | 1382977 | 5-WAR15LW | Main Gear | 40B | 1383044 | 40B-WAR15LW | Felt Washer |
| 6 | 1382978 | 6-WAR15LW | Tabbed Drag Washer(2 req) | 40C | 1383045 | 40C-WAR15LW | Washer, Acetal Thrust |
| 7 | 1382999 | 7-WAR15LW | Keyed Metal Drag Washer | 40D | 1383046 | 40D-WAR15LW | Washer, Rubber Thrust |
| 7H | 1383000 | 7H-WAR15LW | Heavy Metal Drag Washer | 40E | 1383047 | 40E-WAR15LW | Thrust Washer (2req) |
| 8 | 1383001 | 8-WAR15LW | Spring Washer (4 req) | 41 | 1383048 | 41-WAR15LW | Bushing |
| 9 | 1384180 | 9-WAR15LW | Spacing Sleeve | 41A | 1384181 | 41A-WAR15LW | Bushing |
| 10 | 1383002 | 10-WAR15LW | Star Drag | 42 | 1385461 | 42-WAR15LWLC | Worm Shaft Assembly(15) |
| 10A | 1383003 | 10A-WAR15LW | Star Click Retainer | 42 | 1385462 | 42-WAR20LWLC | Worm Shaft Assembly(20) |
| 10B | 1383004 | 10B-WAR15LW | Star Click Washer | 42A | 1384183 | 42A-WAR15LWLC | Gear, L.C. Drive |
| 10C | 1383005 | 10C-WAR15LW | Star Click Spring | 43 | 1383051 | 43-WAR15LW | Worm Shaft Bushing(2req) |
| 11 | 1383006 | 11-WAR15LW | Eccentric Jack | 46 | 1383052 | 46-WAR15LW | Line Guide Assembly |
| 12 | 1383007 | 12-WAR15LW | Pinion Yoke | 47 | 1383053 | 47-WAR15LW | Line Guide Pawl |
| 13 | 1383008 | 13-WAR15LW | Pinion | 47A | 1383054 | 47A-WAR15LW | Pawl Shim |
| 15 | 1383276 | 15-WAR15LWLH | Anti Reverse Dog(2 req) | 48 | 1383055 | 48-WAR15LW | Line Guide Nut |
| 16 | 1383010 | 16-WAR15LW | Screw (2 req) | 50 | 1383056 | 50-WAR15LW | Worm Shield(15) |
| 18 | 1383011 | 18-WAR15LW | Pinion Yoke Spring (2 req) | 50 | 1383057 | 50-WAR20LW | Worm Shield(20) |
| 19 | 1383012 | 19-WAR15LW | Eccentric | 58 | 1383058 | 58-WAR15LW | Line Guide Post(15) |
| 20 | 1383013 | 20-WAR15LW | Eccentric Spring | 58 | 1383059 | 58-WAR20LW | Line Guide Post(20) |
| 21 | 1383014 | 21-WAR15LW | Eccentric Lever | 60 | 1383060 | 60-WAR15LW | Worm Shaft Washer(2req) |
| 22 | 1383015 | 22-WAR15LW | Eccentric Screw | 62 | 1383061 | 62-WAR15LW | Spring |
| 23 | 1383016 | 23-WAR15LW | Handle Assembly Screw | 64 | 1383062 | 64-WAR15LW | Idler Gear |
| 23A | 1383017 | 23A-WAR15LW | Handle Lock Screw | 66 | 1383063 | 66-WAR15LW | Click Ratchet |
| 23B | 1383018 | 23B-WAR15LW | Handle Screw Washer | 66A | 1383064 | 66A-WAR15LW | Spool Gear |
| 24 | 1383019 | 24-WAR15LW | Handle Assembly | 69 | 1383065 | 69-WAR15LW | Retainer Ring |
| 24A | 1383020 | 24A-WAR15LW | Handle Thrust Washer | 69A | 1383066 | 69A-WAR15LW | Retainer Ring (2 req) |
| 26 | 1383021 | 26-WAR15LW | Spool Tension Control Cap | 98 | 1383094 | 98-WAR15LWLH | Main Gear Shaft |
| 26A | 1383022 | 26A-WAR15LW | Bushing | 98A | 1383068 | 98A-WAR15LW | Clutch Housing |
| 26B | 1383023 | 26B-WAR15LW | Clutch Retainer | 98B | 1384182 | 98B-WAR15LW | Clutch |
| 26C | 1383024 | 26C-WAR15LW | Screw(2req) | 98R | 1383069 | 98R-WAR15LW | Anti Reverse Ratchet |
| 27 | 1383281 | 27-WAR15LWLCLH | Left Side Plate(15) | 98S | 1383070 | 98S-WAR15LW | Clutch Sleeve |
| 27 | 1383282 | 27-WAR20LWLCLH | Left Side Plate(20) | 120 | 1383071 | 120-WAR15LW | O-Ring |
| 27A | 1383027 | 27A-WAR15LW | Bearing Housing | 134A | 1383095 | 134A-WAR15LWLH | Clutch Recover Plate |
| 27B | 1383028 | 27B-WAR15LW | Screw(2req) | 134B | 1383096 | 134B-WAR15LWLH | Clutch Recover Support Plate |
| 27C | 1383029 | 27C-WAR15LW | Screw | 134C | 1383097 | 134C-WAR15LWLH | Clutch Recover Spring |
| 28 | 1383030 | 28-WAR15LW | Left Side Ring | 149 | 1184702 | 149-045 | Rod Clamp Nut (2 req) |
| 29 | 1383031 | 29-WAR15LW | Spool (15) | 149A | 1184706 | 149-200 | Hex Nut (2 req) |
| 29 | 1383032 | 29-WAR20LW | Spool (20) | 154 | 1383077 | 154-WAR15LW | Click Button Washer |
| 29L | 1383033 | 29L-WAR15LW | Spool Assembly(15) | 158 | 1383078 | 158-WAR15LW | Dog Pin(2req) |
| 29L | 1383034 | 29L-WAR20LW | Spool Assembly(20) | 183 | 1383279 | 183-WAR15LWLH | Frame Assembly(15) |
| 33 | 1182754 | 33-113 | Rod Clamp | 183 | 1383280 | 183-WAR20LWLH | Frame Assembly(20) |
| 34 | 1182788 | 34-045 | Screw (2 req) | 303 | 1383283 | 303-WAR15LWLCLH | Counter Wheel Assembly |