



No.	PART NAME	No.	PART NAME	No.	PART NAME	No.	PART NAME
1	Drag Assembly	16	Arm Lever Cover	31	Flip Sleeve	46	Handle Screw Cap
2	Spool Ring	17	Rotor Cover Screw	32	Sleeve	47	Anti Reverse Pawl
3	"D" Washer	18	Screw	33	Fixing Plate	48	Flip Lever
4	Felt Washer	19	Line Slider Screw	34	Spring Flake	49	Anti Reverse Pawl Bushing
5	"A" Washer	20	Arm Lever	35	Roller	50	Anti Reverse Pawl Spring
6	Spool Assembly	21	Line Roller Bushing	36	Bottom Plate	51	Anti Reverse Pawl Screw
7	Spool Adjust Washer	22	Line Roller	37	Ball Bearing	52	Oscillating Gear
8	Click Gear	23	Washer	38	Pinion	53	Oscillating Slider
9	Main Shaft	24	Bail Assembly	39	Ball Bearing	54	Oscillating Slider Screw
10	Main Shaft Pin(40,50)	25	Kick Lever	40	Drive Gear	55	Anti Reverse Cam Spring
11	Pin Bushing(40,50)	26	Bail Holder	41	Drive Gear Adjust Washer	56	Anti Reverse Lever
12	Rotor Nut	27	Bail Holder Cover	42	Ball Bearing	57	Body
13	Rotor Washer(30,35)	28	Cover Plate Screw	43	Body Cover	58	Handle Assembly
14	Rotor Assembly	29	Washer	44	Boby Cover Screw		
15	Bail Spring	30	Cover Flate	45	Fiber Washer		