



No.	PART NAME	No.	PART NAME	No.	PART NAME	No.	PART NAME
001	Spool Assembly	21	Bail Assembly	43	Body Cover	94	Ball Bearing
2	Main Shaft	23	Bearing Plate	44	Body Cover Screw	144	Line Roller Collar
3	Rotor Nut	25	Ratchet	45	Handle Screw Cap	148	Bail Spring Link
4	Rotor Washer	26	Pinion	48	Click Gear	149	Bail Spring Holder
5	Rotor Assembly	29	Body	56	Drag Assembly	173	Sleeve
6	Bail Holder Cover	30	Anti Reverse Cam Spring	58	Handle Assembly	174	One Way Assembly
9	Kick Lever	31	Anti Reverse Lever	60	Oscillating Slider	175	Washer
13	Bail Spring	35	Anti Reverse Claw Adjust	63	Spool Adjust Washer	180	Ball Bearing
14	Arm Lever Cover	36	Drive Gear	64	Oscillating Slider Screw	209	Pinion Collar
15	Arm Lever Cover Screw	37	Oscillating Gear	65	Anti Reverse Cam	210	Anti Reverse Adjust Screw
16	Line Slider Screw	38	Drive Gear Adjust Washer	69	Anti Reverse Lever Screw		
17	Arm Lever	39	Anti Reverse Claw	75	Bearing Plate Screw		
19	Line Roller	41	Anti Reverse Claw Screw	93	Ball Bearing		