



- | | | |
|----------------------------------|--------------------------------|---------------------------|
| 1. Spool washer | 24. Silent A/R spring (2) | 47. Top keyed washer |
| 2. Spool click ratchet | 25. Rotor bushing | 48. Teflon washer (2) |
| 3. Rotor nut-bearing | 26. A/R transfer cam | 49. Eared washer (2) |
| 4. Rotor nut retainer screw | 27. A/R ratchet screw (2) | 50. Bottom Keyed washer |
| 5. Rotor nut retainer | 28. A/R ratchet (2) | 51. Carbon washer |
| 6. Main shaft | 29. A/R ratchet spring | 52. Spool assembly |
| 7. Rotor cover top screw | 30. Bearing retainer screw (2) | 53. Spool shell |
| 8. Rotor body | 31. Rotor bearing | 54. A/R switch cam |
| 9. Line roller screw | 32. Pinion gear | 55. Switch cam spring |
| 10. Roller screw shield | 33. Handle boss cover | 56. A/R switch |
| 11. Roller shield | 34. Main body | 57. AR switch screw |
| 12. Roller shim (2) | 35. Body plate screw | 58. Main gear |
| 13. Roller bearing | 36. Body plate | 59. Main gear shim |
| 14. Line roller | 37. Oscillation gear bushing | 60. Main gear bearing (2) |
| 15. Bail wire assembly | 38. Oscillation gear | 61. Sideplate |
| 16. Bail hinge | 39. Oscillation block | 62. Sideplate screw (4) |
| 17. Rotor cover bushing (2) | 40. Rear shaft support | 63. Handle assembly |
| 18. Rotor cover (A) | 41. Bail trip wire | |
| 19. Rotor cover bottom screw (2) | 42. Bail pivot | |
| 20. Bail spring pin bushing | 43. Rotor cover (B) | |
| 21. Bail spring pin | 44. Drag knob assembly | |
| 22. Bail spring | 45. Protective shield | |
| 23. Mainshaft screw | 46. Drag retainer spring | |