



| QUANTUM - Quick Kits | | | |
|----------------------|--------------------------|-------------|------|
| KEY NO. | DESCRIPTION | PART NUMBER | QTY. |
| 1X | DRAG KNOB ASSEMBLY | MAN332-01A | 1 |
| 4X | DRAG KIT | MAN380-01A | 1 |
| 2 | Retaining Ring | | 1 |
| 3 | Drag Washer "D" (3 pk) | | 1 |
| 4 | Drag Washer "B" (3pk) | | 1 |
| 5X | SPOOL CLICKER KIT | MAN303-01A | 1 |
| 7 | Line Clip Screw (3 pk) | | 1 |
| 8 | Clicker Holder | | 1 |
| 9 | Clicker | | 1 |
| 11 | Clicker Screw (3pk) | | 1 |
| 12 | Clicker Spring | | 1 |
| 10X | SPOOL ASSEMBLY | MAN421-01A | 1 |
| 4X | Drag Kit | | 1 |
| 10 | Spool Sub Assembly | | 1 |
| 5X | Spool Click/Clip Kit | | 1 |
| 16X | SPOOL SUPPORT KIT | MAN315-01A | 1 |
| 13 | Retainer Ring | | 1 |
| 14 | Spool Ball Bearing | | 1 |
| 15 | Spool Ball Bearing Seal | | 1 |
| 16 | Spool Adjust Washer | | 1 |
| 17 | Spool Insert | | 1 |
| 18 | O-Ring | | 1 |
| 19 | Click Gear | | 1 |
| 20 | Main Shaft | | 1 |
| 21 | Spool Insert Pin | | 1 |
| 35X | BAIL TRIP KIT | MAN319-01A | 1 |
| 33 | Cam | | 1 |
| 34 | Kick Lever | | 1 |
| 35 | Bail Spring | | 1 |
| 90X | HANDLE ASSEMBLY | MAN418-01A | 1 |
| 90 | Handle Arm Sub-Assembly | | 1 |
| 92X | Handle Knob Sub-Assembly | | 1 |
| 92X | HANDLE KNOB KIT | LAN313-01A | 1 |
| 40 | Bushing | | 2 |
| 92 | Handle Knob | | 1 |
| 93 | Handle Knob Screw (3pk) | | 1 |
| 94 | Handle Knob Badge | | 1 |
| 95X | DUST CAP ASSEMBLY | MAN373-01A | 1 |

| PART LIST -- BK8000 | | | | | | | | | | | |
|---------------------|-------------------------------|----------------|------|---------|---|----------------|------|---------|-------------|-------------|------|
| KEY NO. | DESCRIPTION | PART NUMBER | QTY. | KEY NO. | DESCRIPTION | PART NUMBER | QTY. | KEY NO. | DESCRIPTION | PART NUMBER | QTY. |
| 1X | Drag Knob Assembly | MAN332-01A | 1 | 51 | Silent Ring Sleeve | MAN078-01A | 1 | | | | |
| 2 | Retaining Ring | KAN172-01A | 1 | 52 | Coil Spring | LAN069-01A | 1 | | | | |
| 3 | Drag Washer "D" (3 pk) | MAN080-01A-KIT | 1 | 53 | Pinion Ball Bearing Holder Screw (3 pk) | MAN051-01A-KIT | 1 | | | | |
| 4 | Drag Washer "B" (3pk) | MAN033-01A-KIT | 1 | 54 | Pinion Ball Bearing Holder | MAN122-01A | 1 | | | | |
| 7 | Line Clip Screw (3 pk) | JAN114-01A-KIT | 1 | 55 | Pinion Ball Bearing Holder Seal | MAN263-01A | 1 | | | | |
| 8 | Clicker Holder | JAN204-01A | 1 | 56 | Pinion Ball Bearing | MAN028-01A | 4 | | | | |
| 9 | Clicker | JAN103-01A | 1 | 57 | Pinion Ball Bearing Retainer | MAN040-01A | 1 | | | | |
| 10 | Spool Sub Assembly -- Use 10X | MAN321-01A | 1 | 58 | Pinion Bushing_Top | MAN029-01A | 1 | | | | |
| 11 | Clicker Screw (3pk) | JAN246-01A-KIT | 1 | 59 | Clutch Unit | MAN463-01A | 1 | | | | |
| 12 | Clicker Spring | JAN068-01A | 1 | 60 | Pinion | MAN011-01A | 1 | | | | |
| 13 | Retainer Ring | KAN038-01A | 1 | 61 | Main Shaft Bushing | MAN227-01A | 1 | | | | |
| 14 | Spool Ball Bearing | KAN027-01A | 1 | 62 | Rotor Brake | MAN145-01A | 1 | | | | |
| 15 | Spool Ball Bearing Seal | KAN251-01A | 1 | 63 | Rotor Brake Screw (3 pk) | KAN135-01A-KIT | 1 | | | | |
| 16 | Spool Adjust Washer | KAN030-01A | 1 | 66 | Anti-Reverse Actuator Shoulder Post | MAN091-01A | 1 | | | | |
| 17 | Spool Insert | MAN213-01A | 1 | 67 | Anti-Reverse Actuator | MAN090-01A | 1 | | | | |
| 18 | O-Ring | KAN266-01A | 1 | 68 | Anti-Reverse Actuator Spring | MAN089-01A | 1 | | | | |
| 19 | Click Gear | KAN037-01A | 1 | 69 | E-Clip | MAN120-01A | 1 | | | | |
| 20 | Main Shaft | MAN015-01A | 1 | 70 | Body Sub Assembly | MAN301-01A | 1 | | | | |
| 21 | Spool Insert Pin | KAN042-01A | 1 | 71 | Side Cover Seal | MAN254-01A | 1 | | | | |
| 22 | Rotor Cover Screw (3 pk) | LAN077-01A-KIT | 3 | 72 | Drive Gear Ball Bearing Seal | MAN262-01A | 2 | | | | |
| 23 | Rotor Nut Retainer | MAN118-01A | 1 | 73 | Drive Gear Ball Bearing Seal Plate | MAN255-01A | 2 | | | | |
| 24 | Seal Ring | MAN265-01A | 2 | 74 | Drive Gear Ball Bearing Screw (3 pk) | JAN220-01A-KIT | 2 | | | | |
| 25 | Rotor Nut Seal | MAN264-01A | 1 | 75 | Drive Gear | MAN312-01A | 1 | | | | |
| 26 | Rotor Nut | MAN006-01A | 1 | 76 | Drive Gear Adjustment Washer | MAN045-01A | 1 | | | | |
| 28 | Rotor Ring | MAN179-01A | 1 | 77 | O/S Gear Washer | MAN158-01A | 1 | | | | |
| 30 | Rotor | MAN009-01A | 1 | 78 | O/S Gear Assembly | MAN353-01A | 1 | | | | |
| 31 | Bail Holder | MAN017-01A | 1 | 79 | O/S Gear Screw(3pk) | KAN111-01A-KIT | 1 | | | | |
| 32 | Arm Lever Screw (3pk) | LAN225-01A-KIT | 1 | 80 | O/S Slider | MAN025-01A | 1 | | | | |
| 33 | Cam | KAN031-01A | 1 | 81 | Guide Pin | MAN211-01A | 1 | | | | |
| 34 | Kick Lever | MAN019-01A | 1 | 82A | Main Shaft Screw(3pk) | KAN100-01A-KIT | 1 | | | | |
| 35 | Bail Spring | KAN022-01A | 1 | 82B | Main Shaft Screw B (3pk) | MAN100-01A-KIT | 1 | | | | |
| 36 | Rotor Cover | MAN087-01A | 1 | 83 | O/S Slider Plate | MAN084-01A | 1 | | | | |
| 37 | Line Roller Screw(3pk) | KAN108-01A-KIT | 1 | 84 | O/S Slider Plate Screw(3pk) | JAN085-01A-KIT | 1 | | | | |
| 38 | Arm Lever | MAN007-01A | 1 | 85 | Side Cover Sub-Assembly | MAN323-01A | 1 | | | | |
| 39 | Line Roller Washer | MAN102-01A | 1 | 86 | Side Cover Screw (3pk) | KAN057-01A-KIT | 2 | | | | |
| 40 | Bushing | KAN016-01A | 4 | 90 | Handle Arm Sub-Assembly | MAN318-01A | 1 | | | | |
| 41 | Line Roller | KAN004-01A | 1 | 92 | Handle Knob | LAN013-01A | 1 | | | | |
| 42 | Bail Wire Assembly | MAN347-01A | 1 | 93 | Handle Knob Screw (3pk) | JAN085-01A-KIT | 1 | | | | |
| 49 | Silent Ring | MAN059-01A | 1 | 94 | Handle Knob Badge | LAN169-01A | 1 | | | | |
| 50 | Seal | LAN252-01A | 1 | 95X | Dust Cap Assembly | MAN373-01A | 1 | | | | |