



KEY #	DESCRIPTION	CI20PTs
1	DRAG KNOB ASSEMBLY	QT332-02
2	DRAG RETAINER	RQ038-01
3	DRAG WASHER "D"	SQ080-01
4	DRAG WASHER "B"	RQ033-01
5	DRAG WASHER "D"	N/A
6	DRAG WASHER "A"	RQ081-01
7	SPOOL SLEEVE	RQ160-01
8	SPOOL ASSEMBLY	RQ321-53
9	SPOOL WASHER	RQ030-01
10	CLICK GEAR	RQ037-01
11	MAIN SHAFT BUSHING	RQ214-01
12	ROTOR NUT	SH006-01
13	ROTOR NUT LOCK SCREW	RQ094-01
14	E-CLIP	GH034-01
15	MAIN SHAFT	RQ015-01
16	E-CLIP	GH034-01
17	BAIL ASSEMBLY	RQ347-51
18	LINE ROLLER BUSHING	N/A
18	LINE ROLLER BEARING	GH202-01
19	LINE ROLLER	CH004-04
20	LINE ROLLER WASHER	DH102-01
21	LINE ROLLER COLLAR	CH102-01
22	ARM LEVER ASSEMBLY	RQ307-03
23	LINE SLIDER SCREW	AQ108-07
24	KICK LEVER	RQ019-01
25	ARM LEVER COVER	RQ087-01
26	ARM LEVER COVER WASHE	SQ142-01
27	ARM LEVER COVER SCREW	GU077-15
28	ROTOR ASSEMBLY	RQ309-52
29	CLUTCH ASSEMBLY	RQ360-01
30	CLUTCH WASHER	RQ167-01
31	CLUTCH SLEEVE	RQ139-01

KEY #	DESCRIPTION	CI20PTs
32	PINION BALL BEARING	BH028-01
33	PINION GEAR	RQ011-01
34	PINION BUSHING	RQ141-01
35	BEARING SCREW	RQ041-01
36	ANTI REVERSE PAWL SPRING	RQ061-01
37	ANTI-REVERSE PAWL	RQ063-01
38	ANTI-REVEVE PAWL SCREW	RQ077-01
39	ANTI REVERSE CAM	RQ090-01
40	ANTI REVERSE CAM SPRING	RQ089-01
41	ANTI REVERSE LEVER	RQ059-01
42	HANDLE CAP SCREW ASSY	FT373-01
43	HANDLE SCREW WASHER	PT029-01
44	BODY ASSEMBLY	RQ301-53
45	BODY REAR COVER	RQ140-51
46	BODY REAR COVER WASHER	RQ142-01
47	BODY REAR COVER SCREW	RQ062-01
48	O/S GEAR BUSHING	N/A
48	O/S GEAR BALL BEARING	EH158-01
49	OSCILLATOR GEAR	RQ053-51
50	OSCILLATOR SLIDER	RQ025-01
51	MAIN SHAFT SCREW	RQ100-01
52	GEAR SHAFT BALL BEARING	CH028-01
53	DRIVE GEAR ASSY	QT312-01
54	ADJUST WASHER	GU105-08
55	GEAR SHAFT BALL BEARING	CH028-01
56	BODY COVER	RQ023-53
57	BODY COVER SCREW WASHER	RQ142-01
58	BODY COVER SCREW	SQ057-01
59	BODY COVER SCREW	RQ057-01
60	HANDLE ASSEMBLY	QT318-02
61	CAM SPRING SCREW	N/A