



Parts List

KEY #	DESCRIPTION	Catalyst 10	Catalyst 20	Catalyst 30	Catalyst 40
1	Drag Knob Assembly	RK332-03	SK332-03	TK332-03	TK332-03
2	Spool	RK021-01	SK021-01	TK021-01	TK021-01
3	Drag Retainer	RQ038-01	RQ038-01	RQ038-01	RQ038-01
4	Drag Washer "D"	SC080-01	SC080-01	SC080-01	SC080-01
5	Drag Washer "B"	RQ081-01	RQ081-01	RQ081-01	RQ081-01
6	Drag Washer "A"	N/A	N/A	RQ081-01	RQ081-01
7	Retainer-Cup	TK034-01	TK034-01	TK034-01	TK034-01
8	Spool Sleeve	RK121-01	SK121-01	TK121-01	TK121-01
9	Spool Bearing	N/A	N/A	N/A	N/A
10	Spool Adjust Washer	RK030-01	RK030-01	RK030-01	RK030-01
11	Click Gear	RQ037-01	RQ037-01	RQ037-01	RQ037-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01	RQ094-01	RQ094-01
13	Rotor Nut Cover	RK214-01	SK214-01	TK214-01	TK214-01
14	Main Shaft Bushing	SK213-01	SK213-01	TK213-01	TK213-01
15	Rotor Nut	SK006-01	SK006-01	TK006-01	TK006-01
16	Bail Pivot Screw	TK111-01	TK111-01	TK111-01	TK111-01
17	Bail Pivot Bushing	TK109-01	TK109-01	TK109-01	TK109-01
17A	Bail Assembly	TK112-01	TK112-01	N/A	N/A
18	Bail Retainer	SK347-01	SK347-01	SK347-01	SK347-01
19	Line Roller Bearing	GH202-01	GH202-01	GH202-01	GH202-01
20	Line Roller	TK104-01	TK104-01	TK104-01	TK104-01
21	Line Roller Sleeve	TK114-01	TK114-01	TK114-01	TK114-01
22	Line Roller Bushing	TK104-01	TK104-01	TK104-01	TK104-01
23	Line Roller Screw	RK108-01	TK108-01	TK108-01	TK108-01
24	Arm Lever Cover Screw	GU077-01	GU077-01	GU077-01	GU077-01
25	Arm Lever Cover	RK087-02	SK087-02	TK087-02	TK087-02
26	Kick Lever	RK139-01	SK019-01	TK019-01	TK019-01
27	Rotor Sub-Assembly	RK209-02	SK209-02	TK209-02	TK209-02
28	Main Shaft	RQ015-01	RQ015-01	RQ015-01	RQ015-01
29	Clutch Retaining Ring	RK060-01	TK060-01	TK060-01	TK060-01
30	Clutch Seal Plate	RK166-01	TK166-01	TK166-01	TK166-01
31	Clutch Lock Ring	RK063-01	TK063-01	TK063-01	TK063-01

KEY #	DESCRIPTION	Catalyst 10	Catalyst 20	Catalyst 30	Catalyst 40
32	Clutch Roller	RK165-01	TK165-01	TK165-01	TK165-01
33	Clutch Roller Retainer	RK040-01	TK040-01	TK040-01	TK040-01
34	Clutch Sleeve	RK139-01	SK139-01	TK139-01	TK139-01
35	Pinion Washer	AT110-01	AT110-01	AT110-01	AT110-01
36	Pinion Bearing Screw "A"	TK057-21	TK057-01	TK057-01	TK057-01
37	Pinion Bearing Screw "B"	N/A	N/A	TK057-01	TK057-01
38	Pinion Ball Bearing	CH028-01	CH028-01	CH028-01	CH028-01
39	Pinion Gear	PQ011-01	BH028-01	UK028-01	UK028-01
40	Pinion Bushing	PQ141-01	RQ141-01	SO011-01	SO011-01
41	Stopper Cam Spring	RK089-01	TK089-01	TK089-01	TK089-01
42	Stopper Lever	RK090-01	TK090-01	TK090-01	TK090-01
43	Body Sub-Assembly	RQ059-01	RQ059-01	RQ059-01	RQ059-01
44	Handle Cap	AT073-76	AT073-76	AT073-76	AT073-76
45	Body Rear Cover - Top	RK140-02	SK140-02	TK140-02	TK140-02
46	Body Rear Cover - Bottom	RK140-02	SK140-02	TK140-02	TK140-02
47	Body Rear Cover Washer	RO142-01	RO142-01	RO142-01	RO142-01
48	Body Rear Cover Screw	RQ100-01	RQ100-01	RQ100-01	RQ100-01
49	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
50	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
51	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
52	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
53	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
54	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
55	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
56	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
57	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
58	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
59	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
60	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
61	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
62	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51
63	O/S Gear	PQ053-51	PQ053-51	PQ053-51	PQ053-51