


# Catalyst PTi-A Parts Diagram - CT30PTi-A / CT40PTi-A

## ORDERING PARTS

Refer to the parts list and diagram for your model. Locate the part you need and identify the key number for the part you wish to order for your model. Always state the model number, part number, part description and quantity on your orders. Parts may be ordered direct from the Factory Service Department (1-800-588-9030), Authorized Warranty / Service Centers, and online at [www.tackleservice.com](http://www.tackleservice.com).

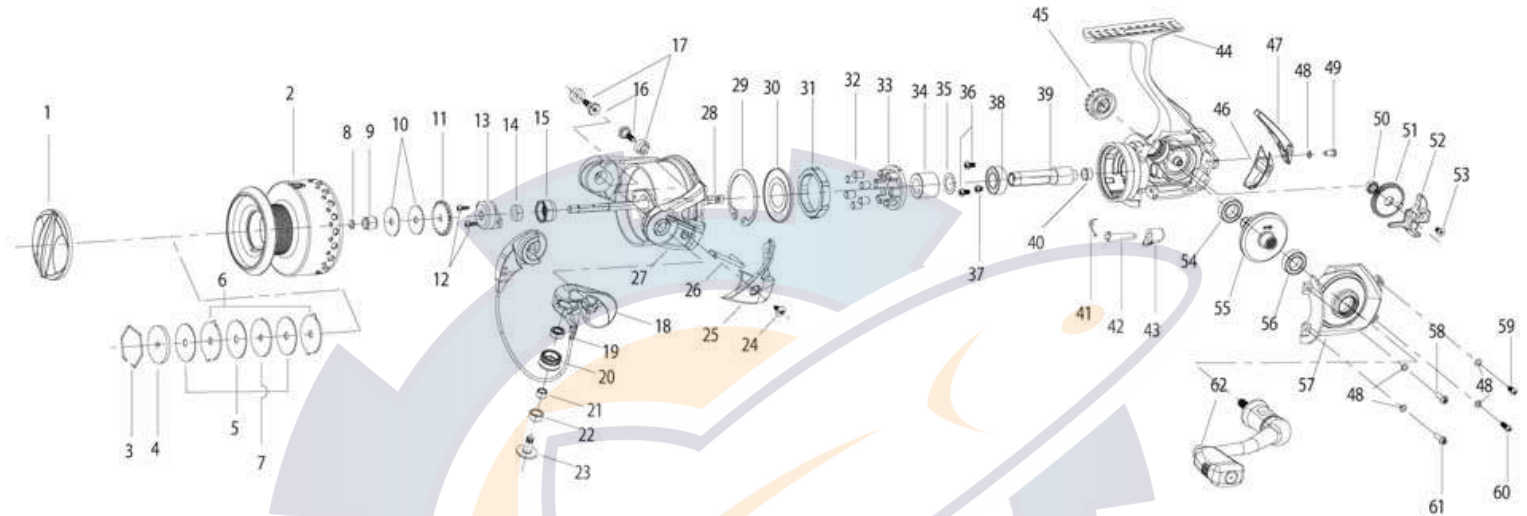

KEY #	DESCRIPTION	Catalyst 30	Catalyst 40	KEY #	DESCRIPTION	Catalyst 30	Catalyst 40
1	Drag Knob Assembly	TK332-03	TK332-03	32	Clutch Roller	TK165-01	TK165-01
2	Spool	TK021-01	TK021-51	33	Clutch Roller Retainer	TK040-01	TK040-01
3	Drag Retainer	RQ038-01	RQ038-01	34	Clutch Sleeve	TK139-01	TK139-01
4	Drag Washer "D"	SQ080-01	SQ080-01	35	Pinion Washer	AT110-01	AT110-01
5	Drag Washer "B"	RQ033-01	RQ033-01	36	Pinion Bearing Screw "A"	TK057-01	TK057-01
6	Drag Washer "A"	RQ081-01	RQ081-01	37	Pinion Bearing Screw "B"	TK057-11	TK057-11
7	Drag Washer "C"	RQ080-01	RQ080-01	38	Pinion Ball Bearing	UK028-01	UK028-01
8	Retainer Clip	TK034-01	TK034-01	39	Pinion Gear	SQ011-01	SQ011-01
9	Spool Sleeve	TK121-01	TK121-01	40	Pinion Bushing	SQ141-01	SQ141-01
9A	Spool Bearing	N/A	N/A	41	Stopper Cam Spring	TK089-01	TK089-01
10	Spool Adjust Washer	RK030-01	RK030-01	42	Stopper Cam	TK090-01	TK090-01
11	Click Gear	RQ037-01	RQ037-01	43	Stopper Lever	RQ059-01	RQ059-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01	44	Body Sub-Assembly	TK201-03	TK201-53
13	Rotor Nut Cover	TK214-01	TK214-01	45	Handle Cap	AT073-76	AT073-76
14	Main Shaft Bushing	TK213-01	TK213-01	46	Body Rear Cover - Top	TK140-02	TK140-02
15	Rotor Nut	TK006-01	TK006-01	47	Body Rear Cover - Bottom	TK140-52	TK140-52
16	Bail Pivot Screw	TK111-01	TK111-01	48	Body Cover Screw Washer	RQ142-01	RQ142-01
17	Bail Pivot Bushing	TK109-01	TK109-01	49	Body Rear Cover Screw	RQ057-11	RQ057-11
17A	Bail Pivot Insert	N/A	N/A	50	O/S Gear Ball Bearing	EH158-01	EH158-01
18	Bail Assembly	SK347-01	SK347-01	51	O/S Gear	TQ053-51	TQ053-51
19	Line Roller Bearing	GH202-01	GH202-01	52	Oscillation Slider	TK025-01	TK025-01
20	Line Roller	TK004-01	TK004-01	53	Main Shaft Screw	RQ100-01	RQ100-01
21	Line Roller Sleeve	TK114-01	TK114-01	54	Body Ball Bearing	BL157-01	BL157-01
22	Line Roller Bushing	TK104-01	TK104-01	55	Drive Gear Assembly	AT312-51	AT312-51
23	Line Roller Screw	TK108-01	TK108-01	56	Body Cover Ball Bearing	BL157-01	BL157-01
24	Arm Lever Cover Screw	GU077-01	GU077-01	57	Body Cover Assembly	TK123-03	TK123-03
25	Arm Lever Cover	TK087-02	TK087-02	58	Body Cover Screw "A"	RQ057-04	RQ057-04
26	Kick Lever	TK019-01	TK019-01	59	Body Cover Screw "B"	SK057-11	SK057-11
27	Rotor Sub-Assembly	TK209-02	TK209-02	60	Body Cover Screw "C"	SK057-01	SK057-01
28	Main Shaft	RQ015-01	RQ015-01	61	Body Cover Screw "D"	RQ057-04	RQ057-04
29	Clutch Retaining Ring	TK060-01	TK060-01	62	Handle Assembly	TK318-51	TK318-51
30	Clutch Seal Plate	TK166-01	TK166-01	63	Trip Ramp	TK119-01	TK119-01
31	Clutch Lock Ring	TK063-01	TK063-01				