


# Energy PTi-A Parts Diagram - E10PTi-A / E20PTi-A

## ORDERING PARTS

Refer to the parts list and diagram for your model. Locate the part you need and identify the key number for the part you wish to order for your model. Always state the model number, part number, part description and quantity on your orders. Parts may be ordered direct from the Factory Service Department (1-800-588-9030), Authorized Warranty / Service Centers, and online at [www.tackleservice.com](http://www.tackleservice.com).

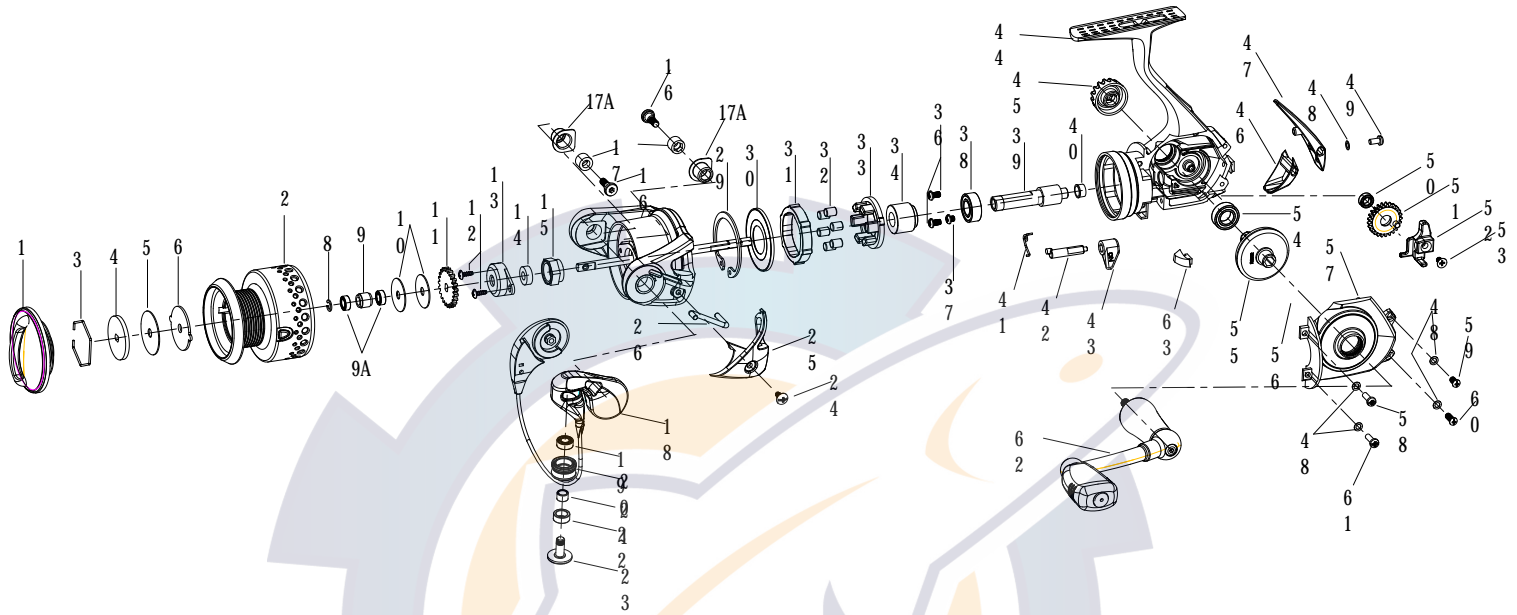

KEY#	DESCRIPTION	Energy 10	Energy 20	KEY#	DESCRIPTION	Energy 10	Energy 20
1	Drag Knob Assembly	RK332-01	SK332-01	32	Clutch Roller	RK165-01	TK165-01
2	Spool	RK021-03	SK021-03	33	Clutch Roller Retainer	RK040-01	TK040-01
3	Drag Retainer	RQ038-01	RQ038-01	34	Clutch Sleeve	RK139-01	SK139-01
4	Drag Washer "D"	SQ080-01	SQ080-01	35	Pinion Washer	AT110-01	AT110-01
5	Dag Washer "B"	RQ033-01	RQ033-01	36	Pinion Bearing Screw "A"	TK057-01	TK057-01
6	Drag Washer 'A'	RQ081-01	RQ081-01	37	Pinion Bearing Screw "B"	N/A	TK057-11
7	Drag Washer "C"	N/A	N/A	38	Pinion Ball Bearing	CH028-01	BH028-01
8	Retainer Clip	TK034-01	TK034-01	39	Pinion Gear	PQ011-01	RQ011-01
9	Spool Sleeve	RK121-01	SK121-01	40	Pinion Bushing	PQ141-01	RQ141-01
9A	Spool Bearing	EH158-01	EH158-01	41	Stopper Cam Spring	RK089-01	TK089-01
10	Spool Adjust Washer	RK030-01	RK030-01	42	Stopper Cam	RK090-01	TK090-01
11	Click Gear	RQ037-01	RQ037-01	43	Stopper Lever	RQ059-01	RQ059-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01	44	Body Sub-Assembly	RK201-01	SK201-01
13	Rotor Nut Cover	RK214-01	SK214-01	45	Handle Cap	TK073-01	TK073-01
14	Main Shaft Bushing	SK213-01	SK213-01	46	Body Rear Cover - Top	RK140-01	SK140-01
15	Rotor Nut	SK006-01	SK006-01	47	Body Rear Cover - Bottom	RK140-51	SK140-51
16	Bail Pivot Screw	TK111-01	TK111-01	48	Body Cover Screw Washer	RQ142-01	RQ142-01
17	Bail Pivot Busing	TK109-01	TK109-01	49	Body Rear Cover Screw	RQ057-11	RQ057-01
17A	Bail Pivot Insert	TK112-01	TK112-01	50	O/S gear Ball Bearing	EH158-01	EH158-01
18	Bail Assembly	RK347-01	RK347-01	51	O/S Gear	PQ053-51	PQ053-01
19	Line Roller Bearing	GH202-01	GH202-01	52	Oscillation Slider	PQ025-01	RQ025-01
20	Line Roller	RK004-01	TK004-01	53	Main Shaft Screw	RQ100-01	RQ100-01
21	Line Roller Sleeve	TK114-01	TK114-01	54	Body Ball Bearings	CH027-01	CH028-01
22	Line Roller Bushing	TK104-01	TK104-01	55	Drive Gear Assembly	PQ012-01	RQ012-01
23	Line Roller Screw	RK108-01	TK108-01	56	Body Cover Ball Bearing	CH028-01	CH028-01
24	Arm Lever Cover Screw	GU077-01	GU077-01	57	Body Cover Assembly	RK123-01	SK123-01
25	Arm Lever Cover	RK108-01	TK108-01	58	Body cover Screw "A"	RQ057-04	RQ057-04
26	Kick Lever	RK019-01	SK019-01	59	Body Cover Screw "B"	N/A	SK057-11
27	Rotor Sub-Assembly	RK209-01	SK209-01	60	Body Cover Screw "C"	SK057-11	SK057-01
28	Main Shaft	PQ015-02	PQ015-02	61	Body Cover Screw "D"	RQ057-11	RQ057-04
29	Clutch Retaining Ring	RK060-01	TK060-01	62	Handle Assembly	RK318-01	SK318-01
30	Clutch Seal Plate	RK166-01	TK166-01	63	Trip Ramp	RK119-01	SK119-01
31	Clutch Lock ring	RK063-01	TK063-01				