


Energy PTi-A Parts Diagram - E30PTi-A / E40PTi-A

ORDERING PARTS

Refer to the parts list and diagram for your model. Locate the part you need and identify the key number for the part you wish to order for your model. Always state the model number, part number, part description and quantity on your orders. Parts may be ordered direct from the Factory Service Department (1-800-588-9030), Authorized Warranty / Service Centers, and online at www.tackleservice.com.

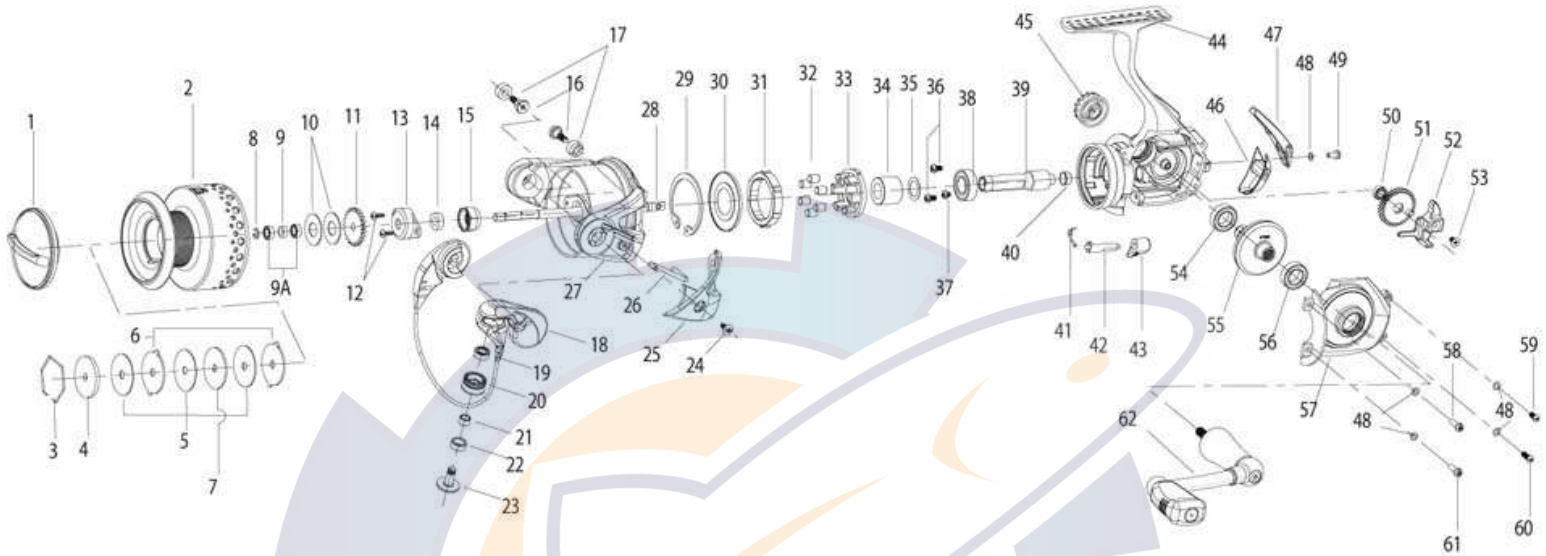

| KEY# | DESCRIPTION | Energy 30 | Energy 40 | KEY# | DESCRIPTION | Energy 30 | Energy 40 |
|------|-----------------------|-----------|-----------|------|--------------------------|-----------|-----------|
| 1 | Drag Knob Assembly | TK332-01 | TK332-01 | 32 | Clutch Roller | TK165-01 | TK165-01 |
| 2 | Spool | TK321-05 | TK321-55 | 33 | Clutch Roller Retainer | TK040-01 | TK040-01 |
| 3 | Drag Retainer | RQ038-01 | RQ038-01 | 34 | Clutch Sleeve | TK139-01 | TK139-01 |
| 4 | Drag Washer "D" | SQ080-01 | SQ080-01 | 35 | Pinion Washer | AT110-01 | AT110-01 |
| 5 | Dag Washer "B" | RQ033-01 | RQ033-01 | 36 | Pinion Bearing Screw "A" | TK057-01 | TK057-01 |
| 6 | Drag Washer "A" | RQ081-01 | RQ081-01 | 37 | Pinion Bearing Screw "B" | TK057-11 | TK057-11 |
| 7 | Drag Washer "C" | RQ080-01 | RQ080-01 | 38 | Pinion Ball Bearing | UK028-01 | UK028-01 |
| 8 | Retainer Clip | TK034-01 | TK034-01 | 39 | Pinion Gear | SQ011-01 | SQ011-01 |
| 9 | Spool Sleeve | TK121-01 | TK121-01 | 40 | Pinion Bushing | SQ141-01 | SQ141-01 |
| 9A | Spool Bearing | EH158-01 | EH158-01 | 41 | Stopper Cam Spring | TK089-01 | TK089-01 |
| 10 | Spool Adjust Washer | RK030-01 | RK030-01 | 42 | Stopper Cam | TK090-01 | TK090-01 |
| 11 | Click Gear | RQ037-01 | RQ037-01 | 43 | Stopper Lever | RQ059-01 | RQ059-01 |
| 12 | Rotor Nut Lock Screw | RQ094-01 | RQ094-01 | 44 | Body Sub-Assembly | TK201-01 | TK201-01 |
| 13 | Rotor Nut Cover | TK214-01 | TK214-01 | 45 | Handle Cap | TK073-01 | TK073-01 |
| 14 | Main Shaft Bushing | TK006-01 | TK006-01 | 46 | Body Rear Cover - Top | TK140-01 | TK140-01 |
| 15 | Rotor Nut | TK006-01 | TK006-01 | 47 | Body Rear Cover - Bottom | TK140-51 | TK140-51 |
| 16 | Bail Pivot Screw | TK111-01 | TK111-01 | 48 | Body Cover Screw Washer | RQ142-01 | RQ142-01 |
| 17 | Bail Pivot Busing | TK109-01 | TK109-01 | 49 | Body Rear Cover Screw | RQ057-01 | RQ057-01 |
| 17A | Bail Pivot Insert | N/A | N/A | 50 | O/S gear Ball Bearing | EH158-01 | EH158-01 |
| 18 | Bail Assembly | RK347-01 | RK347-01 | 51 | O/S Gear | TQ053-01 | TQ053-01 |
| 19 | Line Roller Bearing | GH202-01 | GH202-01 | 52 | Oscillation Slider | TQ025-01 | TQ025-01 |
| 20 | Line Roller | TK004-01 | TK004-01 | 53 | Main Shaft Screw | RQ100-01 | RQ100-01 |
| 21 | Line Roller Sleeve | TK114-01 | TK114-01 | 54 | Body Ball Bearings | BL157-01 | BL157-01 |
| 22 | Line Roller Bushing | TK104-01 | TK104-01 | 55 | Drive Gear Assembly | SQ012-01 | SQ012-01 |
| 23 | Line Roller Screw | TK108-01 | TK108-01 | 56 | Body Cover Ball Bearing | BL157-01 | BL157-01 |
| 24 | Arm Lever Cover Screw | GU077-01 | GU077-01 | 57 | Body Cover Assembly | TK123-01 | TK123-01 |
| 25 | Arm Lever Cover | TK108-01 | TK108-01 | 58 | Body cover Screw "A" | RQ057-04 | RQ057-04 |
| 26 | Kick Lever | TK019-01 | TK019-01 | 59 | Body Cover Screw "B" | SK057-11 | SK057-01 |
| 27 | Rotor Sub-Assembly | TK209-01 | TK209-01 | 60 | Body Cover Screw "C" | SK057-01 | SK057-01 |
| 28 | Main Shaft | PQ015-02 | PQ015-02 | 61 | Body Cover Screw "D" | RQ057-04 | RQ057-04 |
| 29 | Clutch Retaining Ring | TK060-01 | TK060-01 | 62 | Handle Assembly | TK318-01 | TK318-01 |
| 30 | Clutch Seal Plate | TK166-01 | TK166-01 | 63 | Trip Ramp | TK119-01 | TK119-01 |
| 31 | Clutch Lock ring | TK063-01 | TK063-01 | | | | |