



KEY #	DESCRIPTION	ENERGY-40	KEY #	DESCRIPTION	ENERGY-40
1	DRAG KNOB ASSEMBLY	ST332-01	19	BEARING SCREW	RQ141-01
2	SPOOL ASSEMBLY KIT	ST4321-01	20	HANDLE CAP SCREW KIT	AT4373-03
	2A-SPOOL BEARING			20A-HANDLE CAP SCREW ASSY'	
	2B-SPOOL ASSEMBLY			20B-HANDLE SCREW WASHER	
	3-DRAG ASSEMBLY KIT		21	GEAR SHAFT BALL BEARING	BL157-01
3	DRAG WASHER KIT	RT4381-01	22	GEAR SHAFT BALL BEARING	BL157-01
	3A-DRAG RETAINER		23	BODY COVER	SQ023-56
	3B-DRAG WASHER CERAMIC		24	BODY COVER SCREW WASHER	RQ142-01
	3C-DRAG WASHER KEYED TO MAIN SHAFT		25	BODY COVER SCREW	RQ057-01
	3D-DRAG WASHER - FIBER		26	BODY COVER SCREW	SQ057-01
	3E-DRAG WASHER KEYED TO SPOOL		27	BAIL ASSEMBLY	TQ347-51
	3F-SPOOL WASHER		28	LINE ROLLER WASHER	DH102-01
4	SPOOL BEARING KIT	RT4371-01	29	LINE ROLLER BALL BEARING	GH202-01
	4A-SPOOL BEARING CLIP		30	LINE ROLLER	CH004-03
	4B-SPOOL BEARING WASHER "A"		31	LINE ROLLER COLLAR	CH102-01
	4C-SPOOL BEARING		32	ARM LEVER ASSEMBLY	SQ307-01
	4-D SPOOL BEARING WASHER "B"		33	LINE SLIDER SCREW	AQ108-07
5	CLICK GEAR	RQ037-01	34	ARM LEVER COVER SCREW	GU077-15
6	MAIN SHAFT BUSHING	SQ214-01	35	ARM LEVER COVER WASHER	SQ142-01
7	ROTOR NUT LOCK SCREW	RQ094-01	36	ARM LEVER COVER	TQ087-01
8	ROTOR NUT	TH006-01	37	KICK LEVER	TQ019-01
9	E-CLIP	GH034-01	38	ANTI-REVERSE PAWL SCREW	RQ077-01
10	ROTOR ASSEMBLY	TQ309-55	39	ANTI-REVERSE PAWL	SQ063-01
11	MAIN SHAFT	TQ015-01	40	ANTI-REVERSE PAWL SPRING	RQ061-01
12	CLUTCH WASHER	RQ167-01	41	ANTI-REVERSE CAM SPRING SCREW	N/A
13	CLUTCH ASSEMBLY	SQ360-01	42	ANTI-REVERSE CAM SPRING	RQ089-01
14	CLUTCH SLEEVE	SQ139-01	43	ANTI-REVERSE CAM	RT090-01
15	PINION BALL BEARING	UK028-01	44	ANTI-REVERSE LEVER	RQ059-01
16	GEAR ASSEMBLY KIT	RT4011-01	45	O/S GEAR BALL BEARING	EH158-01
	16A-PINION		46	OSCILLATOR GEAR	TQ053-51
	16B-DRIVE GEAR ASSEMBLY		47	OSCILLATOR SLIDER	SQ025-01
	16C-ADJUST WASHER		48	MAIN SHAFT SCREW	RQ100-01
	17-PINION BUSHING		49	BODY REAR COVER	SQ140-51
17	PINION BUSHING	SQ141-01	50	BODY REAR COVER SCREW	RQ062-02
18	BODY	RT001-02	51	HANDLE ASSEMBLY	RT318-51