



10

11

Parts List

KEY#	DESCRIPTION	Energy 10	Energy 20	Energy 30	Energy 40
1	Drag Knob Assembly	RK332-01	SK332-01	TK332-01	TK332-01
2	Spool	RK021-03	SK021-03	TK021-03	TK021-03
3	Drag Retainer	RQ038-01	RQ038-01	RQ038-01	RQ038-01
4	Drag Washer "D"	SG080-01	SG080-01	SG080-01	SG080-01
5	Drag Washer "B"	RQ033-01	RQ033-01	RQ033-01	RQ033-01
6	Drag Washer "A"	RQ081-01	RQ081-01	RQ081-01	RQ081-01
7	Drag Washer "C"	N/A	N/A	N/A	N/A
8	Retainer Clip	TK034-01	TK034-01	TK034-01	TK034-01
9	Spool Sleeve	RK121-01	SK121-01	TK121-01	TK121-01
9A	Spool Bearing	EH158-01	EH158-01	EH158-01	EH158-01
10	Spool Adjust Washer	RK030-01	RK030-01	RK030-01	RK030-01
11	Click Gear	RQ037-01	RQ037-01	RQ037-01	RQ037-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01	RQ094-01	RQ094-01
13	Rotor Nut Cover	RK214-01	SK214-01	TK214-01	TK214-01
14	Main Shaft Bushing	SK213-01	SK213-01	TK006-01	TK006-01
15	Rotor Nut	SK006-01	SK006-01	TK006-01	TK006-01
16	Ball Pivot Screw	TK111-01	TK111-01	TK111-01	TK111-01
17	Ball Pivot Bushing	TK109-01	TK109-01	TK109-01	TK109-01
17A	Ball Pivot Insert	TK112-01	TK112-01	N/A	N/A
18	Ball Assembly	RK347-01	RK347-01	RK347-01	RK347-01
19	Line Roller Bearing	GH202-01	GH202-01	GH202-01	GH202-01
20	Line Roller	RK004-01	TK004-01	TK004-01	TK004-01
21	Line Roller Sleeve	TK114-01	TK114-01	TK114-01	TK114-01
22	Line Roller Bushing	TK104-01	TK104-01	TK104-01	TK104-01
23	Line Roller Screw	RK108-01	TK108-01	TK108-01	TK108-01
24	Arm Lever Cover Screw	GU077-01	GU077-01	GU077-01	GU077-01
25	Arm Lever Cover	RK108-01	TK108-01	TK108-01	TK108-01
26	Kick Lever	RK019-01	SK019-01	TK019-01	TK019-01
27	Rotor Stud Assembly	RK019-01	SK019-01	TK019-01	TK019-01
28	Main Shaft	PK015-02	PK015-02	PK015-02	PK015-02
29	Clutch Retaining Ring	RK060-01	TK060-01	TK060-01	TK060-01
30	Clutch Seal Plate	RK186-01	TK186-01	TK186-01	TK186-01
31	Clutch Lock Ring	RK063-01	TK063-01	TK063-01	TK063-01

KEY#	DESCRIPTION	Energy 10	Energy 20	Energy 30	Energy 40
32	Clutch Roller	RK165-01	TK165-01	TK165-01	TK165-01
33	Clutch Roller Retainer	RK040-01	TK040-01	TK040-01	TK040-01
34	Clutch Sleeve	RK139-01	SK139-01	TK139-01	TK139-01
35	Pinion Washer	AT110-01	AT110-01	AT110-01	AT110-01
36	Pinion Bearing Screw "A"	TK057-01	TK057-01	TK057-01	TK057-01
37	Pinion Bearing Screw "B"	N/A	N/A	N/A	N/A
38	Pinion Ball Bearing	CH028-01	BH028-01	UK028-01	UK028-01
39	Pinion Gear	PK011-01	RQ011-01	SK011-01	SK011-01
40	Pinion Bushing	RQ141-01	RQ141-01	SK014-01	SK014-01
41	Stopper Cam Spring	RK089-01	TK089-01	TK089-01	TK089-01
42	Stopper Cam	RK090-01	TK090-01	TK090-01	TK090-01
43	Stopper Lever	RQ059-01	RQ059-01	RQ059-01	RQ059-01
44	Body Sub-Assembly	RK201-01	SK201-01	TK201-01	TK201-01
45	Handle Cap	TK073-01	TK073-01	TK073-01	TK073-01
46	Body Rear Cover - Top	RK140-01	SK140-01	TK140-01	TK140-01
47	Body Rear Cover - Bottom	RK140-51	SK140-51	TK140-51	TK140-51
48	Body Cover Screw Washer	RQ142-01	RQ142-01	RQ142-01	RQ142-01
49	Body Rear Cover Screw	RQ057-11	RQ057-01	RQ057-01	RQ057-01
50	O/S gear Ball Bearing	EH158-01	EH158-01	EH158-01	EH158-01
51	O/S Gear	PK053-51	PK053-01	TK005-01	TK005-01
52	Oscillation Slider	PK025-01	TK025-01	TK025-01	TK025-01
53	Main Shaft Screw	RQ100-01	RQ100-01	RQ100-01	RQ100-01
54	Body Ball Bearings	CH027-01	CH028-01	BL157-01	BL157-01
55	Drive Gear Assembly	PK012-01	SK012-01	TK012-01	TK012-01
56	Body Cover Ball Bearing	CH028-01	CH028-01	BL157-01	BL157-01
57	Body Cover Assembly	RK123-01	SK123-01	TK123-01	TK123-01
58	Body Cover Screw "A"	RQ057-04	RQ057-04	RQ057-04	RQ057-04
59	Body Cover Screw "B"	N/A	N/A	N/A	N/A
60	Body Cover Screw "C"	SK057-11	SK057-01	TK057-01	TK057-01
61	Body Cover Screw "D"	RQ057-11	RQ057-04	RQ057-04	RQ057-04
62	Handle Assembly	RK318-01	SK318-01	TK318-01	TK318-01
63	Top Ramp	RK119-01	SK119-01	TK119-01	TK119-01

12

13