

# Parts List

KEY#	DESCRIPTION	E70PT	E76PT	E750PT	E761PT
1	Palm Side Cover Kit	UX4023-02	UX4023-02	UX4023-01	UX4023-02
1A -	Palm Side Cover Ass.				
1B -	Centrifugal Dial Washer				
1C -	Centrifugal Dial Ass.				
1D -	Centrifugal Dial Friction Ring				
1E -	Centrifugal Dial Spring				
1F -	Spool Cover				
1G -	Spool Cover Screw				
1H -	Brake Ring Assembly				
1I -	Brake Ring Retainer Spring				
1J -	Brake Ring Retainer Screw				
2 -	Spool Tension Shim				
3 -	Spool Shaft Ball Bearing (Palm)				
4 -	Clip Ring				
5 -	Spool Lenson Shim				
6 -	Spool Shaft Ball Bearing (Palm)				
7 -	Spool Assembly				
8 -	Spool Shaft Ball Bearing				
9 -	Frame Assembly				
10 -	Thumb Bar				
11 -	Kick Lever				
12 -	Release Slider				
13 -	Release Slider Spring				
14 -	Thumb Bar Screw				
15 -	Release Slider Spring				
16 -	Release Slider Spring Pin				
17 -	Pinion Yoke				
18 -	Yoke Spring				
19 -	Gear Kit				
20 -	20A - Pinion Gear Assembly				
20B -	Drive Gear				
21 -	Stabilizer Bar - B				
22 -	Stabilizer Bar - A				
23 -	Gear Side Cover Screw - A				
24 -	E-Clip				
25 -	Bearing Retainer				
26 -	Worm Shaft Ball Bearing				
27A -	Worm Shaft Kit				
27B -	Line Guide Pawl				
27C -	Carrier Washer				
28	Worm Shaft Guide	UX016-01	UX016-01	UX016-01	UX016-01
29	Line Guide Carrier	ZM007-02	UX047-01	UX047-01	UX047-01
30	Line Guide Carrier Screw	ZM007-02	ZM007-02	ZM007-02	ZM007-02
31	Side Cover Locking Lever	YX119-02	YX119-02	YX119-02	YX119-02
32	Side Cover Locking Lever Spring	ZM096-01	ZM096-01	ZM096-01	ZM096-01
33	Hood Screw	HX107-01	HX107-01	HX107-01	HX107-01
34	Hood	UX027-01	UX027-01	UX027-01	UX027-01
35	Front Support	UX089-02	UX089-02	UX089-02	UX089-02
36	Front Support Screw	HX107-01	HX107-01	HX107-01	HX107-01
37	Worm Shaft Bushing (Gear)	HV068-01	HV068-01	HV068-01	HV068-01
38	O/S Pinion Gear Washer	EX035-01	EX035-01	EX035-01	EX035-01
39	O/S Pinion Gear	UX085-01	UX085-01	UX085-01	UX085-01
40	E-Clip	NX090-01	NX090-01	NX090-01	NX090-01
41	Crank Shaft Bearing - Lower	SM017-01	SM017-01	SM017-01	SM017-01
42	E-Clip	DM120-01	DM120-01	DM120-01	DM120-01
43	Crank Shaft Retainer	UX002-01	UX002-01	UX002-01	UX002-01
44	Crank Shaft Retainer Screw	JX107-01	JX107-01	JX107-01	JX107-01
45	O/S Drive Gear	UX008-01	UX008-01	UX008-01	UX008-02
46	Tip Ratchet Washer	UX112-01	UX112-01	UX112-01	UX112-01
47	Tip Ratchet	EX083-01	EX083-01	EX083-01	EX083-01
48	Drag Key Washer	DM111-01	DM111-01	DM111-01	DM111-01
49	Drag Key	UX059-01	UX059-01	UX059-01	UX059-01
50	One Way Bearing Sleeve	UX045-01	UX045-01	UX045-01	UX045-01
51	Gear Side Cover Assembly	UX036-01	UX036-01	UX036-01	UX036-01
52	Tension Knob O-Ring	UX024-05	UX024-05	UX024-05	UX024-05
53	Tension Knob Ball Bearing	SM117-01	SM117-01	SM117-01	SM117-01
54	Spool Tension Kit	SM117-01	SM117-01	SM117-01	SM117-01
55	56A - Spool Tension Knob Assembly	CX4033-05	CX4033-05	CX4033-05	CX4033-05
56	57 - Spool Tension Washer Kit				
57	Spool Tension Washer Kit	QM4032-01	QM4032-01	QM4032-01	QM4032-01
57A -	Spool Tension Washer				
57B -	Spool Cushion Washer				
57C -	Spool Cushion Washer				
58	Crank Shaft Ball Bearing	TM058-01	TM058-01	TM058-01	TM058-01
59	Star Drag Washer	ZM032-01	ZM032-01	ZM032-01	ZM032-01
60	Star Drag Washer Assembly	YX4114-01	YX4114-01	YX4114-01	YX4114-01
61	Spring D Washer	JX046-01	JX046-01	JX046-01	JX046-01
62	Star Drag Washer	ZM032-01	ZM032-01	ZM032-01	ZM032-01
63	Star Drag	UX055-01	UX055-01	UX055-01	UX055-01
64	Handle Bracket Spring	UX040-01	UX040-01	UX040-01	UX040-01
65	Handle Bracket	UX054-01	UX054-01	UX054-01	UX054-01
66	Handle Washer	UX032-01	UX032-01	UX032-01	UX032-01
67	Handle Assembly	UX318-01	UX318-01	UX318-01	UX318-01