

IR3, IR4C, IR4CX, IR3W, IR4CW PARTS LIST (R.H. RETRIEVE)

Key No	IR3	IR4C	IR4CX	IR3W	IR4CW	Description
1	XX323-02	XX323-03	←	XX323-02	XX323-03	Left Side Cover Assy
2	XX038-02	←	←	←	←	Spool Shaft Washer
3	JX106-01	←	←	←	←	Bearing - Spool Shaft
4	JX080-01	←	←	←	←	Clip Ring
5	JX321-02	←	←	←	←	Spool Assy
6	XX044-01	←	←	←	←	Brake Shoe B
7	JX106-01	←	←	←	←	Bearing - Spool Shaft
8	JX301-03	JX301-04	JX301-05	XX301-03	XX301-04	Frame Assy
9	QW120-01	←	←	←	←	E-Clip - Worm Shaft
10	JX067-01	←	←	←	←	Bushing - Worm Shaft
11	JX347-02	←	←	←	←	Line Guide Carrier Assy
12	JX006-01	←	←	←	←	Line Guide Pawl
13	JX035-01	←	←	←	←	Washer - Line Guide Pawl
14	JX007-02	←	←	←	←	Screw - Line Guide Carrier
15	NX092-01	←	←	←	←	E-Clip - Kick Lever Guide Post
16	XX035-01	←	←	←	←	Washer - Kick Lever Guide
17	JX050-01	←	←	←	←	Screw - Thumb Rest
18	JX009-02	←	←	XX009-02	←	Thumb Rest
19	JX061-01	←	←	XX061-01	←	Line Guide Carrier Guide
20	JX016-01	XX016-01	JX016-01	XX016-01	←	Worm Shaft Guide
21	JX372-01	←	←	XX372-01	←	Worm Shaft Assy
22	JX025-01	←	←	←	←	Pinion Yoke
23	JX040-01	←	←	←	←	Yoke Spring
24	JX011-01	←	XX011-01	JX011-01	←	Pinion Gear
25	JX017-01	←	←	←	←	Bushing - Crank Shaft (L)
26	QW120-01	←	←	←	←	E-Clip - Crank Shaft
27	JX002-01	←	←	←	←	Retainer - Crank Shaft
28	JX107-01	←	←	←	←	Screw - Crank Shaft Retainer
29	JX077-01	←	←	←	←	Kick Lever
30	JX097-01	←	←	←	←	Spring - Kick Lever
31	JX066-01	←	←	←	←	Bushing - Release Slider Guide
32	JX104-01	←	←	←	←	Spring - Release Slider
33	XX050-01	←	←	←	←	Screw - Release Slider
34	JX339-02	←	←	←	←	Release Slider Assy
35	JX102-01	←	←	←	←	Post - Kick Lever Guide
36	JX008-01	←	←	←	←	Crank Shaft
37	JX112-01	←	←	←	←	O/S Drive Gear
38	JX083-01	←	←	←	←	Tripp Fatchet