

IRON BAITCAST IR310, IR410 PARTS LIST

Key			Key				
No.	IR310	IR410	Description	No.	IR310	IR410	Description
1	FV323-01	FV323-02	Left Side Cover Assy	42	JX045-01		Drag "D" Washer
2	XX038-02	←	Spool Shaft Washer	43	JX052-01	N/A	Spacer - Crank Shaft
3	JX106-01	←	Bearing - Spool Shaft	43	N/A	CW062-01	Sleeve - One Way Bearing
4	JX080-01	←	Clip Ring	44	TW058-01	←	Bearing - Crank Shaft (U)
5	FV321-01	←	Spool Assy	45	JX038-01	←	Crank Shaft Washer
6	XX044-01	←	Brake Shoe B	46	JX066-02	←	Crank Shaft Guide
7	JX106-01	←	Bearing - Spool Shaft	47	JX073-01	←	O-Ring - Thumb Screw
8	FV301-01	FV301-02	Frame Assy	48	JX074-05	N/A	Thumb Screw
9	QW120-01	←	E-Clip - Worm Shaft	48	N/A	XX374-03	Thumb Screw Assy
10	JX067-01	←	Bushing - Worm Shaft	49	XX024-06	XX024-07	Right Side Cover
11	JX347-02	←	Line Guide Carrier Assy	50	QW123-01	←	Right Side Cover Screw
12	JX006-02	←	Line Guide Pawl	51	JX105-01	←	Spring - Tension Knob
13	JX035-01	←	Washer - Line Guide Pawl	52	QW032-02	←	Washer - Spool Tension
14	JX007-02	←	Screw - Line Guide Carrier	53	JX082-01	←	Washer - Cushion
15	NX092-01	←	E-Clip - Kick Lever Guide Carrier	54	XX033-01	←	Spool Tension Knob
16	XX035-01	←	Washer - Kick Lever Guide	55	JX046-01	←	Spring "D" Washer
17	JX050-01	←	Screw - Thumb Rest	56	XX355-02	←	Star Drag Assy
18	FV009-01	←	Thumb Rest	57	NX054-01	←	Handle Washer
19	FV061-01	←	Line Guide Carrier Guide	58	FV318-01	JV318-01	Handle Assy
20	FV016-01	←	Worm Shaft Guide	59	QW003-01	←	Handle Nut
21	FV372-01	←	Worm Shaft Assy	60	JX034-02	←	Handle Nut Cap
22	JX025-01	←	Pinion Yoke	61	QW123-01	←	Handle Nut Cap Screw
23	JX040-01	←	Yoke Spring	62	JX363-01	N/A	Anti Reverse Pawl Assy
24	JX011-01	XX011-01	Pinion Gear	62	N/A	UC0063-02	One Way Bearing
25	JX017-01	←	Bushing - Crank Shaft (L)	63	JX098-01	N/A	Post - Anti Reverse Pawl
26	QW120-01	←	E-Clip - Crank Shaft	64	XX125-01	←	Screw - Clicker Pawl
27	JX002-01	←	Retainer - Crank Shaft	65	JX110-01	←	Clicker Spring
28	JX107-01	←	Screw - Crank Shaft Retainer	66	JX114-01	←	Clicker Pawl
29	JX077-01	←	Kick Lever	67	JX084-01	←	Clicker Cam
30	JX097-01	←	Spring - Kick Lever	68	JX125-01	←	Screw - Clicker Spring Holder
31	JX068-01	←	Bushing - Release Slider Guide	69	JX103-01	←	Clicker Spring Holder
32	JX104-01	←	Spring - Release Slider	70	JX022-01	←	Spring - Clicker Cam
33	XX050-01	←	Screw - Release Slider	71	JX041-01	←	Click Cam Actuator
34	JX399-02	←	Release Slider Assy	72	JX075-01	←	C-Clip
35	JX102-01	←	Post - Kick Lever Guide	73	JX109-02	←	Click Lever
36	JX008-01	←	Crank Shaft	74	QW053-05	←	Screw - Click Lever
37	FV112-01	←	O/S Drive Gear	76	JX121-01	←	Washer - Thumb Screw
38	JX083-01	←	Trip Ratchet	77	FV098-01	←	Idel Gear Post
39	JX111-01	←	Washer - Ratchet	78	FV127-01	←	O/S Idel Gear
40	JX012-01	XX012-01	Drive Gear	79	FV351-01	←	Spool Cover Assy
41	JX059-01	←	Drag Disc	80	AV125-01	←	Spool Cover Screw