


www.reelschematic.com  
Kinetic PTi-A Parts Diagram - KT30PTi-A / KT40PTi-A

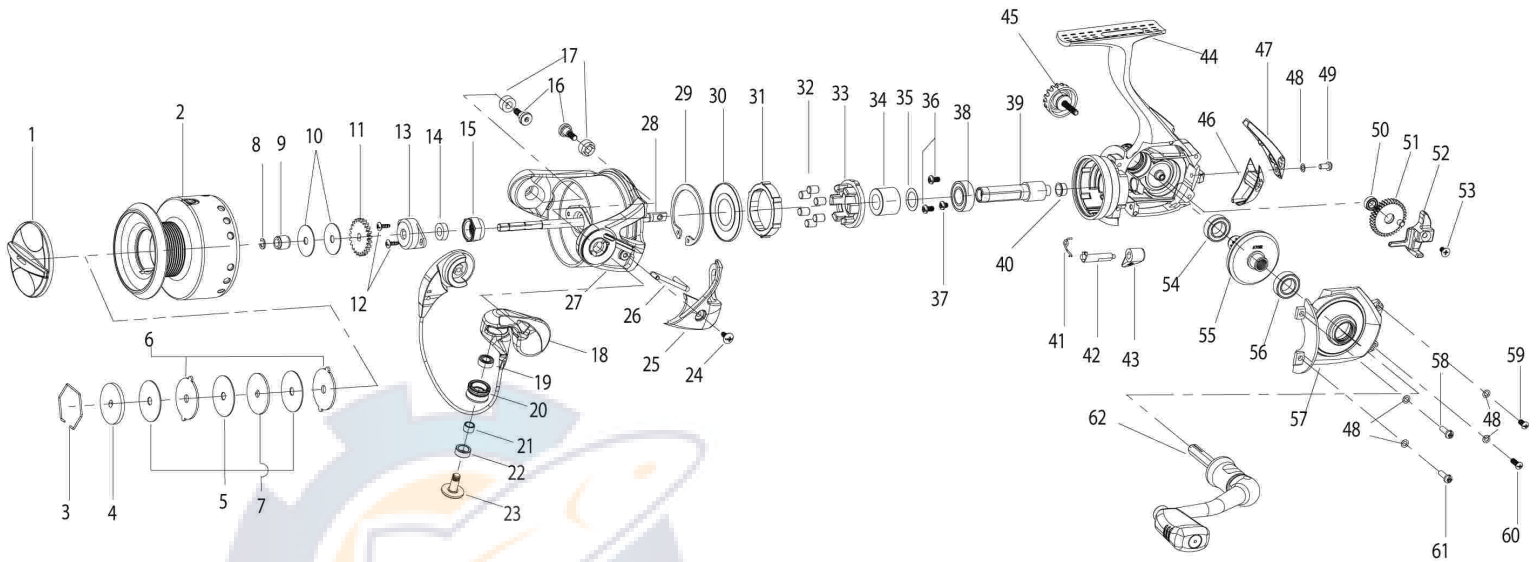

KEY #	DESCRIPTION	Kinetic 30	Kinetic 40
1	Drag Knob Assembly	TK332-01	TK332-01
2	Spool	TK321-01	TK321-51
3	Drag Retainer	RQ038-01	RQ038-01
4	Drag Washer "D"	SQ080-01	SQ080-01
5	Drag Washer "B"	RQ033-01	RQ033-01
6	Drag Washer "A"	RQ081-01	RQ081-01
7	Drag Washer "C"	RQ080-01	RQ080-01
8	Retainer Clip	TK034-01	TK034-01
9	Spool Sleeve	TK121-01	TK121-01
10	Spool Adjust Washer	RK030-01	RK030-01
11	Click Gear	RQ037-01	RQ037-01
12	Rotor Nut Lock Screw	RQ094-01	RQ094-01
13	Rotor Nut Cover	TK214-01	TK214-01
14	Main Shaft Bushing	TK213-01	TK213-01
15	Rotor Nut	TK006-01	TK006-01
16	Bail Pivot Screw	TK111-01	TK111-01
17	Bail Pivot Bushing	TK109-01	TK109-01
17A	Bail Pivot Insert	N/A	N/A
18	Bail Assembly	RK347-01	RK347-01
19	Line Roller Bearing	GH202-01	GH202-01
20	Line Roller	TK004-01	TK004-01
22	Line Roller Bushing	TK104-01	TK104-01
23	Line Roller Screw	TK108-01	TK108-01
24	Arm Lever Cover Screw	GU077-01	GU077-01
25	Arm Lever Cover	TK108-01	TK108-01
26	Kick Lever	TK019-01	TK019-01
27	Rotor Sub-Assembly	TK209-02	TK209-02
28	Main Shaft	PQ015-01	PQ015-01
29	Clutch Retaining Ring	TK060-01	TK060-01
30	Clutch Seal Plate	TK166-01	TK166-01
31	Clutch Lock Ring	TK063-01	TK063-01

KEY #	DESCRIPTION	Kinetic 30	Kinetic 40
32	Clutch Roller	TK165-01	TK165-01
33	Clutch Roller Retainer	TK040-01	TK040-01
34	Clutch Sleeve	TK139-01	TK139-01
35	Pinion Washer	AT110-01	AT110-01
36	Pinion Bearing Screw "A"	TK057-01	TK057-01
37	Pinion Bearing Screw "B"	TK057-11	TK057-11
38	Pinion Ball Bearing	UK028-01	UK028-01
39	Pinion Gear	SQ011-01	SQ011-01
40	Pinion Bushing	SQ141-01	SQ141-01
41	Stopper Cam Spring	TK089-01	TK089-01
42	Stopper Cam	TK090-01	TK090-01
43	Stopper Lever	RQ059-01	RQ059-01
44	Body Sub-Assembly	TK201-01	TK201-01
45	Handle Cap	TK073-01	TK073-01
46	Body Rear Cover - Top	TK140-01	TK140-01
47	Body Rear Cover - Bottom	TK140-51	TK140-51
48	Body Cover Screw Washer	RQ142-01	RQ142-01
49	Body Rear Cover Screw	RQ057-11	RQ057-11
50	O/S Gear Ball Bearing	EH158-01	EH158-01
51	O/S Gear	TQ053-51	TQ053-51
52	Oscillation Slider	TK025-01	TK025-01
53	Main Shaft Screw	RQ100-01	RQ100-01
54	Body Ball Bearing	BL157-01	BL157-01
55	Drive Gear Assembly	SQ012-01	SQ012-01
56	Body Cover Ball Bearing	BL157-01	BL157-01
57	Body Cover Assembly	TK123-01	TK123-01
58	Body Cover Screw "A"	RQ057-04	RQ057-04
59	Body Cover Screw "B"	SK057-11	SK057-11
60	Body Cover Screw "C"	SK057-01	SK057-01
61	Body Cover Screw "D"	RQ057-04	RQ057-04
62	Handle Assembly	TK318-01	TK318-01
63	Trip Ramp	TK119-01	TK119-01