



1310MGC Parts List

Key #	Description	Part No.	Key #	Description	Part No.
1	Palm Side Cover Assembly	AV323-04	38	Release Slider Assembly	AV339-01
2	Magnet Click Claw	AV108-01	39	Yoke Post E-Clip	QW120-01
3	Magnet Dial	AV026-01	40	Crank Shaft Bushing -L	JX017-01
4	Dial Friction Ring	NX105-01	41	Crank Shaft E-Clip	QW120-01
5	Slider Cam	AV028-01	42	Crank Shaft Retainer	JX002-01
6	Slide Cam Spring	NX071-01	43	Crank Shaft Retainer Screw	JX107-01
7	Spool Cover	AV051-01	44	Pinion Yoke	AV025-01
8	Spool Cover Screw	AV125-01	45	Yoke Spring	AV040-01
9	Magnet Plate Assembly	AV330-01	46	Pinion Gear	AV011-01
10	Magnet Plate Screw	QW076-02	47	Crank Shaft	JX008-01
11	Spool Shaft Washer	XX038-02	48	O/S Drive Gear	JX112-01
12	Spool Shaft Bushing	XX106-01	49	Trip Ratchet	JX083-01
13	Clip Ring	JX080-01	50	Ratchet Washer	QW111-01
14	Spool Assembly	AV321-01	51	Drive Gear	AV012-01
15	Clip Ring	JX080-01	52	Drag Disc	AV059-01
16	Spool Shaft Bushing	XX106-01	53	Drag "D" Washer	AV045-01
16	Spool Shaft Bearing	N/A	54	Crank Shaft Ball Bearing -U	TW058-01
17	E-Clip	QW120-01	55	Crank Shaft Washer	JX038-01
18	Worm Shaft Bushing "B"	XX067-01	56	Thumb Screw O-Ring	JX073-01
19	Line Guide Carrier Assembly	AV347-01	57	Thumb Screw Assembly	AV374-01
20	Line Guide Pawl	JX006-03	58	Gear Side Cover	AV024-04
21	Line Guide Pawl Washer	JX035-01	59	Gear Side Cover Screw	QW123-07
22	Pawl Cap Screw	JX007-02	60	Tension Knob Bushing	JX117-01
23	Carrier Guide	JX061-01	61	Tension Knob O-Ring	AV101-01
24	Worm Shaft Guide	JX016-01	62	Spool Tension Collar	JX081-01
25	Worm Shaft	AV072-01	63	Cushion Washer	AV082-01
26	Worm Shaft Bushing "A"	AV067-01	64	Spool Tension Knob	AV033-01
27	Washer - Worm Shaft Bush	AV035-01	65	Spring "D" Washer	JX046-01
28	Level Wind Gear	AV085-01	66	Star Drag Assembly	AV355-01
29	Level Wind Gear E-Clip	NX092-01	67	Handle Washer	NX054-01
30	Front Support	AV027-01	68	Handle Assembly	UW318-04
31	Frame Assembly	AV301-02	69	Handle Nut	QW003-01
32	Yoke Post E-Clip	QW120-01	70	Handle Nut Cap	QW034-04
33	Release Slider Guide Bushing	JX068-01	71	Handle Nut Cap Screw	QW123-01
34	Kick Lever Spring	AV097-01	75	One Way Bearing Sleeve	ZW052-01
35	Kick Lever	AV077-01	76	One Way Bearing	ZW063-01
36	Release Slider Spring	JX104-01	77	Spool Tension Washer	QW032-02
37	Release Slider Screw	QW123-01			