

**MS00XL PARTS LIST**

Key No.	Part No.	Description	Key No.	Part No.	Description
1	ZU332-3	Drag Knob Ass'y	31	ZU011	Pinion Gear
2	KQ038	Drag Retainer	32	GU077	Bearing Screw
3	ZU080	Spool Washer "D"	33	GU073-6	Handle Screw Cap
4	KQ029	Spool Washer "B"	34	GU105	Handle Cap Washer
5	KQ045	Spool Washer "A"	35	GU001-10	Body
6	ZU321-3	Spool Ass'y	36	GU090-2	A/R Lever
7	GU105-6	Spool Washer	37	GU089	Stopper Lever Spring
8	AQ037	Spool Click Claw	38	GU091	Stopper Bushing
9	GU006	Rotor Nut	39	GU061	Stopper Spring
10	GU077-3	Kick Lever Cover Screw	40	GU063	Stopper "A"
11	ZU046-3	Kick Lever Cover	41	GU074	Stopper "B"
12	ZU019	Kick Lever	42	GU077-5	Stopper Screw
13	KQ049	Kick Lever Spring	43	GU157	Ball Bearing
14	GU077-4	Rotor Nut Lock Screw	44	GU012	Drive Gear
15	KQ034	"E"-Clip	45	GU086	Silent Cam
16	KQ034	"E"-Clip	46	GU105-8	Drive Gear Adj. Washer
17	KQ108-3	Bail Screw	47	GU157-2	Ball Bearing
18	ZU007	Arm Lever	48	ZU053	O/S Gear
19	GU051-7	Arm Lever Pin	49	GU025	O/S Slider
20	EQ017-2	Bail Collar	50	GU100	Main Shaft Screw
21	EQ004	Line Roller B.B.	51	GU023-10	Body Cover
23	ZU347-3	Bail Ass'y	52	GU057-2	Body Cover Screw
24	KQ031	Spring Shaft	53	ZU318	Handle Ass'y
25	KQ049-3	Arm Lever Spring	54	ZU015	Main Shaft
26	QL020	Spring Holder	55	ZU009-3	Rotor
27	ZU087-3	Arm Lever Spring Cover	56	ZU109	Washer
28	GU077-3	Arm Lever Spring Cover Screw	57	GU157	Ball Bearing
29	AQ028	Ball Bearing	58	ZU139	Bearing Sleeve
30	GU060	Ratchet Gear			

**MS1XL PARTS LIST**

Key No.	Part No.	Description	Key No.	Part No.	Description
1	GU332-5	Drag Knob Ass'y	31	GU011	Pinion Gear
2	GU038	Drag Retainer	32	GU077	Bearing Screw
3	GU080	Spool Washer "D"	33	GU073-6	Handle Screw Cap
4	GU105-5	Spool Washer "B"	34	GU105	Handle Cap Washer
5	GU081	Spool Washer "A"	35	GU001-9	Body
6	XU321-2	Spool Ass'y	36	GU090-2	A/R Lever
7	GU105-6	Spool Washer	37	GU089	Stopper Lever Spring
8	AQ037	Spool Click Claw	38	GU091	Stopper Bushing
9	GU006	Rotor Nut	39	GU061	Stopper Spring
10	GU077-3	Kick Lever Cover Screw	40	GU063	Stopper "A"
11	GU046-3	Kick Lever Cover	41	GU074	Stopper "B"
12	GU019	Kick Lever	42	GU077-5	Stopper Screw
13	KQ049	Kick Lever Spring	43	GU157	Ball Bearing
14	GU077-4	Rotor Nut Lock Screw	44	GU012	Drive Gear
15	KQ034	"E"-Clip	45	GU086	Silent Cam
16	KQ034	"E"-Clip	46	GU105-8	Drive Gear Adj. Washer
17	KQ108-3	Bail Screw	47	GU157-2	Ball Bearing
18	ZU007	Arm Lever	48	GU053	O/S Gear
19	GU051-7	Arm Lever Pin	49	GU025	O/S Slider
20	EQ017-2	Bail Collar	50	GU100	Main Shaft Screw
21	EQ004	Line Roller B.B.	51	GU023-9	Body Cover
23	ZU347-4	Bail Ass'y	52	GU057-2	Body Cover Screw
24	KQ031	Spring Shaft	53	ZU318	Handle Ass'y
25	KQ049-3	Arm Lever Spring	54	GU015	Main Shaft
26	QL020	Spring Holder	55	GU009-7	Rotor
27	LU087-3	Arm Lever Spring Cover	56	ZU109	Washer
28	GU077-3	Arm Lever Spring Cover Screw	57	GU157	Ball Bearing
29	AQ028	Ball Bearing	58	ZU139	Bearing Sleeve
30	GU060	Ratchet Gear			