




# CABO CLW20PTS & CLW30PTS

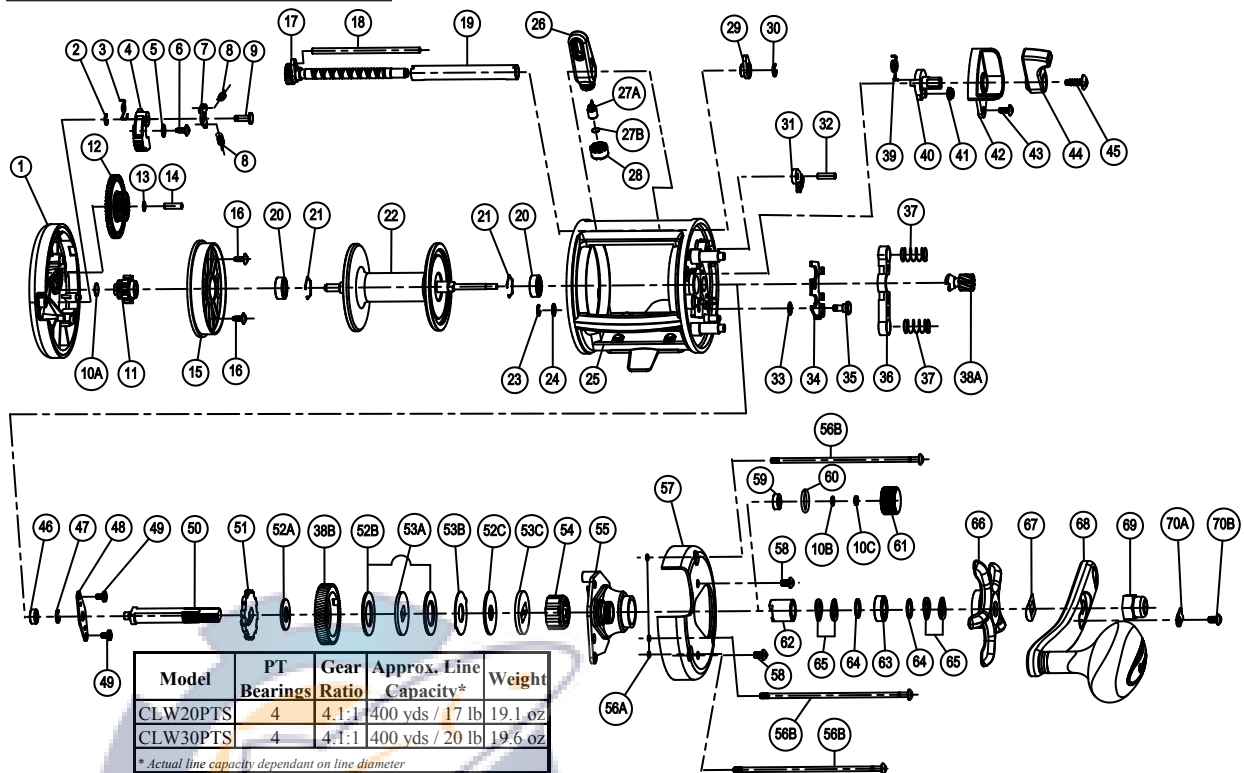

Model	PT Bearings	Gear Ratio	Approx. Line Capacity*	Weight
CLW20PTS	4	4.1:1	400 yds / 17 lb	19.1 oz
CLW30PTS	4	4.1:1	400 yds / 20 lb	19.6 oz

\* Actual line capacity dependant on line diameter

Key #	Description	Part No.	
		CLW20PTS	CLW30PTS
1	Left Side Cover Assembly	KV323-03	⇔
2	Click Pawl Post E-Clip	NX092-01	⇔
3	Bait Click Lever Spring	KV022-01	⇔
4	Bait Click Lever	LV109-01	⇔
5	Bait Click Lever Washer	KV038-01	⇔
6	Bait Click Lever Screw	AV125-01	⇔
7	Bait Click Pawl	KV114-01	⇔
8	Bait Click Spring	KV110-01	⇔
9	Bait Click Pawl Post	KV098-01	⇔
10	Spool Tension Washer Kit includes 10A-Spool Shaft Washer 10B-Spool Tension Washer 10C-CushionWasher	XX4038-01	⇔
11	Oscillate Drive Gear	KV112-01	⇔
12	Oscillate Idle Gear	KV127-01	⇔
13	Oscillate Idle Gear Washer	KV121-01	⇔
14	Oscillate Idle Gear Post	JX098-01	⇔
15	Spool Cover	KV051-01	⇔
16	Spool Cover Screw	AV125-01	⇔
17	Worm Shaft Assembly	KV372-01	LV372-01
18	Line Guide Carrier Guide	KV061-01	LV061-01
19	Worm Shaft Guide	KV016-01	LV016-01
20	Spool Shaft Bearing	CW017-02	⇔
21	Clip Ring	KV080-01	⇔
22	Spool Assembly	KV321-02	LV321-02
23	Kick Lever Guide Post E-Clip	NX092-01	⇔
24	Kick Lever Guide Post Washer	XX035-01	⇔
25	Frame Assembly	KV301-03	LV301-03
26	Line Guide Carrier Assembly	KV347-02	⇔
27	Line Guide Pawl Kit includes 27A-Line Guide Pawl 27B-Line Guide Pawl Washer	JX4006-01	⇔
28	Line Guide Carrier Screw	JX007-02	⇔
29	Worm Shaft Bushing	JX067-01	⇔
30	Worm Shaft E-Clip	QW120-01	⇔
31	Anti Reverse Pawl Assembly	KV363-01	⇔
32	Anti Reverse Pawl Post	JX098-01	⇔
33	Release Slider Spacer	KV111-01	⇔
34	Release Slider	KV039-01	⇔
35	Kick Lever Guide Post	JX102-01	⇔
36	Pinion Yoke	KV025-01	⇔
37	Pinion Yoke Spring	JX040-01	⇔
38	Gear Set includes 38A-Pinion Gear 38B-Drive Gear	PV4012-01	⇔

Key #	Description	Part No.	
		CLW20PTS	CLW30PTS
39	Release Slider Cam Spring	KV104-01	⇔
40	Release Slider Cam	KV141-01	⇔
41	Release Slider Guide Bushing	JX068-01	⇔
42	Release Lever Cover	LV143-01	⇔
43	Release Slider Screw	XX050-01	⇔
44	Release Lever	LV142-01	⇔
45	Release Lever Screw	KV053-01	⇔
46	Crank Shaft Bushing (L)	JX017-01	⇔
47	Crank Shaft Retainer E-Clip	QW120-01	⇔
48	Crank Shaft Retainer	JX002-01	⇔
49	Crank Shaft Retainer Screw	JX107-01	⇔
50	Crank Shaft	NV008-02	⇔
51	Ratchet	KV083-01	⇔
52	Drag Disc Kit includes 52A-Ratchet Washer 52B-Drag Disc-A~ 52C-Drag Disc-B~	AV4059-01	⇔
53	Drag Washer Kit includes 53A-Drag ~D~ Washer (U) 53B-Drag Key Washer 53C-Drag ~D~ Washer (U)	LV4045-01	⇔
54	One Way Bearing	LV063-01	⇔
55	Crank Shaft Guide Assembly	LV366-01	⇔
56	Side Cover Screw & O-ring 56A-O-ring (1 pc.) 56B-Button Head Cap Screw (1 pc.)	LV4124-02	LV4124-01
57	Right Side Cover	KV024-09	KV024-11
58	Right Side Cover Screw	KV154-01	⇔
59	Bushing - Tension Knob	JX117-01	⇔
60	Tension Knob O Ring	QW101-01	⇔
61	Spool Tension Knob Kit includes 61-Spool Tension Knob 10-Spool Tension Washer Kit	KV4033-01	⇔
62	One Way Bearing Sleeve	PV052-01	⇔
63	Crank Shaft Bearing	BL157-01	⇔
64	Crank Shaft Washer	JX038-01	⇔
65	Spring "D" Washer	JX046-01	⇔
66	Star Drag	LV055-01	⇔
67	Handle Washer	NX054-01	⇔
68	Handle Assembly	LV318-01	⇔
69	Handle Nut	LV003-01	⇔
70	Handle Nut Retainer Kit includes 70A-Handle Nut Retainer 70B-Handle Nut Retainer Screw	LV4034-01	⇔