




CABO

CNW20PTS &
CNW30PTS

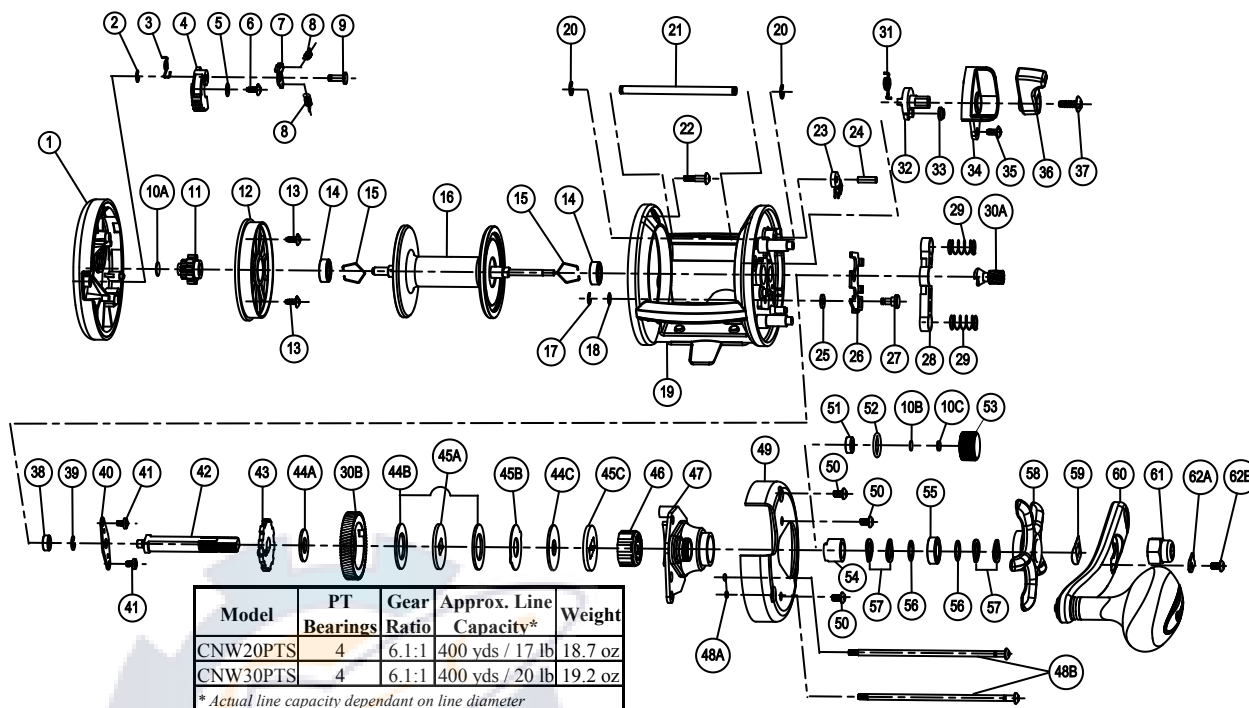

Model	PT Bearings	Gear Ratio	Approx. Line Capacity*	Weight
CNW20PTS	4	6.1:1	400 yds / 17 lb	18.7 oz
CNW30PTS	4	6.1:1	400 yds / 20 lb	19.2 oz

* Actual line capacity dependant on line diameter

Key #	Description	Part No.	
		CNW20PTS	CNW30PTS
1	Left Side Cover Assembly	KV323-03	⇄
2	Click Pawl Post E-Clip	NX092-01	⇄
3	Bait Click Lever Spring	KV022-01	⇄
4	Bait Click Lever	LV109-01	⇄
5	Bait Click Lever Washer	KV038-01	⇄
6	Bait Click Lever Screw	AV125-01	⇄
7	Bait Click Pawl	KV114-01	⇄
8	Bait Click Spring	KV110-01	⇄
9	Bait Click Pawl Post	KV098-01	⇄
10	Spool Tension Washer Kit includes 10A-Spool Shaft Washer 10B-Spool Tension Washer 10C-CushionWasher	XX4038-01	⇄
11	Oscillate Drive Gear	KV112-01	⇄
12	Spool Cover	KV051-01	⇄
13	Spool Cover Screw	AV125-01	⇄
14	Spool Shaft Bearing	CW017-02	⇄
15	Clip Ring	KV080-01	⇄
16	Spool Assembly	KV321-02	LV321-02
17	Kick Lever Guide Post E-Clip	NX092-01	⇄
18	Kick Lever Guide Post Washer	XX035-01	⇄
19	Frame Assembly	NV301-03	PV301-03
20	Line Guard E-Clip	QW120-01	⇄
21	Line Guard	NV061-01	PV061-01
22	Left Side Cover Screw	NV123-01	⇄
23	Anti Reverse Pawl Assembly	KV363-01	⇄
24	Anti Reverse Pawl Post	JX098-01	⇄
25	Release Slider Spacer	KV111-01	⇄
26	Release Slider	KV039-01	⇄
27	Kick Lever Guide Post	JX102-01	⇄
28	Pinion Yoke	KV025-01	⇄
29	Pinion Yoke Spring	JX040-01	⇄
30	Gear Set includes 30A-Pinion Gear 30B-Drive Gear	LV4012-01	⇄
31	Release Slider Cam Spring	KV104-01	⇄
32	Release Slider Cam	KV141-01	⇄
33	Release Slider Guide Bushing	JX068-01	⇄
34	Release Lever Cover	LV143-01	⇄
35	Release Slider Screw	XX050-01	⇄
36	Release Lever	LV142-01	⇄
37	Release Lever Screw	KV053-01	⇄
38	Crank Shaft Bushing(L)	JX017-01	⇄
39	Crank Shaft Retainer E-Clip	QW120-01	⇄
40	Crank Shaft Retainer	JX002-01	⇄

Key #	Description	Part No.	
		CNW20PTS	CNW30PTS
41	Crank Shaft Retainer Screw	JX107-01	⇄
42	Crank Shaft	NV008-02	⇄
43	Ratchet	KV083-01	⇄
44	Drag Disc Kit includes 44A-Ratchet Washer 44B-Drag Disc~A~ 44C-Drag Disc~B~	AV4059-01	⇄
45	Drag Washer Kit includes 45A-Drag ~D~ Washer (U) 45B-Drag Key Washer 45C-Drag ~D~ Washer (U)	LV4045-01	⇄
46	One Way Bearing	LV063-01	⇄
47	Crank Shaft Guide Assembly	LV366-01	⇄
48	Side Cover Screw & O-ring 48A-O-ring (1 pc.) 48B-Button Head Cap Screw (1 pc.)	LV4124-02	LV4124-01
49	Right Side Cover	KV024-10	KV024-12
50	Right Side Cover Screw	KV154-01	⇄
51	Bushing - Tension Knob	JX117-01	⇄
52	Tension Knob O Ring	QW101-01	⇄
53	Spool Tension Knob Kit includes 53-Spool Tension Knob 10-Spool Tension Washer Kit	KV4033-01	⇄
54	One Way Bearing Sleeve	PV052-01	⇄
55	Crank Shaft Bearing	BL157-01	⇄
56	Crank Shaft Washer	JX038-01	⇄
57	Spring "D" Washer	JX046-01	⇄
58	Star Drag	LV055-01	⇄
59	Handle Washer	NX054-01	⇄
60	Handle Assembly	LV318-01	⇄
61	Handle Nut	LV003-01	⇄
62	Handle Nut Retainer Kit includes 62A-Handle Nut Retainer 62B-Handle Nut Retainer Screw	LV4034-01	⇄