

HYPERCAST HC2 PARTS LIST

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1	UO332-02 Drag Knob Assembly	37	UO351-02 Bail Plate Assembly
2	AO038-01 Spool Ring	38	UO153 Link Shaft Spring
3	AO027 Drag Knob Click Claw	39	XO151-01 Link Shaft Arm
4	AO050 Spool Retainer	40	XO152-01 Link Shaft Holder
5	AO033 Drag Washer "B"	42	XO040-01 Snap Ring
6	AO029 Drag Washer "A"	43	BO028 Ball Bearing
7	AO046 Drag Washer "D"	44	UO110 Rotor Washer
8	UO160-02 Sleeve (Spool)	45	UO063 Clutch Bearing
9	UO321-02 Spool Assembly	46	KW052-02 Bushing/Bearing
10	BO030 Click Gear Washer	47	XO011-01 Pinion Gear
11	BO037 Click Gear	48	XO200-01 LW Gear
12	OL006 Rotor Nut	49	XO202-01 Bushing W/S Left
13	TL065 Rotor Retainer Washer	50	XO201-01 Worm Shaft
14	XO015-01 Main Shaft	51	XO204-01 Pawl Holder
15	XO009-01 Rotor	52	UO207-02 Pawl
16	XO052-01 Bail Holder Pin	53	UO208-02 Collar - LW/Pawl
17	W/X4665 E-Clip	54	UO209 Washer - LW/Pawl
18	UO049 Kick Lever Spring	55	XO205-01 Retainer - P/Holder
19	XO096-01 Link Holder	56	UO100-02 Screw - Main Shaft
20	XO019 Kick Lever	57	UO206 Retainer - Worm Shaft
21	UO024 Kick Lever Cover	58	UO203 Bushing W/S Right
22	AO085-02 K/L Cover Screw	59	UO352-02 Bail Trip Lever Assy
23	AO108-02 Screw	60	UO117 Spring - B/T Lever
24	XO007-01 Arm Lever	61	UO116 Lever Shaft
25	EO004 Line Roller (W/Bearing)	62	XO301-01 Body
26	UO347-02 Bail Assembly	63	XO012-01 Drive Gear
27	UO051-01 Arm Lever Pin	64	AO026-02 Washer - Gear
28	UO020 Bail Spring Holder	65	EO157 Body Cover Bearing
29	UO022 Bail Spring	66	XO023-01 Body Cover
30	UO031 Bail Spring Shaft	67	AO057-02 Screw - Body Cover
31	UO087 Arm Lever Spring Cover	68	KO057-02 Screw - Body Cover
32	UO397 Link Arm Lever	69	UO318-02 Handle Assembly
33	UO057 Screw - Body Cover	70	UO073 Handle Screw Cap
34	UO123 Plate Screw	71	BO105 Handle Cap Washer
35	XO120-01 Retaining Plate		
36	UO119 Shaft Spring		