



PARTS LIST

Key No.	Description	SE2 Part No.	SE3 Part No.	SE4 Part No.	SE5 Part No.
1	Drag Knob Assy	AO332	AO332	CO332	CO332
2	Drag Retainer	AO038	AO038	CO038	CO038
3	Spool Retainer	AO050	AO050	CO050	CO050
4	Spool W/S A	AO033	AO033	CO033	CO033
5	Spool W/S B	AO029	AO029	CO029	CO029
6	Spool W/S D	AO046	AO046	CO046	CO046
7	Spool Assy	EO321-1	EO321-1	GO321-1	GO321-1
8	Spool A/J W/S	AO030	AO030	CO030	CO030
9	Spool Click Gear	AO037	AO037	CO037	CO037
10	Main Shaft	AO015-1	AO015-1	CO015-1	CO015-1
11	Main Shaft S/C	AO1100	AO1100	UL1006	UL1006
12	Rotor Nut	AO006	AO006	UL0065	UL0065
13	Rotor Retainer W/S	EO009-1	EO009-1	GO009-1	GO009-1
14	Rotor	EO096	EO096	GO096	GO096
15	Trip Link Spring	PL097	PL097	PL115	PL115
16	Trip Link	PL115	PL115	PL115	PL115
17	E-Clip	NI034	NI034	NI034	NI034
18	Spring Shaft	EO017-1	EO017-1	GO017-1	GO017-1
19	Bail Spring	EO004-1	EO004-1	GO004-1	GO004-1
20	Spring Holder	EO347-1	EO347-1	GO347-1	GO347-1
21	Bail Spring Cover	AO044	AO044	SL108	SL108
22	Rotor Cover S/C	AO087-1	AO087-1	CO087-1	CO087-1
23	Arm Lever	AO085	AO085	GO085	GO085
24	Arm Lever S/C	AO051	AO051	GO051	GO051
25	Bail Collar	EO017-1	EO017-1	GO017-1	GO017-1
26	Line Roller	EO004-1	EO004-1	GO004-1	GO004-1
27	Bail Assy	EO347-1	EO347-1	GO347-1	GO347-1
28	Bail Holder S/C	AO044	AO044	SL108	SL108
29	Kick Lever	AO019-1	AO019-1	CO019-1	CO019-1
30	Kick Lever Cover	AO024-1	AO024-1	CO024-1	CO024-1
31	Bearing Plate S/C	AO080	AO080	CO080	CO080
32	Bearing Plate	AO040-1	AO040-1	CO040-1	CO040-1
33	Rotator - Rotor	AO028	AO028	CO028	CO028
34	Ratchet Gear	PL060	BO060	CO060	CO060
35	Prinion Gear	AO011-1	BO011-1	CO011-1	CO011-1
36	Handle Cap W/S	AO105	BO105	CO105	CO105
37	Handle S/C Cap	EO001-1	BO001-1	CO001-1	CO001-1
38	Body	EO073	AL073	OL073	HO001-1
39	Stopper Bushing	EO001-1	BO001-1	CO001-1	CO001-1
40	Stopper-A	NI064	BO064	OL064	NI091
41	Stopper-B	NI063	BO063	OL063	NI091
42	Stopper Lever	AO059	BO059	CO059	NI091
43	Stopper L/R Spring	AO061	BO061	CO061	OL063
44	Stopper S/C	AO083	BO083	CO083	OL063
45	Body Bushing	AO013-1	AO013-1	CO013-1	OL063
46	Sliding Spring	AO086	AO086	GO086	OL063
47	Drive Gear	EO012	BO012-1	GO012	OL063
48	Drive Gear A/J W/S	AO026	AO026	GO026	OL063
49	Body Cover B/B	EO157	EO157	GO157	OL063
50	O/S Gear	AO053	AO053	CO053	OL063
51	O/S Gear S/C	AO078	AO078	WK078	OL063
52	O/S Pivot Arm	AO025	BO025	CO025	OL063
53	O/S Pivot Arm W/S	AO056	AO056	GO056	OL063
54	Body Cover	EO023-1	AO057	GO023-1	OL063
55	Body Cover S/C	AO057	AO057	GO057	OL063
56	Handle Assy	AL318	AL318	OL318	OL063
57	Kick Lever Spring	AO049-1	AO049-1	RL094	OL063
58	Rotor Nut Lock S/C	AO082-1	AO082-1	CO082-1	OL063
59	Kick Lever Guide	AO077	AO077	CO077	OL063
60	Kick Lever S/C	AO080-1	AO080-1	CO080-1	OL063
61	Bearing Plate S/C	AO057	AO057	GO057	OL063
62	Bearing Plate	AO080-1	AO080-1	CO080-1	OL063
63	Body Cover S/C	KO057	KO057	AO080-1	OL063
64	Body Cover S/C	KO057	KO057	AO080-1	OL063
65	Body Cover S/C	KO057	KO057	AO080-1	OL063
66	Body Cover S/C	KO057	KO057	AO080-1	OL063
67	Body Cover S/C	KO057	KO057	AO080-1	OL063