



PARTS LIST

Key No.	Description	SE2 Part No.	SE3 Part No.	SE4 Part No.	SE5 Part No.
1	Drag Knob Assy	AO332	AO332	CO332	CO332
2	Drag Retainer	AO038	AO038	CO038	CO038
3	Spool Retainer	AO050	AO050	CO050	CO050
4	Spool W/S A	AO033	AO033	CO033	CO033
5	Spool W/S B	AO029	AO029	CO029	CO029
6	Spool W/S D	AO046	AO046	CO046	CO046
7	Spool Assy	EO321-1	EO321-1	GO321-1	GO321-1
8	Spool A/J W/S	AO030	AO030	CO030	CO030
9	Spool Click Gear	AO037	AO037	CO037	CO037
10	Main Shaft	AO015-1	AO015-1	CO015-1	CO015-1
11	Main Shaft S/C	AO1100	AO1100	UL0100	UL0100
12	Rotor Nut	AO006	AO006	UL006	UL006
13	Rotor Retainer W/S	EO009-1	EO009-1	GO009-1	GO009-1
14	Rotor	EO096	EO096	GO096	GO096
15	Spring Shaft	EO017-1	EO017-1	GO017-1	GO017-1
16	Bail Spring	EO004-1	EO004-1	GO004-1	GO004-1
17	Spring Holder	EO347-1	EO347-1	GO347-1	GO347-1
18	Spring Holder	AO044	AO044	SL108	SL108
19	E-Clip	AO019-1	AO019-1	CO019-1	CO019-1
20	Trip Link	AO024-1	AO024-1	CO024-1	CO024-1
21	Trip Lever	AO080	AO080	CO080	CO080
22	Line Roller	AO040-1	AO040-1	CO040-1	CO040-1
23	Line Roller	AO028	AO028	CO028	CO028
24	Bail Assy	AO011-1	AO011-1	CO011-1	CO011-1
25	Bail Holder S/C	AO105	AO105	BO105	BO105
26	Bail S/C	EO001-1	EO001-1	GO001-1	GO001-1
27	Kick Lever	AO019-1	AO019-1	CO019-1	CO019-1
28	Kick Lever Cover	AO024-1	AO024-1	CO024-1	CO024-1
29	Bearing Plate S/C	AO080	AO080	CO080	CO080
30	Bearing Plate	AO040-1	AO040-1	CO040-1	CO040-1
31	Ratchet Gear	AO028	AO028	CO028	CO028
32	Ratchet Gear	AO060	AO060	CO060	CO060
33	Prion Gear	AO011-1	AO011-1	CO011-1	CO011-1
34	Prion Gear	AO105	AO105	BO105	BO105
35	Handle Cap W/S	AO073	AO073	CO073	CO073
36	Handle S/C Cap	EO001-1	EO001-1	GO001-1	GO001-1
37	Body	AO086	AO086	CO086	CO086
38	Stopper Bushing	EO012	EO012	GO012	GO012
39	Stopper-A	AO026	AO026	CO026	CO026
40	Stopper-B	EO157	EO157	GO157	GO157
41	Stopper-Lever	AO053	AO053	CO053	CO053
42	Stopper-Lever	AO078	AO078	CO078	CO078
43	Stopper-L/R Spring	AO078	AO078	CO078	CO078
44	Stopper S/C	AO083	AO083	CO083	CO083
45	Body Bushing	AO013-1	AO013-1	CO013-1	CO013-1
46	Sliding Spring	AO086	AO086	CO086	CO086
47	Drive Gear	EO012	EO012	GO012	GO012
48	Drive Gear A/J W/S	AO026	AO026	CO026	CO026
49	Body Cover B/B	EO157	EO157	GO157	GO157
50	O/S Gear	AO053	AO053	CO053	CO053
51	O/S Gear S/C	AO078	AO078	CO078	CO078
52	O/S Pivot Arm	AO025	AO025	CO025	CO025
53	O/S Pivot Arm W/S	AO056	AO056	CO056	CO056
54	Body Cover	EO023-1	EO023-1	GO023-1	GO023-1
55	Body Cover S/C	AO057	AO057	CO057	CO057
56	Handle Assy	AL318	AL318	OL318	OL318
57	Kick Lever Spring	AO049-1	AO049-1	CO049-1	CO049-1
58	Rotor Nut Lock S/C	AO082-1	AO082-1	CO082-1	CO082-1
59	Kick Lever Guide	AO077	AO077	CO077	CO077
60	Kick Lever S/C	AO080-1	AO080-1	CO080-1	CO080-1
61	Bearing Plate S/C	AO057	AO057	CO057	CO057
62	Bearing Plate S/C	AO057	AO057	CO057	CO057
63	Body Cover S/C	AO057	AO057	CO057	CO057
64	Body Cover S/C	AO057	AO057	CO057	CO057
65	Body Cover S/C	AO057	AO057	CO057	CO057
66	Body Cover S/C	AO057	AO057	CO057	CO057
67	Body Cover S/C	AO057	AO057	CO057	CO057