



PARTS LIST

Key No.	Description	SE2 Part No.	SE3 Part No.	SE4 Part No.	SE5 Part No.
1	Drag Knob Assy	AO332	AO332	CO332	CO332
2	Drag Retainer	AO038	AO038	CO038	CO038
3	Spool Retainer	AO050	CO050	CO050	CO050
4	Spool W/S A	AO033	AO033	CO033	CO033
5	Spool W/S B	AO029	AO029	CO029	CO029
6	Spool W/S D	AO046	AO046	CO046	CO046
7	Spool Assy	EO321-1	EO321-1	GO321-1	GO321-1
8	Spool A/J W/S	AO030	AO030	CO030	CO030
9	Spool Click Gear	AO037	AO037	CO037	CO037
10	Main Shaft	AO015-1	AO015-1	CO015-1	CO015-1
11	Main Shaft S/C	AO1100	AO1100	UL1006	UL1006
12	Rotor Nut	AO006	AO006	UL0065	UL0065
13	Rotor Retainer W/S	EO009-1	EO009-1	GO009-1	GO009-1
14	Rotor	EO096	EO096	GO096	GO096
15	Rotor Retainer	EO096	EO096	GO096	GO096
16	Rotor Retainer W/S	EO096	EO096	GO096	GO096
17	Spring Shaft	EO017-1	EO017-1	GO017-1	GO017-1
18	Spring	EO004-1	EO004-1	GO004-1	GO004-1
19	Spring Holder	EO047-1	EO047-1	GO047-1	GO047-1
20	Spring Holder	EO047-1	EO047-1	GO047-1	GO047-1
21	Spring	EO004-1	EO004-1	GO004-1	GO004-1
22	Spring	EO004-1	EO004-1	GO004-1	GO004-1
23	Spring	EO004-1	EO004-1	GO004-1	GO004-1
24	Spring Holder	EO047-1	EO047-1	GO047-1	GO047-1
25	Ball Spring Cover	EO047-1	EO047-1	GO047-1	GO047-1
26	Rotor Cover S/C	AO087-1	AO087-1	CO087-1	CO087-1
27	Arm Lever	AO085	AO085	CO085	CO085
28	Arm Lever S/C	AO051	AO051	CO051	CO051
29	Line Roller	EO017-1	EO017-1	GO017-1	GO017-1
30	Line Roller	EO004-1	EO004-1	GO004-1	GO004-1
31	Bail Holder S/C	EO347-1	EO347-1	GO347-1	GO347-1
32	Bail S/C	AO044	AO044	CO044	CO044
33	Kick Lever	AO019-1	AO019-1	CO019-1	CO019-1
34	Kick Lever Cover	AO024-1	AO024-1	CO024-1	CO024-1
35	Bearing Plate S/C	AO080	AO080	CO080	CO080
36	Bearing Plate	AO040-1	AO040-1	CO040-1	CO040-1
37	Rotator	AO028	AO028	CO028	CO028
38	Ratchet Gear	AO011-1	AO011-1	CO011-1	CO011-1
39	Prinion Gear	AO105	AO105	CO105	CO105
40	Handle Cap W/S	EO073	EO073	GO073	GO073
41	Handle S/C Cap	EO001-1	EO001-1	GO001-1	GO001-1
42	Body	AO086	AO086	CO086	CO086
43	Stopper Bushing	AO064	AO064	CO064	CO064
44	Stopper-A	AO063	AO063	CO063	CO063
45	Stopper-B	AO059	AO059	CO059	CO059
46	Stopper Lever	AO061	AO061	CO061	CO061
47	Stopper L/R Spring	AO083	AO083	CO083	CO083
48	Stopper S/C	AO013-1	AO013-1	CO013-1	CO013-1
49	Body Bushing	AO086	AO086	CO086	CO086
50	Sliding Spring	EO012	EO012	GO012	GO012
51	Drive Gear	AO026	AO026	CO026	CO026
52	Drive Gear A/J W/S	EO157	EO157	GO157	GO157
53	Body Cover B/B	AO053	AO053	CO053	CO053
54	O/S Gear	AO078	AO078	CO078	CO078
55	O/S Gear S/C	AO025	AO025	CO025	CO025
56	O/S Pivot Arm	AO056	AO056	CO056	CO056
57	O/S Pivot Arm W/S	EO023-1	EO023-1	GO023-1	GO023-1
58	Body Cover	AO057	AO057	CO057	CO057
59	Body Cover S/C	AO057	AO057	CO057	CO057
60	Handle Assy	AL318	AL318	OL318	OL318
61	Kick Lever Spring	AO049-1	AO049-1	CO049-1	CO049-1
62	Rotor Nut Lock S/C	AO082-1	AO082-1	CO082-1	CO082-1
63	Kick Lever Guide	AO077	AO077	CO077	CO077
64	Kick Lever S/C	AO080-1	AO080-1	CO080-1	CO080-1
65	Bearing Plate S/C	AO057	AO057	CO057	CO057
66	Bearing Plate S/C	AO080-1	AO080-1	CO080-1	CO080-1
67	Body Cover S/C	KO057	KO057	—	—