



## PARTS LIST

Key No.	Description	SE2 Part No.	SE3 Part No.	SE4 Part No.	SE5 Part No.
1	Drag Knob Assy	AO332	AO332	CO332	CO332
2	Drag Retainer	AO038	AO038	CO038	CO038
3	Spool Retainer	AO050	CO050	CO050	CO050
4	Spool W/S A	AO033	AO033	CO033	CO033
5	Spool W/S B	AO029	AO029	CO029	CO029
6	Spool W/S D	AO046	AO046	CO046	CO046
7	Spool Assy	EO321-1	EO321-1	GO321-1	GO321-1
8	Spool A/J W/S	AO030	AO030	CO030	CO030
9	Spool Click Gear	AO037	AO037	CO037	CO037
10	Main Shaft	AO015-1	AO015-1	CO015-1	CO015-1
11	Main Shaft S/C	AO1100	AO1100	UL1006	UL1006
12	Rotor Nut	AO006	AO006	UL0065	UL0065
13	Rotor Retainer W/S	EO009-1	EO009-1	GO009-1	GO009-1
14	Rotor	EO096	EO096	GO096	GO096
15	Rotor Retainer	EO096	EO096	GO096	GO096
16	Rotor Retainer W/S	EO096	EO096	GO096	GO096
17	Spring Shaft	EO096	EO096	GO096	GO096
18	Spring	EO096	EO096	GO096	GO096
19	Spring	EO096	EO096	GO096	GO096
20	E-Clip	EO096	EO096	GO096	GO096
21	Spring Shaft	EO096	EO096	GO096	GO096
22	Spring	EO096	EO096	GO096	GO096
23	Spring Holder	EO096	EO096	GO096	GO096
24	Spring Holder	EO096	EO096	GO096	GO096
25	Ball Spring Cover	EO096	EO096	GO096	GO096
26	Rotor Cover S/C	EO096	EO096	GO096	GO096
27	Arm Lever	EO096	EO096	GO096	GO096
28	Ball Collar	EO096	EO096	GO096	GO096
29	Line Roller	EO096	EO096	GO096	GO096
30	Bail Assy	EO096	EO096	GO096	GO096
31	Bail Holder S/C	EO096	EO096	GO096	GO096
32	Bail S/C	EO096	EO096	GO096	GO096
33	Kick Lever	EO096	EO096	GO096	GO096
34	Kick Lever Cover	EO096	EO096	GO096	GO096
35	Bearing Plate S/C	EO096	EO096	GO096	GO096
36	Bearing Plate	EO096	EO096	GO096	GO096
37	Rotator - Rotor	EO096	EO096	GO096	GO096
38	Ratchet Gear	EO096	EO096	GO096	GO096
39	Prinion Gear	EO096	EO096	GO096	GO096
40	Handle Cap W/S	EO096	EO096	GO096	GO096
41	Handle S/C Cap	EO096	EO096	GO096	GO096
42	Body	EO096	EO096	GO096	GO096
43	Stopper Bushing	EO096	EO096	GO096	GO096
44	Stopper-A	EO096	EO096	GO096	GO096
45	Stopper-B	EO096	EO096	GO096	GO096
46	Stopper Lever	EO096	EO096	GO096	GO096
47	Stopper L/R Spring	EO096	EO096	GO096	GO096
48	Stopper S/C	EO096	EO096	GO096	GO096
49	Body Bushing	EO096	EO096	GO096	GO096
50	Sliding Spring	EO096	EO096	GO096	GO096
51	Drive Gear	EO096	EO096	GO096	GO096
52	Drive Gear A/J W/S	EO096	EO096	GO096	GO096
53	Body Cover B/B	EO096	EO096	GO096	GO096
54	O/S Gear	EO096	EO096	GO096	GO096
55	O/S Gear S/C	EO096	EO096	GO096	GO096
56	O/S Pivot Arm	EO096	EO096	GO096	GO096
57	O/S Pivot Arm W/S	EO096	EO096	GO096	GO096
58	Body Cover	EO096	EO096	GO096	GO096
59	Body Cover S/C	EO096	EO096	GO096	GO096
60	Handle Assy	EO096	EO096	GO096	GO096
61	Kick Lever Spring	EO096	EO096	GO096	GO096
62	Rotor Nut Lock S/C	EO096	EO096	GO096	GO096
63	Kick Lever Guide	EO096	EO096	GO096	GO096
64	Kick Lever S/C	EO096	EO096	GO096	GO096
65	Bearing Plate S/C	EO096	EO096	GO096	GO096
66	Bearing Plate S/C	EO096	EO096	GO096	GO096
67	Body Cover S/C	EO096	EO096	GO096	GO096