



| KEY # | DESCRIPTION |
|-------|--------------------|
| 1 | DRAG KNOB ASSEMBLY |
| 2 | DRAG RETAINER |
| 3 | KEY WASHER |
| 4 | EARED WASHER |
| 5 | DRAG WASHER |
| 6 | SPOOL ASSEMBLY |

| | |
|----|--------------------------|
| 7 | SPOOL WASHER |
| 8 | CLICK GEAR |
| 9 | NUT FIXING BUSHING |
| 10 | SCREW |
| 11 | ROTOR NUT |
| 12 | E-CLIP |
| 13 | WASHER |
| 14 | MAIN SHAFT |
| 15 | ROTOR |
| 16 | SPRING |
| 17 | KICK LEVER |
| 18 | BAIL SEAT |
| 19 | SCREW |
| 20 | BAIL ASSEMBLY |
| 21 | LINE ROLLER BALL BEARING |
| 22 | LINE ROLLER |
| 23 | LINE ROLLER WASHER |
| 24 | ARM LEVER ASSEMBLY |
| 25 | LINE SLIDER SCREW |
| 26 | SCREW |
| 27 | SPRING |
| 28 | BAIL ARM FLIP LEVER |
| 29 | SCREW |
| 30 | SCREW |
| 31 | ANTI-REVERSE PLATE |

| KEY # | DESCRIPTION |
|-------|---|
| 32 | BAIL KICK LEVER |
| 33 | SPRING |
| 34 | BAIL KICK LEVER SEAT |
| 35 | ARM LEVER COVER |
| 36 | ANTI-REVERSE RETAINER |
| 37 | SPRING |
| 38 | BALL BEARING |
| 39 | PINION GEAR |
| 40 | SCREW |
| 41 | HANDLE CAP SCREW |
| 42 | HANDLE SCREW WASHER |
| 43 | BODY |
| 44 | ANTI-REVERSE PAWL SCREW |
| 45 | ANTI-REVERSE PAWL |
| 46 | SPRING |
| 47 | ANTI-REVERSE CAM |
| 48 | ANTI-REVERSE LEVER |
| 49 | BALL BEARING |
| 50 | DRIVE GEAR |
| 51 | ADJUST WASHER |
| 52 | BALL BEARING |
| 53 | BODY COVER |
| 54 | BODY COVER SCREW |
| 55 | BODY REAR COVER |
| 56 | BODY REAR COVER SCREW |
| 57 | O/S GEAR BUSHING |
| 58 | O/S GEAR |
| 59 | O/S SLIDER |
| 60 | MAIN SHAFT SCREW |
| 61 | HANDLE ASSEMBLY (INCLUDING TWO BALL BEARINGS) |