



## Quantum RELIANCE Part List

Key No.	Description	Part No.	Q'TY	Key No.	Description	Part No.	Q'TY
		REL55XPT				REL55XPT	
1	Drag Knob Assembly	EAK332-01	1	28	Bail Wire Assembly	EAK347-01	1
2	Spool Kit Include	EAK421-01	1	29	Silent Ring	EAK059-01	1
	2A - Retaining Ring	EAK172-01	1	30	Coil Spring	EAK069-01	1
	2B - Drag Washer "D"	EAK080-01	3	31	Silent Ring Sleeve Unit	EAK378-01	1
	2C - Drag Washer "A"	EAK081-01	3	32	Pinion Ball Bearing Holder Screw	EAK051-01	3
	2D - Drag Washer "B"	EAK033-01	5	33	Pinion Ball Bearing Holder	EAK122-01	1
	2E - Bushing	EAK058-01	1	34	Pinion Ball Bearing Holder Seal	EAK263-01	1
	2F - Spool Assembly	EAK321-01	1	35	Pinion Ball Bearing	CP058-04	4
	2G - Clicker Holder	EAK204-01	1	36	Pinion Ball Bearing Retainer	EAK040-01	1
	2H - Clicker	EAK103-01	1	37	Clutch Unit	EAK463-01	1
	2I - Clicker Spring	EAK068-01	1	38	Pinion	EAK011-01	1
	2J - Clicker Spring Screw	EAK114-01	1	39	Trip Bumper Screw	EAK123-01	1
	2K - Clicker Screw	EAK246-01	1	40	Rotor Brake Screw	EAK135-01	1
	2L - Line Clip Spring	EAK049-01	1	41	Trip Bumper	EAK119-01	1
	2M - Line Clip	EAK128-01	1	42	Rotor Brake	EAK145-01	1
	2N - Line Clip Screw	EAK054-01	1	43	E-Clip	QW120-01	1
3	Retainer Ring	EAK038-01	1	44	Anti-Reverse Actuator	EAK090-01	1
4	Spool Ball Bearing	KT158-05	1	45	Anti-Reverse Actuator Spring	EAK089-01	1
5	Seal	EAK251-01	1	46	Anti-Reverse Actuator Spring Spacer	EAK091-01	1
6	Spool Adjust Washer	EAK030-01	1	47	Handle Screw Cap	EAK073-01	1
7	Main Shaft Assembly	EAK315-01	1	48	Handle Screw Cap Seal	EAK266-01	1
8	Rotor Nut Retainer Screw	EAK094-01	3	49	Cosmetic Ring Screw	EAK107-01	6
9	Rotor Nut Retainer	EAK118-01	1	50	Cosmetic Ring	EAK142-01	2
10	Rotor Nut Retainer Seal	EAK265-01	1	51	Body	EAK001-01	1
11	Rotor Nut	EAK006-01	1	52	Side Cover Seal	EAK254-01	1
12	Rotor Seal	EAK264-01	2	53	Drive Gear	EAK012-01	1
13	Arm Lever Screw	EAK225-01	2	54	Drive Gear Ball Bearing Seal Plate	EAK255-01	2
14	Bail Holder	EAK017-01	1	55	Drive Gear Ball Bearing Seal	EAK262-01	2
15	Rotor	EAK009-01	1	56	Drive Gear Ball Bearing Screw	EAK220-01	6
16	Kick Lever	EAK019-01	1	57	Side Cover	EAK023-01	1
17	Cam	EAK031-01	1	58	Side Cover Screw	EAK057-02	1
18	Coil Spring	EAK022-01	1	59	Side Cover Screw	EAK057-01	3
19	Rotor Cover	EAK087-01	1	60	O/S Gear Assembly	EAK353-01	1
20	Rotor Cover Screw	EAK077-01	1	61	O/S Gear Screw	EAK111-01	1
21	Line Roller Screw	EAK108-01	1	62	Slider	EAK025-01	1
22	Arm Lever	EAK007-01	1	63	Main Shaft Screw	EAK100-01	2
23	Line Roller Collar	EAK102-01	1	64	Guide Pin	EAK211-01	1
24	Line Roller Washer	EAK102-51	1	65	O/S Slider Plate	EAK084-01	1
25	Bushing	EAK016-01	2	66	O/S Slider Plate Screw	EAK085-01	2
26	Line Roller	EAK004-01	1	67	Handle Assembly	EAK318-01	1
27	Line Roller Washer	EAK102-52	1				