



TT No.	PARTS NAMES	TT No.	PARTS NAMES	TT No.	PARTS NAMES
001	Drive Shaft Washer	141	Pressure Plate Spring	220	Lever Hub Cover Screws
004B	Bearing Thrust Washer	142	Shaft Insert Spring	221	locator
007	Lever Shaft Washer	143	Drive Shaft Spring	222	Lever Shaft Bbdy
008	Bearing Thrust Washer	144	Ball Bearing<1 Pc>	223	Pre-Program key
013	Drag Plate	145	Friction Shoe Spring	224	Pre-Program key Pin
014	Pre-load Spring	147	Alert Ratchet Screws	225	Pre-Program Screw
016-2	Spacer	149	locator Screws (A)	228	Pre-Program Dial
017-1	Drag Washer	150	locator Screws (B)	230	washer
018	Handle Assembly	151	Dial Click Shoe	232	Push Button Shaft Assembly
023	Alert Ratchet	155	locator Shaft	233	Drive Shaft
025	Lever Thrust Ring (B)	163	Button Shield	234	Cooling Shield
026	Rod Clamp	164	Handle Plate	235	Pressure Plate
027	Dial Washer	171	Handle Plate Spring	237	Rod Clamp Screws
028	Harness Lugs	180	Set Plate Screw	238	Lever Thrust Ring (A)
030	Wrench	181	Button Screw	239	Friction Washer
031	Spring	182	Stand Screws Screw Nut (B)	240	Friction Washer
039	Clicker Pawl	184	Cross Pin Support	241	Set Plate Pin
079	Ball Bearing<3 Pes>	185	Strike Alert Lever Assembly	242	Pin Pawl
084	Ball Bearing<1 Pc>	188	Harness Lug	243	Drive Gear (A)
085	Ball Bearing<1 Pc>	194	Alert Spring	244	Drive Gear (B)
114	Strike Stop	198	Drive shaft spring	245	Main Shaft<A>
115	Spool Detent	199	Plunger Pin (A)	246	Main Shaft
118	Bar Stop	200	Plunger Pin (B)	247	Left Side Plate Screws
119	Gear Cross Bar	201	Alert Socket (B)	248	Drag Plate Circlip
120	Drive Shaft Screw	202	Alert Socket Washer	249	Cross Pin Spring
126	Cross Pin	214	Left Side Plate	259	Right Side Plate
129	Cross Pin	215	One-Piece Frame	261	Wrench
135	Set Plate Screw	216	Ringht Side Plate	265	Set Plate Screw
136	Cooling Shield Screws	217	Spool	282	Alert Plunger
137	Left Side Plate Screws	218	Drag Control Lever Assembly	283	Slide Plate
139	"E" Lock	219	Lever Quadrant	286	Drag Washer Screws