



30W
(8 BB)

TT No.	PARTS NAMES	TT No.	PARTS NAMES	TT No.	PARTS NAMES
003	Thrust Washer	090	Main Shaft	145	Friction Shoe Spring
004B	Bearing Thrust Washer	093	Main Shaft<A>	146	Sheath
007	Lever Shaft Washer	097	Drive Gear (A)	147	Alert Ratchet Screws
008	Bearing Thrust Washer	099	Drive Gear (B)	149	locator Screws (A)
011-1	Drag Washer	102	Pre-Program Dial	150	locator Screws (B)
014	Pre-load Spring	105	Pre-Program key Pin	151	Dial Click Shoe
015	Drag Plate	106	Pre-Program Screw	155	locator Shaft
016-2	Spacer	107	Lever Shaft Bbdy	156	Lever Thrust Ring (A)
019	Handle Assembly	108	Pre-Program key	162	Slide Plate
024	Alert Ratchet	109	Friction Washer	163	Button Shield
025	Lever Thrust Ring (B)	110	Friction Washer	164	Handle Plate
026	Rod Clamp	111	Drive Shield	171	Handle Plate Spring
027	Dial Washer	114	Strike Stop	176	Cross Pin Spring
028	Harness Lugs	115	Spool Detent	180	Set Plate Screw
030	Wrench	116	Push Button Shaft Assembly	181	Button Screw
031	Spring	117	Mast Gearlever	182	Stand Screws Screw Nut (B)
033	locator	118	Bar Stop	183	Alert Plunger
036	Drag Control Lever Assembly	119	Gear Cross Bar	184	Cross Pin Support
039	Clicker Pawl	120	Drive Shaft Screw	185	Strike Alert Lever Assembly
040	Lever Quadrant	123	Drive Shaft	188	Harness Lug
043	Lever Hub Cover Screws	125	Set Plate Pin	189	Rod Clamp Screws
066	One-Piece Frame	126	Cross Pin	191	Stand Screws Screw Nut (A)
067	Ringht Side Plate	129	Cross Pin	194	Alert Spring
068	Left Side Plate	131	Cooling Shield	195	Drag Plate Circlip
070	Spool	135	Set Plate Screw	198	Drive shaft spring
079	Ball Bearing<3 Pcs>	136	Cooling Shield Screws	199	Plunger Pin (A)
080	Ball Bearing<2 Pcs>	137	Left Side Plate Screws	200	Plunger Pin (B)
083	Ball Bearing<1 Pc>	139	"E" Lock	201	Alert Socket (B)
084	Ball Bearing<1 Pc>	141	Pressure Plate Spring	202	Alert Socket Washer
085	Ball Bearing<1 Pc>	142	Shaft Insert Spring	261	Wrench
086	Pressure Plate	143	Drive Shaft Spring	286	Drag Washer Screws