



TT No.	PARTS NAMES	TT No.	PARTS NAMES	TT No.	PARTS NAMES
003	Thrust Washer	087	Pressure Plate	145	Friction Shoe Spring
004	Bearing Thrust Washer	091	Main Shaft	147	Alert Ratchet Screws
004B	Bearing Thrust Washer	094	Main Shaft<A>	148	Harness Lug
007	Lever Shaft Washer	097	Drive Gear (A)	149	locator Screws (A)
011-1	Drag Washer	100	Drive Gear (B)	150	locator Screws (B)
015	Drag Plate	103	Pre-Program Dial	151	Dial Click Shoe
016-2	Spacer	105	Pre-Program key Pin	155	locator Shaft
020	Handle Assembly	106	Pre-Program Screw	156	Lever Thrust Ring (A)
024	Alert Ratchet	107	Lever Shaft Bbdy	162	Slide Plate
025	Lever Thrust Ring (B)	108	Pre-Program key	163	Button Shield
026	Rod Clamp	109	Friction Washer	164	Handle Plate
027	Dial Washer	110	Friction Washer	171	Handle Plate Spring
029	Harness Lugs	111	Drive Shield	175	Pressure Plate Spring
030	Wrench	114	Strike Stop	176	Cross Pin Spring
031	Spring	115	Spool Detent	180	Set Plate Screw
034	locator	116	Push Button Shaft Assembly	181	Button Screw
037	Drag Control Lever Assembly	117	Mast Gearlever	182	Stand Screws Screw Nut (B)
039	Clicker Pawl	118	Bar Stop	183	Alert Plunger
041	Lever Quadrant	119	Gear Cross Bar	184	Cross Pin Support
044	Lever Hub Cover Screws	120	Drive Shaft Screw	186	Strike Alert Lever Assembly
046	Pre-load Spring	123	Drive Shaft	189	Rod Clamp Screws
071	One-Piece Frame	125	Set Plate Pin	191	Stand Screws Screw Nut (A)
072	Ringht Side Plate	127	Cross Pin	194	Alert Spring
073	Left Side Plate	129	Cross Pin	195	Drag Plate Circlip
074	Spool	131	Cooling Shield	198	Drive shaft spring
080	Ball Bearing<2 Pcs>	135	Set Plate Screw	199	Plunger Pin (A)
081	Ball Bearing<1 Pc>	136	Cooling Shield Screws	200	Plunger Pin (B)
082	Ball Bearing<2 Pcs>	137	Left Side Plate Screws	201	Alert Socket (B)
083	Ball Bearing<1 Pc>	139	"E" Lock	202	Alert Socket Washer
084	Ball Bearing<1 Pc>	142	Shaft Insert Spring	261	Wrench
085	Ball Bearing<1 Pc>	143	Drive Shaft Spring	286	Drag Washer Screws