



TT No.	PARTS NAMES	TT No.	PARTS NAMES	TT No.	PARTS NAMES
002-2	Drag Washer	092	Axis	147	Alert Ratchet Screws
003	Thrust Washer	095	Main Shaft<A>	148	Harness Lug
004	Bearing Thrust Washer	096	Main Shaft	149	locator Screws (A)
004B	Bearing Thrust Washer	098	Drive Gear (A)	150	locator Screws (B)
007	Lever Shaft Washer	101	Drive Gear (B)	151	Dial Click Shoe
012	Drag Plate	104	Pre-Program Dial	155	locator Shaft
016-2	Spacer	105	Pre-Program key Pin	156	Lever Thrust Ring (A)
021	Handle Assembly	106	Pre-Program Screw	162	Slide Plate
022	Alert Ratchet	107	Lever Shaft Body	163	Button Shield
025	Lever Thrust Ring (B)	108	Pre-Program key	164	Handle Plate
026	Rod Clamp	109	Friction Washer	171	Handle Plate Spring
027	Dial Washer	110	Friction Washer	175	Pressure Plate Spring
029	Harness Lugs	111	Drive Shield	176	Cross Pin Spring
030	Wrench	114	Strike Stop	180	Set Plate Screw
031	Spring	115	Spool Detent	181	Button Screw
035	locator	116	Push Button Shaft Assembly	182	Stand Screws Screw Nut (B)
038	Drag Control Lever Assembly	117	Mast Gearlever	183	Alert Plunger
039	Clicker Pawl	118	Bar Stop	184	Cross Pin Support
042	Lever Quadrant	119	Gear Cross Bar	187	Strike Alert Lever Assembly
045	Lever Hub Cover Screws	120	Drive Shaft Screw	189	Rod Clamp Screws
046	Pre-load Spring	123	Drive Shaft	191	Stand Screws Screw Nut (A)
075	One-Piece Frame	125	Set Plate Pin	194	Alert Spring
076	Ringht Side Plate	128	Cross Pin	196	Drag Plate Circlip
077	Left Side Plate	129	Cross Pin	198	Drive shaft spring
078	Spool	132	Cooling Shield	199	Plunger Pin (A)
080	Ball Bearing<2 Pcs>	135	Set Plate Screw	200	Plunger Pin (B)
081	Ball Bearing<1 Pc>	136	Cooling Shield Screws	201	Alert Socket (B)
082	Ball Bearing<2 Pcs>	137	Left Side Plate Screws	202	Alert Socket Washer
083	Ball Bearing<1 Pc>	139	"E" Lock	261	Wrench
084	Ball Bearing<1 Pc>	142	Shaft Insert Spring	286	Drag Washer Screws
085	Ball Bearing<1 Pc>	143	Drive Shaft Spring		
088	Pressure Plate	145	Friction Shoe Spring		