


Carrera

Diagram

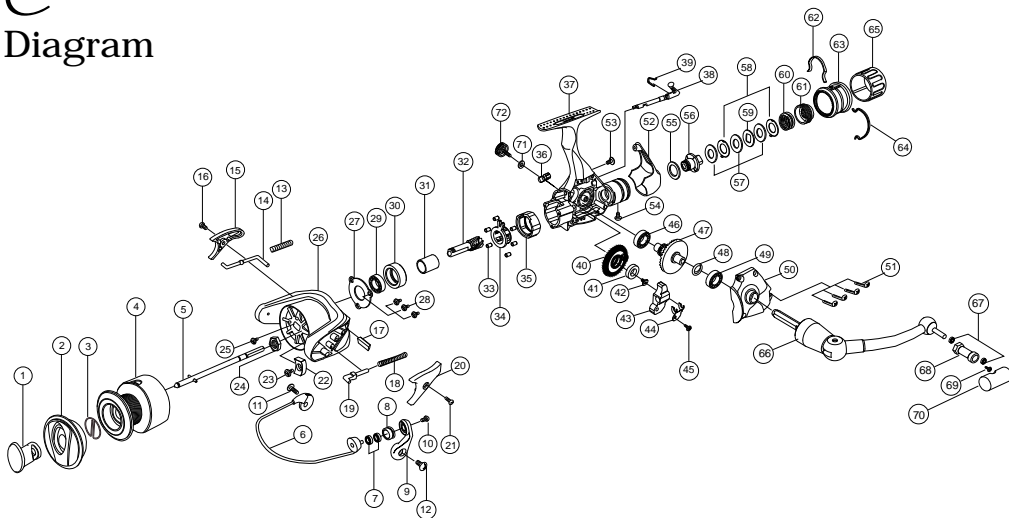

PARTS LIST

1. Button	25. Rotor Nut s/c	49. Ball Bearing 8 x 14 x 4
2. Spool Cap	26. Rotor	50. Body Cover Assy
3. Button s/p	27. One Way Ball Bearing Cover	51. Body Cover s/c
4. Spool Assy	28. One Way Ball Bearing Cover s/c	52. Body Rear Cap
5. Main Shaft Assy	29. Ball Bearing 8 x 14 x 4	53. Body Rear Cap s/c (Top)
6. Bail Assy	30. One Way Ball Bearing Holder	54. Body Rear Cap s/c (Bottom)
7. Ball Bearing 5 x 8 x 2.5	31. One Way Sleeve	55. Drag "C" Washer
8. Line Roller	32. Pinion Gear	56. Main Shaft Holder
9. Arm Lever	33. One Way Pin Roller	57. Drag "B" Washer
10. Bail s/c	34. One Way Retainer	58. Drag "A" Washer
11. Bail Holder s/c	35. One Way Housing	59. Drag "D" Washer
12. Arm Lever s/c	36. One Way Cam	60. Drag Coil s/p
13. Kick Lever s/p	37. Body	61. Rear Drag Slider
14. Kick Lever	38. Stopper Lever	62. Rear Drag Slider Retainer
15. Kick Lever Cover	39. Stopper Lever s/p	63. Rear Drag Knob
16. Kick Lever Cover s/c	40. Oscillation Gear	64. Rear Drag Knob Retainer
17. Side Balance	41. Oscillation Gear Bush	65. Rear Drag Knob Cover
18. Bail s/p	42. Oscillation Gear s/c	66. Handle Assy
19. Bail s/p holder	43. Oscillation Slider	67. Ball Bearing 4 x 7 x 2.5
20. Bail s/p cover	44. Oscillation Slider Stopper	68. Handle Knob Stand
21. Bail s/p cover s/c	45. Oscillation Slider stopper s/c	69. Handle s/c
22. Center Balance	46. Ball Bearing 8 x 14 x 4	70. Handle Wood Knob
23. Balance s/c	47. Drive Gear	71. Dust Cover w/s
24. Rotor Nut	48. Drive Gear Adjust Washer	72. Dust Cover