


Emerald

DIAGRAM

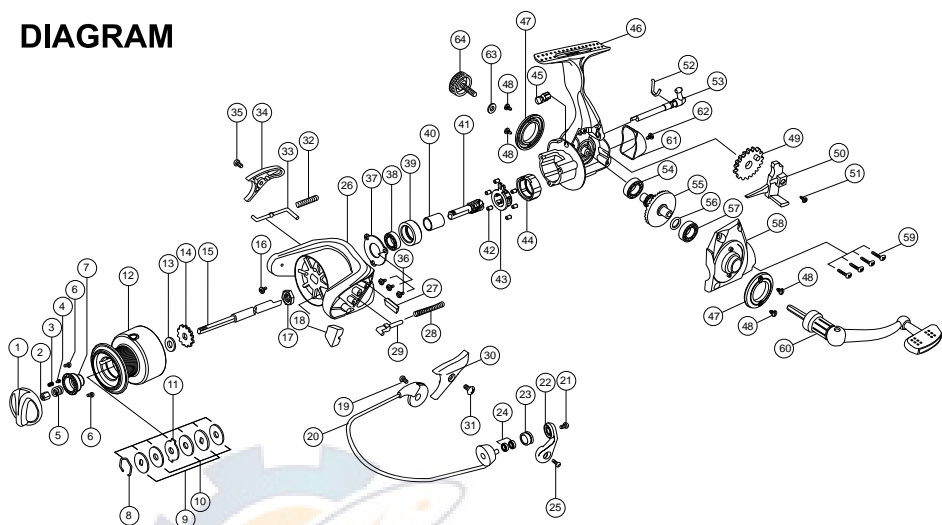

PART LIST

No.	Part List	No.	Part List	No.	Part List
1.	Drag Knob	23.	Line Roller	45.	One Way Cam
2.	Drag Nut	24.	Ball Bearing 5 x 8 x 2.5	46.	Body
3.	Drag Click Spring	25.	Arm Lever s/c	47.	Body Side Cap
4.	Drag Click Pin	26.	Rotor	48.	Body Side Cap s/c
5.	Drag Coil Spring	27.	Side Balance	49.	O/S Gear
6.	Drag Under Cap s/c	28.	Bail s/p	50.	O/S Slider
7.	Drag Under Cap	29.	Bail s/p Holder	51.	Main Shaft s/c
8.	Spool Ring	30.	Bail s/p Cover	52.	Stopper Lever s/p
9.	Spool "D" w/s	31.	Bail s/p Cover s/c	53.	Stopper Lever
10.	Spool "B" w/s	32.	Kick Lever s/p	54.	Ball Bearing 8 x 14 x 4
11.	Spool "A" w/s	33.	Kick Lever	55.	Drive Gear
12.	Spool Assy	34.	Kick Lever Cover	56.	Drive Gear Adj. w/s
13.	Spool Adj. w/s	35.	Kick Lever Cover s/c	57.	Ball Bearing 8 x 14 x 4
14.	Click Gear	36.	Ball Bearing Cover s/c	58.	Body Cover
15.	Main Shaft	37.	One Way B/B Cover	59.	Body Cover s/c
16.	Rotor Nut Lock s/c	38.	Ball Bearing 8 x 14 x 4	60.	Handle Assy
17.	Rotor Nut	39.	Ball Bearing Holder	61.	Body Rear Cap
18.	Center Balance	40.	One Way Sleeve	62.	Body Rear Cap s/c
19.	Bail Holder s/c	41.	Pinion Gear	63.	Dust Cover w/s
20.	Bail Assy	42.	One Way Pin Roller	64.	Dust Cover
21.	Bail s/c	43.	One Way Pin Roller Retainer		
22.	Arm Lever	44.	One Way Housing		