


# EPIRUS

## Diagram

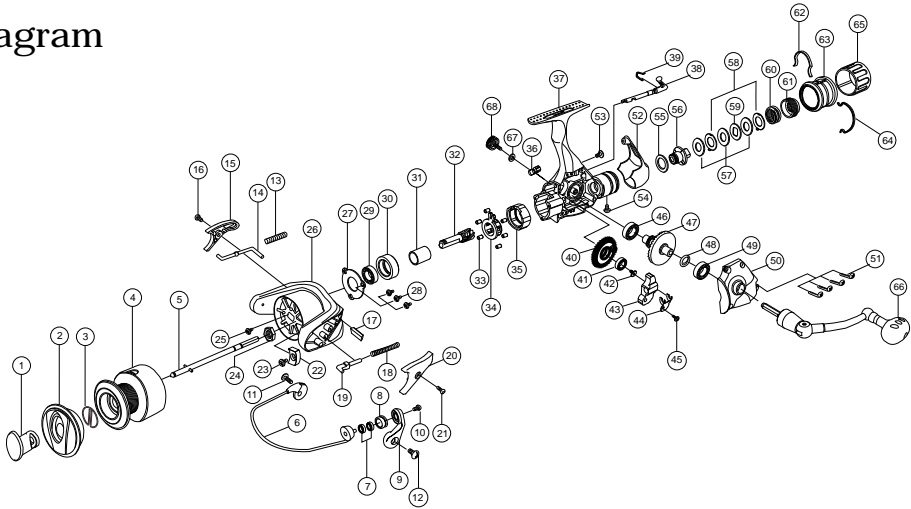

### PARTS LIST

1. Button	24. Rotor Nut	47. Drive Gear
2. Spool Cap	25. Rotor Nut s/c	48. Drive Gear Adjust Washer
3. Button s/p	26. Rotor	49. Ball Bearing 8 x 14 x 4
4. Spool Assy	27. One Way Ball Bearing Cover	50. Body Cover Assy
5. Main Shaft Assy	28. One Way Ball Bearing Cover s/c	51. Body Cover s/c
6. Bail Assy	29. Ball Bearing 8 x 14 x 4	52. Body Rear Cap
7. Ball Bearing 5 x 8 x 2.5	30. One Way Ball Bearing Holder	53. Body Rear Cap s/c (Top)
8. Line Roller	31. One Way Sleeve	54. Body Rear Cap s/c (Bottom)
9. Arm Lever	32. Pinion Gear	55. Drag "C" Washer
10. Bail s/c	33. One Way Pin Roller	56. Main Shaft Holder
11. Bail Holder s/c	34. One Way Retainer	57. Drag "B" Washer
12. Arm Lever s/c	35. One Way Housing	58. Drag "A" Washer
13. Kick Lever s/p	36. One Way Cam	59. Drag "D" Washer
14. Kick Lever	37. Body	60. Drag Coil s/p
15. Kick Lever Cover	38. Stopper Lever	61. Rear Drag Slider
16. Kick Lever Cover s/c	39. Stopper Lever s/p	62. Rear Drag Slider Retainer
17. Side Balance	40. Oscillation Gear	63. Rear Drag Knob
18. Bail s/p	41. Ball Bearing 5.5 x 10 x 2.5	64. Rear Drag Knob Retainer
19. Bail s/p holder	42. Oscillation Gear s/c	65. Rear Drag Knob Cover
20. Bail s/p cover	43. Oscillation Slider	66. Handle Assy
21. Bail s/p cover s/c	44. Oscillation Slider Stopper	67. Dust Cover Washer
22. Center Balance	45. Oscillation Slider stopper s/c	68. Dust Cover
23. Balance s/c	46. Ball Bearing 8 x 14 x 4	