



PART LIST

- | | | | | |
|---------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------|
| 1. Button | 16. Spool Ass'y | 31. Yoke Spring | 46. Leaf Spring | 61. Crank Shaft Retainer |
| 2. Button Spring | 17. Line Guide Screw | 32. Clutch Spring | 47. Handle Ass'y | 62. Crank Shaft "E" Clip |
| 3. Side Plate | 18. Ball Bearing (5x11x4) | 33. Worm Shaft Bush | 48. Handle Nut | 63. Ball Bearing (5x9x3) |
| 4. Side Plate Screw | 19. Spool Shaft "O" Ring | 34. Worm Shaft Gear | 49. Handle Nut Cap | 64. Line Guide Carrier |
| 5. Button Side Cover | 20. Spool Cover Retainer | 35. Worm Shaft "E" Clip | 50. Handle Nut Cap Screw | 65. Pawl |
| 6. Spool Cover | 21. Spool Cover Retainer Screw | 36. Pinion Gear | 51. One Way Bearing | 66. Pawl Cap |
| 7. Locker Spring | 22. Side Cover Screw | 37. Handle Side Cover | 52. One Way Sleeve | 67. Hood |
| 8. Locker | 23. Frame | 38. Tension Knob "O" Ring | 53. "D" Washer | 68. Carrier Guide |
| 9. Spool Cover Washer | 24. Thumb Bar | 39. Tension Knob BCL Washer | 54. "B" Washer | 69. Worm Shaft |
| 10. Ball Bearing (5x11x4) | 25. Thumb Bar Lever | 40. Tension Knob Rubber Washer | 55. Drive Gear | 70. Worm Shaft Washer |
| 11. Hexagon Ring | 26. Thumb Bar Screw | 41. Tension Knob | 56. Ratchet Washer | 71. Worm Shaft "E" Clip |
| 12. Spool Cover Screw | 27. Release | 42. Spring Washer | 57. Ratchet | |
| 13. Brake Ring | 28. Release Spring | 43. Ball Bearing (8x14x4) | 58. Crank Shaft | |
| 14. Shoe Guide | 29. Clutch | 44. Adjust Ring | 59. Crank Shaft Gear | |
| 15. Brake Shoe | 30. Pinion Yoke | 45. Star Drag | 60. Crank Shaft Retainer Screw | |