



## PART LIST

- |                           |                                |                                |                                |                          |
|---------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------|
| 1. Button                 | 16. Spool Ass'y                | 31. Yoke Spring                | 46. Leaf Spring                | 61. Crank Shaft Retainer |
| 2. Button Spring          | 17. Line Guide Screw           | 32. Clutch Spring              | 47. Handle Ass'y               | 62. Crank Shaft "E" Clip |
| 3. Side Plate             | 18. Ball Bearing (5x11x4)      | 33. Worm Shaft Bush            | 48. Handle Nut                 | 63. Ball Bearing (5x9x3) |
| 4. Side Plate Screw       | 19. Spool Shaft "O" Ring       | 34. Worm Shaft Gear            | 49. Handle Nut Cap             | 64. Line Guide Carrier   |
| 5. Button Side Cover      | 20. Spool Cover Retainer       | 35. Worm Shaft "E" Clip        | 50. Handle Nut Cap Screw       | 65. Pawl                 |
| 6. Spool Cover            | 21. Spool Cover Retainer Screw | 36. Pinion Gear                | 51. One Way Bearing            | 66. Pawl Cap             |
| 7. Locker Spring          | 22. Side Cover Screw           | 37. Handle Side Cover          | 52. One Way Sleeve             | 67. Hood                 |
| 8. Locker                 | 23. Frame                      | 38. Tension Knob "O" Ring      | 53. "D" Washer                 | 68. Carrier Guide        |
| 9. Spool Cover Washer     | 24. Thumb Bar                  | 39. Tension Knob BCL Washer    | 54. "B" Washer                 | 69. Worm Shaft           |
| 10. Ball Bearing (5x11x4) | 25. Thumb Bar Lever            | 40. Tension Knob Rubber Washer | 55. Drive Gear                 | 70. Worm Shaft Washer    |
| 11. Hexagon Ring          | 26. Thumb Bar Screw            | 41. Tension Knob               | 56. Ratchet Washer             | 71. Worm Shaft "E" Clip  |
| 12. Spool Cover Screw     | 27. Release                    | 42. Spring Washer              | 57. Ratchet                    |                          |
| 13. Brake Ring            | 28. Release Spring             | 43. Ball Bearing (8x14x4)      | 58. Crank Shaft                |                          |
| 14. Shoe Guide            | 29. Clutch                     | 44. Adjust Ring                | 59. Crank Shaft Gear           |                          |
| 15. Brake Shoe            | 30. Pinion Yoke                | 45. Star Drag                  | 60. Crank Shaft Retainer Screw |                          |