



## PART LIST

1. Button	16. Ball Bearing (5x11x4)	31. Worm Shaft Bush	46. Leaf Spring	61. Crank Shaft Retainer
2. Button Spring	17. Spool Shaft "O" Ring	32. Worm Shaft Gear	47. Handle Ass'y	62. Crank Shaft "E" Clip
3. Button Side Cover	18. Spool Cover Retainer	33. Worm Shaft "E" Clip	48. Handle Nut	63. Ball Bearing (5x9x3)
4. Spool Cover	19. Spool Cover Retainer Screw	34. Pinion Gear	49. Handle Nut Cap	64. Line Guide Carrier
5. Locker Spring	20. Side Cover Screw	35. Handle Side Cover	50. Handle Nut Cap Screw	65. Pawl
6. Locker	21. Frame	36. Ball Bearing (3x7x3)	51. One Way Bearing	66. Pawl Cap
7. Spool Cover Washer	22. Thumb Bar	37. Tension Knob Hexagon Ring	52. One Way Sleeve	67. Hood
8. Ball Bearing (5x11x4)	23. Thumb Bar Lever	38. Tension Knob "O" Ring	53. "D" Washer	68. Carrier Guide
9. Hexagon Ring	24. Thumb Bar Screw	39. Tension Knob BCL Washer	54. "B" Washer	69. Worm Shaft
10. Spool Cover Screw	25. Release	40. Tension Knob Rubber Washer	55. Drive Gear	70. Worm Shaft Washer
11. Brake Ring	26. Release Spring	41. Tension Knob	56. Ratchet Washer	71. Worm Shaft "E" Clip
12. Shoe Guide	27. Clutch	42. Spring Washer	57. Ratchet	
13. Brake Shoe	28. Pinion Yoke	43. Ball Bearing (8x14x4)	58. Crank Shaft	
14. Spool Ass'y	29. Yoke Spring	44. Adjust Ring	59. Crank Shaft Gear	
15. Line Guide Screw	30. Clutch Spring	45. Star Drag	60. Crank Shaft Retainer Screw	