


TROY

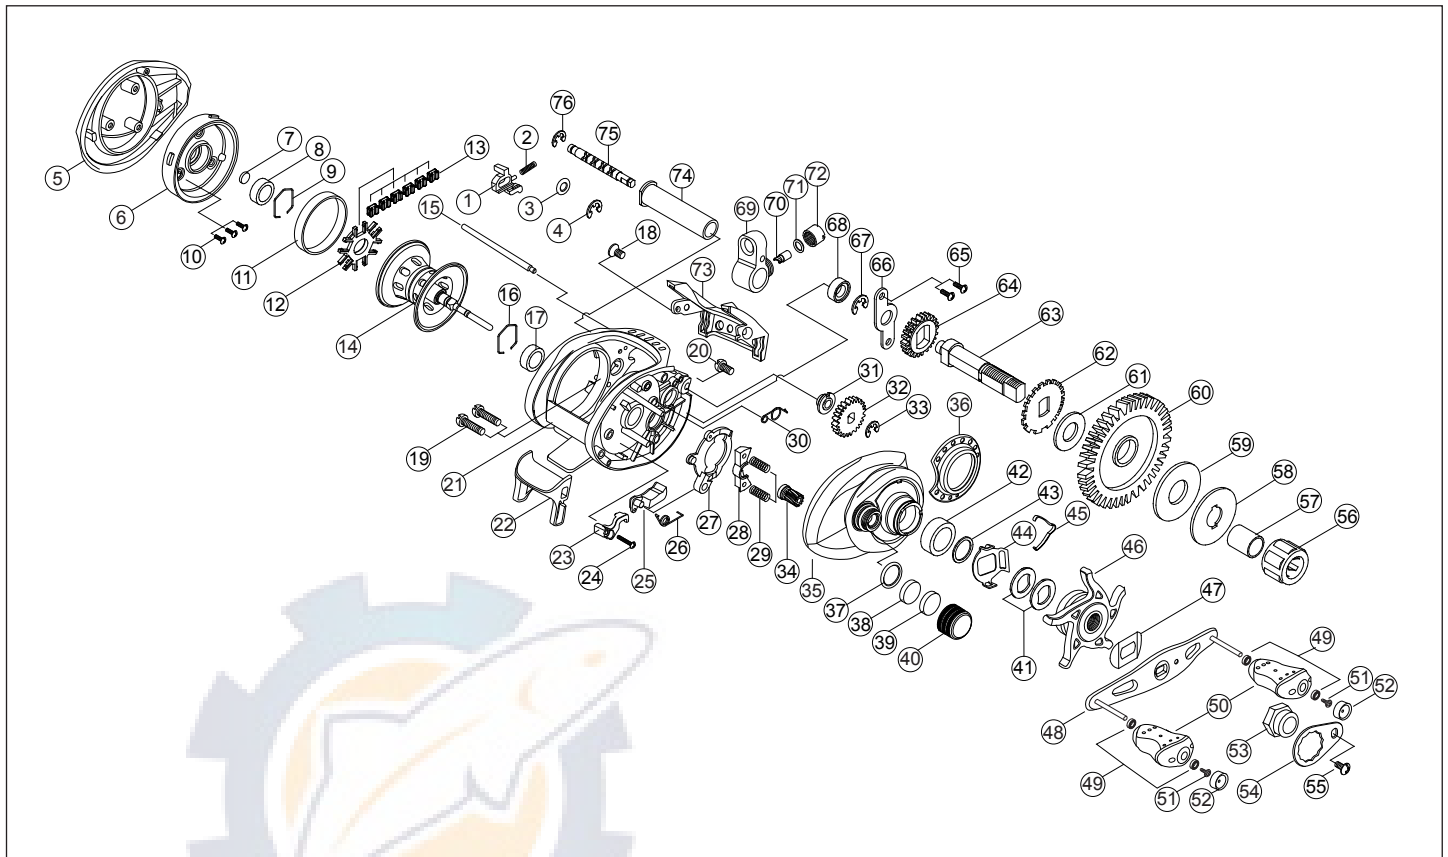

Part List

- | | | | |
|---------------------------|-----------------------------|---------------------------------|--------------------------------|
| 1. Locker | 20. Frame Screw | 39. Tension Knob Rubber Washer | 58. "D" Washer |
| 2. Locker Spring | 21. Frame | 40. Tension Knob | 59. "B" Washer |
| 3. Locker Washer | 22. Thumb Bar | 41. Spring Washer | 60. Drive Gear |
| 4. Locker "E" Clip | 23. Thumb Bar Lever | 42. Ball Bearing (8x14x4) | 61. Ratchet Washer |
| 5. Palm Cover | 24. Thumb Bar Screw | 43. Adjust Washer | 62. Ratchet |
| 6. Spool Cover | 25. Release | 44. Clicker Holder | 63. Crank Shaft |
| 7. Spool Cover Washer | 26. Release Spring | 45. Clicker | 64. Crank Shaft Gear |
| 8. Ball Bearing (5x11x4) | 27. Yoke Cam | 46. Star Drag | 65. Crank Shaft Retainer Screw |
| 9. Hexagon Ring | 28. Pinion Yoke | 47. Leaf Spring | 66. Crank Shaft Retainer |
| 10. Spool Cover Screw | 29. Yoke Spring | 48. Handle Ass'y | 67. Crank Shaft "E" Clip |
| 11. Brake Ring | 30. Yoke Cam Spring | 49. Ball Bearing (4x7x2.5) | 68. Ball Bearing (5x9x3) |
| 12. Shoe Guide | 31. Worm Shaft Bush | 50. Handle Knob | 69. Line Guide Carrier |
| 13. Brake Shoe | 32. Worm Shaft Gear | 51. Handle Rivet Screw | 70. Pawl |
| 14. Spool Ass'y | 33. Worm Shaft "E" Clip | 52. Handle Knob Cap | 71. Pawl Washer |
| 15. Line Guide Bar | 34. Pinion Gear | 53. Handle Nut | 72. Pawl Cap |
| 16. Hexagon Ring | 35. Gear Cover | 54. Handle Nut Lock Plate | 73. Hood |
| 17. Ball Bearing (5x11x4) | 36. Decoration Cap | 55. Handle Nut Lock Plate Screw | 74. Carrier Guide |
| 18. Hood Screw | 37. Tension Knob "O" Ring | 56. One Way Bearing | 75. Worm Shaft |
| 19. Side Cover Screw | 38. Tension Knob BCL Washer | 57. One Way Sleeve | 76. Worm Shaft "E" Clip |