



PART LIST

- | | | | | |
|--------------------------|--------------------------------|--------------------------------|----------------------------|--------------------------------|
| 1. Button | 16. Ball Bearing (5x11x4) | 31. Worm Shaft Bush | 46. Ball Bearing (4x7x2.5) | 61. Crank Shaft Gear |
| 2. Button Spring | 17. Spool Shaft "O" Ring | 32. Worm Shaft Gear | 47. Handle Knob | 62. Crank Shaft Retainer Screw |
| 3. Button Side Cover | 18. Spool Cover Retainer | 33. Worm Shaft "E" Clip | 48. Handle s/c | 63. Crank Shaft Retainer |
| 4. Spool Cover | 19. Spool Cover Retainer Screw | 34. Pinion Gear | 49. Handle Knob Cap | 64. Crank Shaft "E" Clip |
| 5. Locker Spring | 20. Side Cover Screw | 35. Handle Side Cover | 50. Handle Nut | 65. Ball Bearing (5x9x3) |
| 6. Locker | 21. Frame | 36. Tension Knob "O" Ring | 51. Handle Nut Cap | 66. Line Guide Carrier |
| 7. Spool Cover Washer | 22. Thumb Bar | 37. Tension Knob BCL Washer | 52. Handle Nut Cap Screw | 67. Pawl |
| 8. Ball Bearing (5x11x4) | 23. Thumb Bar Lever | 38. Tension Knob Rubber Washer | 53. One Way Bearing | 68. Pawl Cap |
| 9. Hexagon Ring | 24. Thumb Bar Screw | 39. Tension Knob | 54. One Way Sleeve | 69. Hood |
| 10. Spool Cover Screw | 25. Release | 40. Spring Washer | 55. "D" Washer | 70. Carrier Guide |
| 11. Brake Ring | 26. Release Spring | 41. Ball Bearing (8x14x4) | 56. "B" Washer | 71. Worm Shaft |
| 12. Shoe Guide | 27. Clutch | 42. Adjust Ring | 57. Drive Gear | 72. Worm Shaft Washer |
| 13. Brake Shoe | 28. Pinion Yoke | 43. Star Drag | 58. Ratchet Washer | 73. Worm Shaft "E" Clip |
| 14. Spool Ass'y | 29. Yoke Spring | 44. Leaf Spring | 59. Ratchet | |
| 15. Line Guide Screw | 30. Clutch Spring | 45. Handle Ass'y | 60. Crank Shaft | |