


DIAGRAM

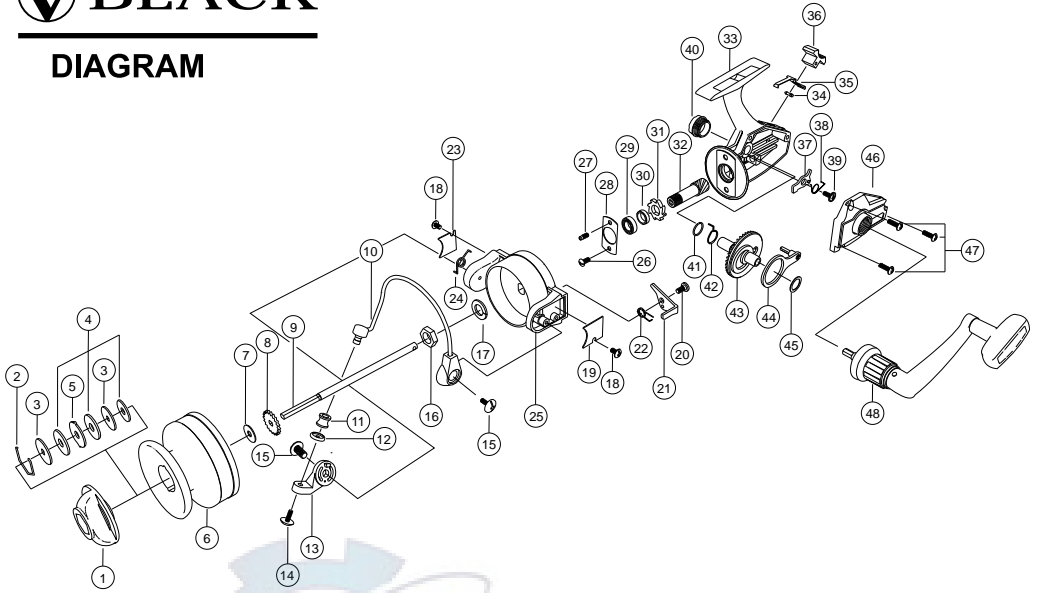

PART LIST

No.	Part List	No.	Part List
1.	Drag Knob Assy	25.	Rotor
2.	Spool Ring	26.	Ball Bearing Cover s/c
3.	Spool "D" w/s	27.	Kick Lever Pin
4.	Spool "B" w/s	28.	Bearing Plate
5.	Spool "A" w/s	29.	Ball Bearing 9 x 17 x 5
6.	Spool Assy	30.	Pinion Collar
7.	Spool Adj. w/s	31.	Ratchet Gear
8.	Click Gear	32.	Pinion Gear
9.	Main Shaft	33.	Body Assy
10.	Bail Assy	34.	Anti Reverse Lever Pin
11.	Line Roller	35.	Anti Reverse Lever Plate s/p
12.	Bail Collar	36.	Anti Reverse Lever
13.	Arm Lever	37.	Anti Reverse Claw
14.	Bail s/c	38.	Anti Reverse Claw s/p
15.	Arm Lever s/c	39.	Anti Reverse Claw s/c
16.	Rotor Nut	40.	Handle Screw Cap
17.	Rotor Nut Lock Spring w/s	41.	Drive Gear "C" Ring
18.	Rotor Cover s/c	42.	Sliding Spring
19.	Kick Lever Cover	43.	Drive Gear Assy
20.	Kick Lever s/c	44.	O/S Slider Assy
21.	Kick Lever	45.	Drive Gear adj. w/s
22.	Kick Lever s/p	46.	Body Cover Assy
23.	Bail Spring Cover	47.	Body Cover s/c
24.	Bail s/p	48.	Handle Assy